


INSTALLATION

➤ Instructions

Thule Awning Adapter Ford Tourneo / Transit Custom Thule 4200

301992, 301970








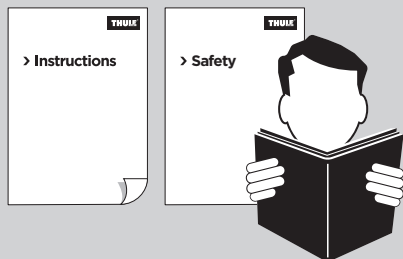

DE	Adapter - Bedienungsanleitung
NL	Adapter - Gebruikershandleiding
FR	Adaptateur - Instructions d'utilisation
IT	Adattatore - Istruzioni per l'uso
ES	Adaptador - Instrucciones de uso
SV	Adapter - Användarmanual
FI	Adapteri - Käyttöohje
DA	Adapter - Brugervejledning
NO	Adapter - Brukerinstruksjoner
PL	Adapter - Instrukcja dla użytkownika


1	WARNINGS & INFO	4
	Warnungen & Info / waarschuwingen & info / avertissements et informations / avvertimenti e informazioni / advertencias e información / varningar & info / varoitukset ja tiedot / advarsler og info / advarsler og info / ostrzeżenia i informacje	
2	FITGUIDE	5
	Anwendungstabelle / fitting tabel / table d'application / guida di adattamento / guía de aplicación / applikationstabel / sovellus taulukko / applikationstabel / applikasjonstabel / tabela aplikacji	
3	CONTENT	6
	Inhalt / inhoud / contenu / contenuto / contenido / innehåll / sisältö / indhold / innhold / zawartość	
4	TOOLS	6
	Werkzeuge / gereedschappen / outils / strumenti / herramientas / verktøy / työkalut / værktøjer / verktøy / narzędzia	
5	INSTALLATION	7
	Installation / installatie / installation / installazione / instalación / installation / asennus / installation / installasjon / instalacja / indstillinger / innstillinger / ustawienia	

1 WARNINGS & INFO

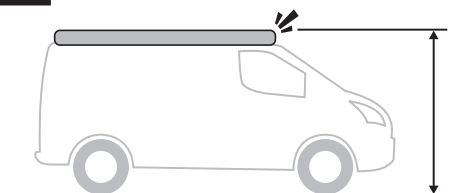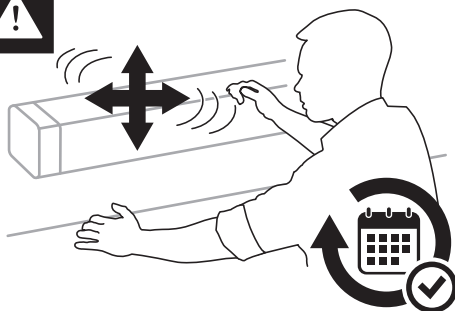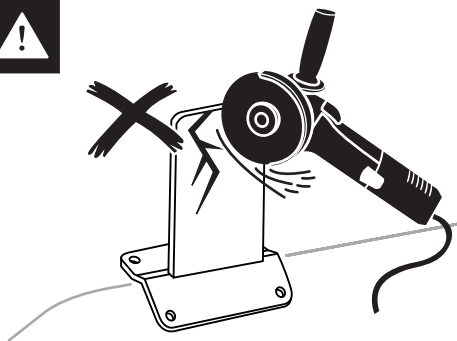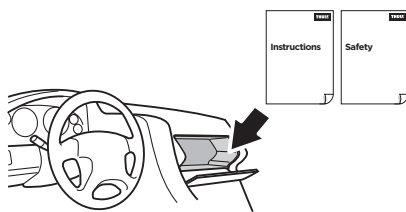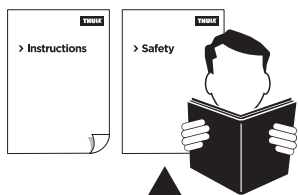

2 FITGUIDE

BRAND	MODEL	YEAR	ADAPTER	AWNING
Ford	Transit Custom L1H1 LHD	2013-...	301992	T 4200 - 2.60 m
	Tourneo Custom L1H1 LHD			
	Transit Custom L1H1 RHD		301970	
	Tourneo Custom L1H1 RHD			

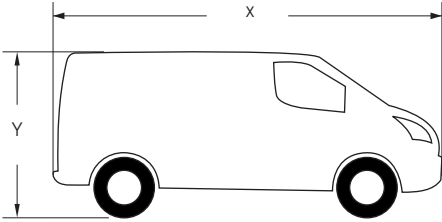

X		Y		
L1	4970 mm	H1	2000 mm	✓
L2	5340 mm	H2	2360 mm	✗

3 CONTENT



x6
M6 x 18 mm
DIN 9021
A2



x8
M6 x 9 x 14 mm
Blind rivet nut



x8
M6
SCHNORR
ZN



x4
M6 x 16
DIN 603
A2



x6
M6
DIN 985
A2



x2
M6 x 16 mm
DIN 965 - TX30
A2



x8
M6 x 20
DIN 7985 - TX30
A2




x6
M6
Nut cap




x4
4.2 x 16
DIN 7504N - TX20
A2

x2




LHD

x1

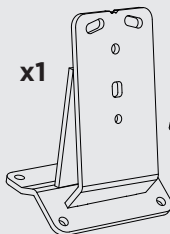


x1

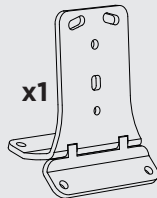


RHD


x1

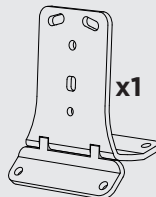


x1

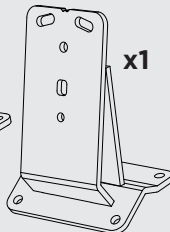

4 TOOLS



Ø 3 mm
Ø 3.5 mm
Ø 9 mm



TX20




TX30



N° 10

5 INSTALLATION

1




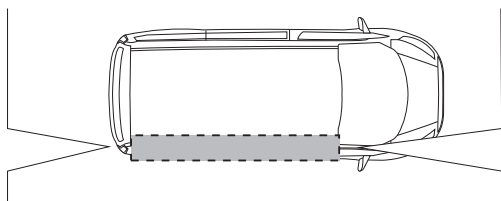



2




L1

+/- 2.17 m

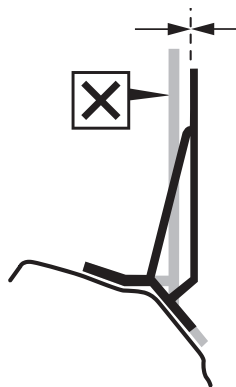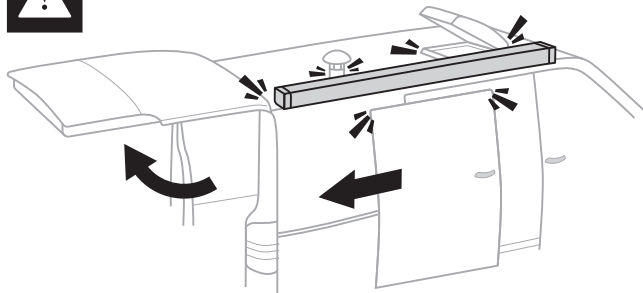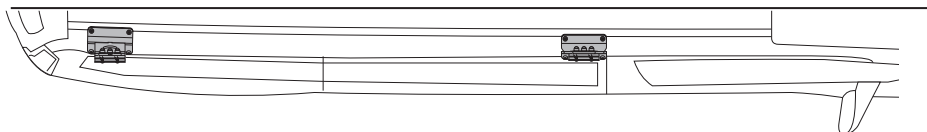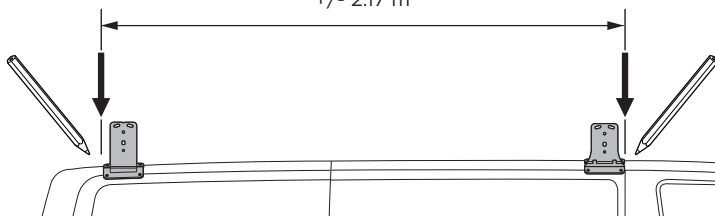


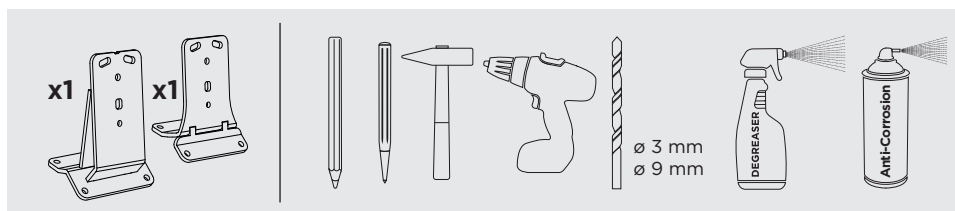


A

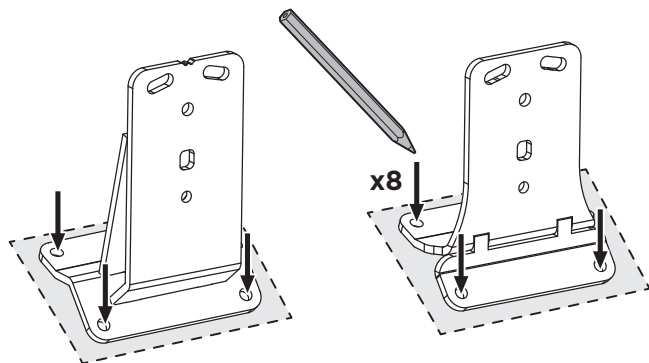


B

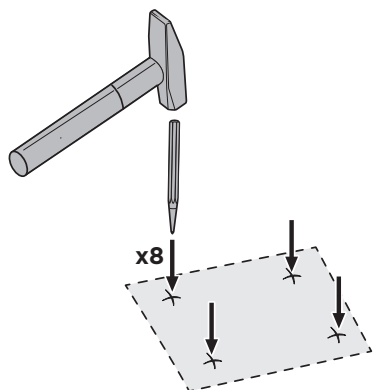


C

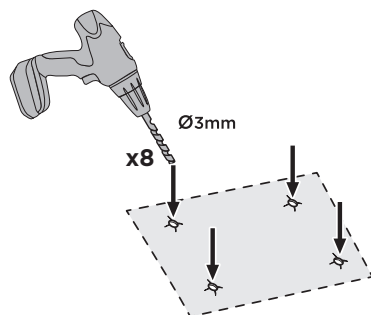

D


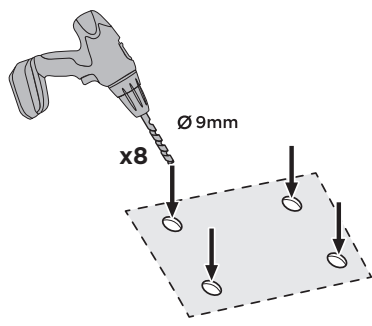



E

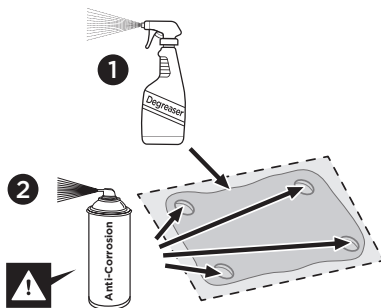




x8

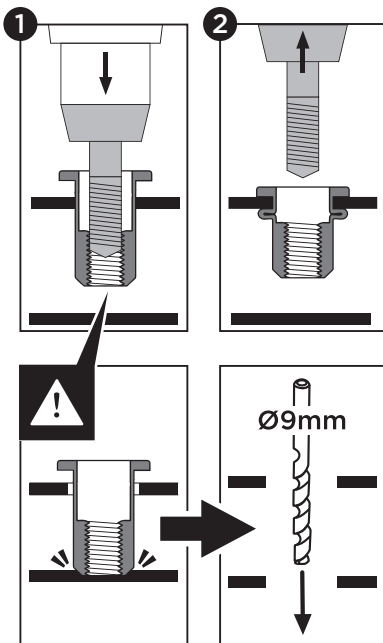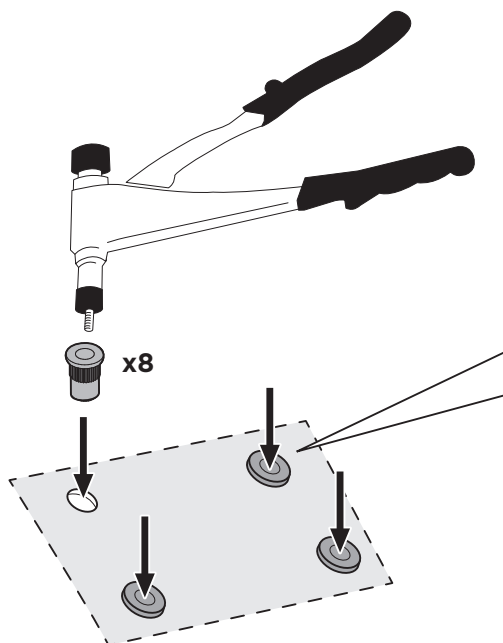


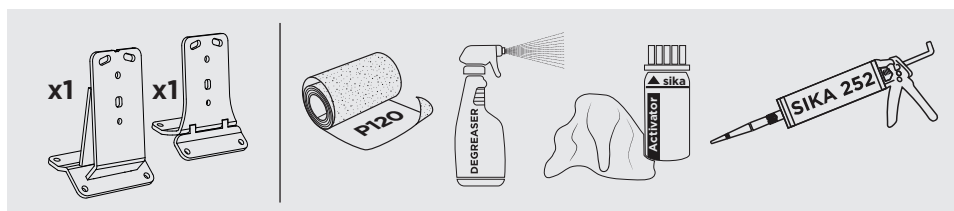


A

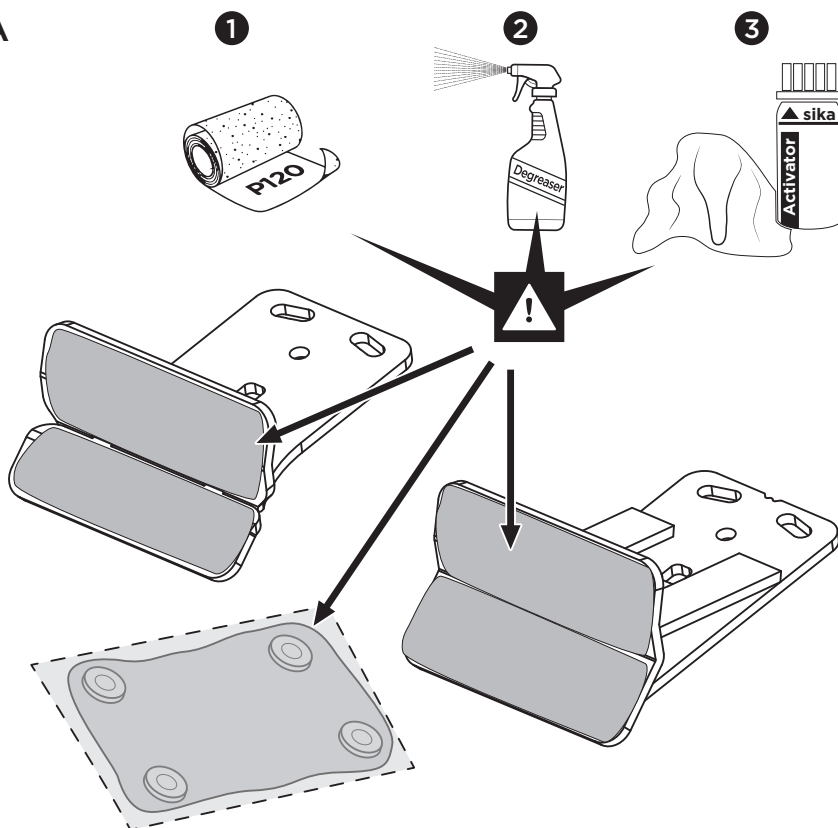


B

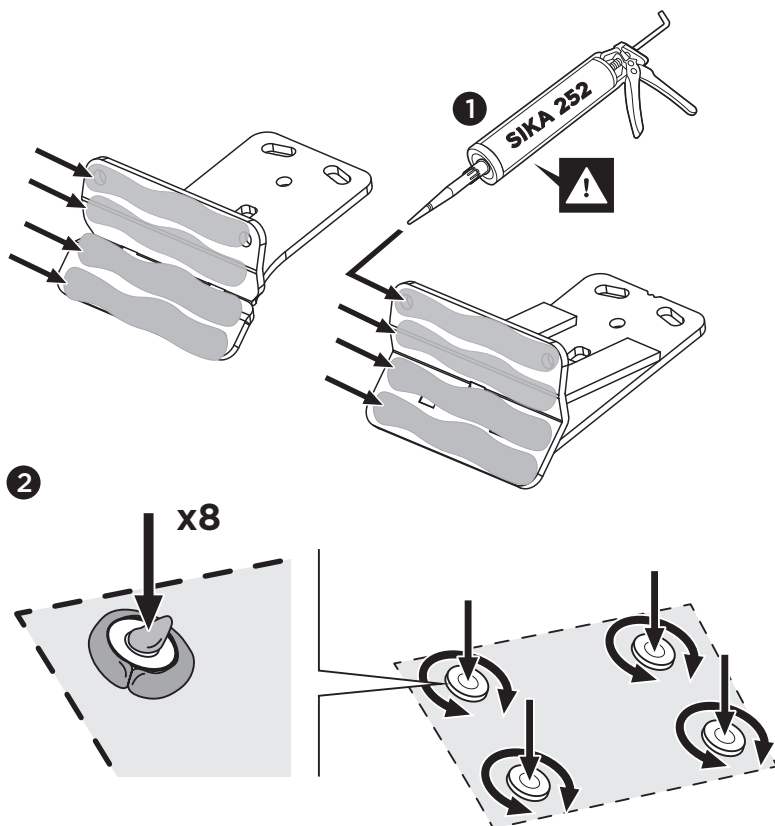


6

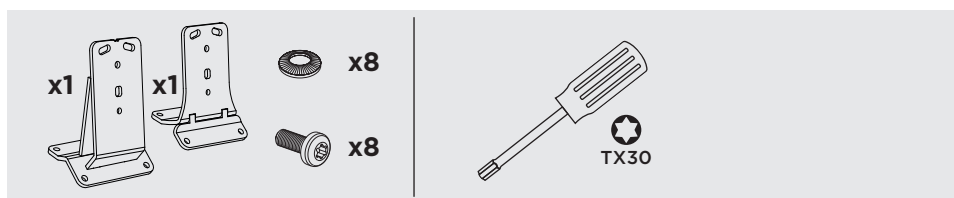


LHD

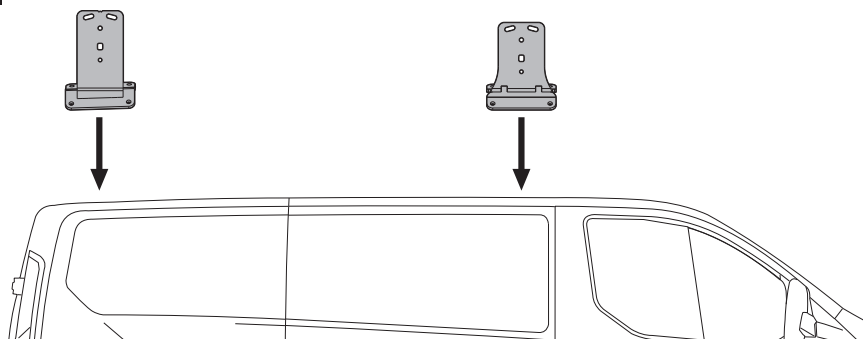


A

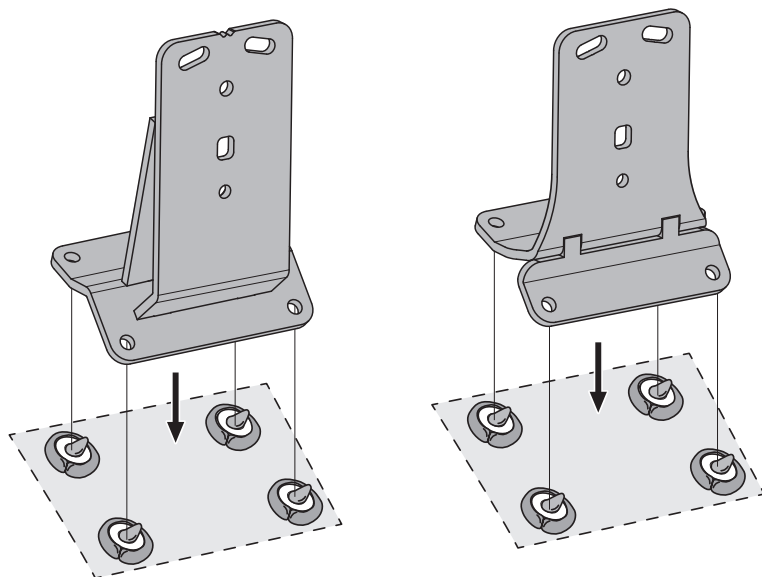

B

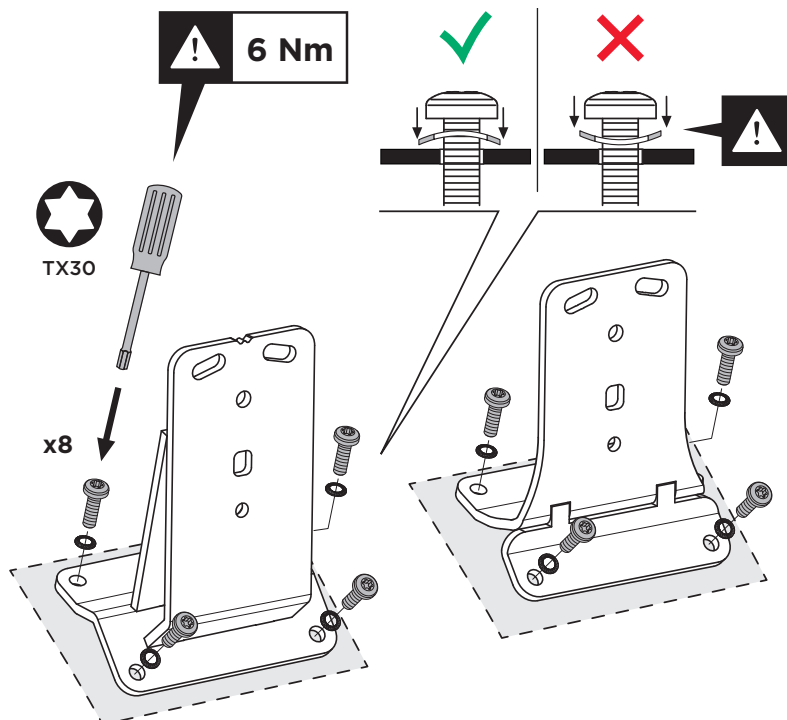

7

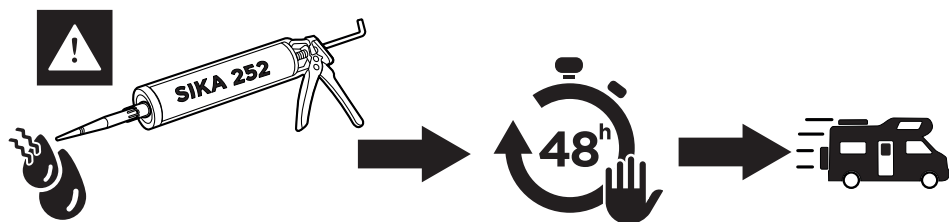

8



x2



x3



x3





x4



N° 10




TX30

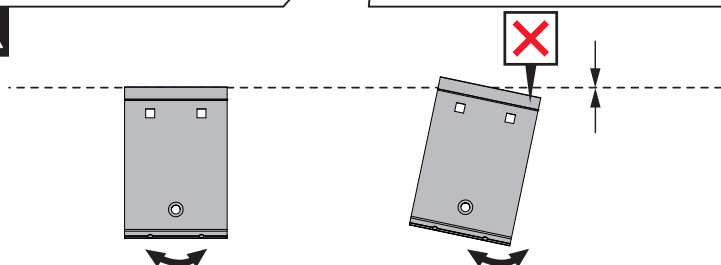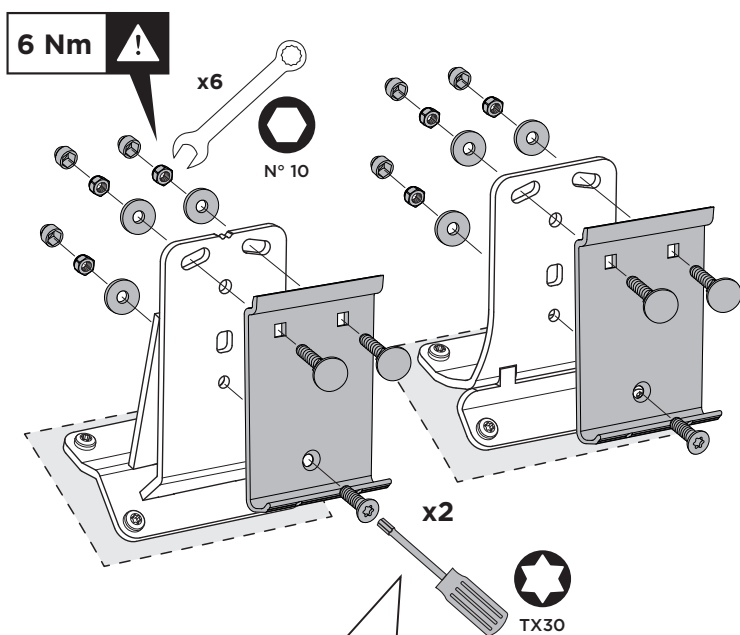

9

T 4200 - 2.60 m

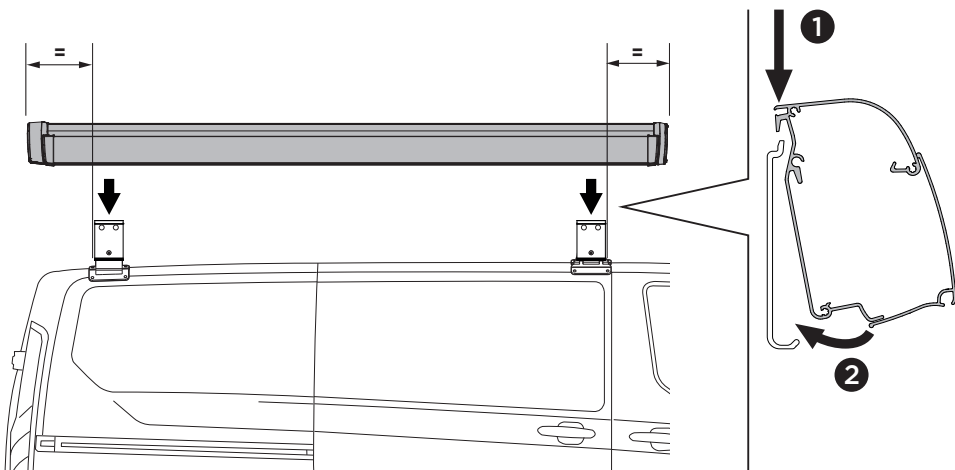


10




x4




Ø 3.5 mm



TX30

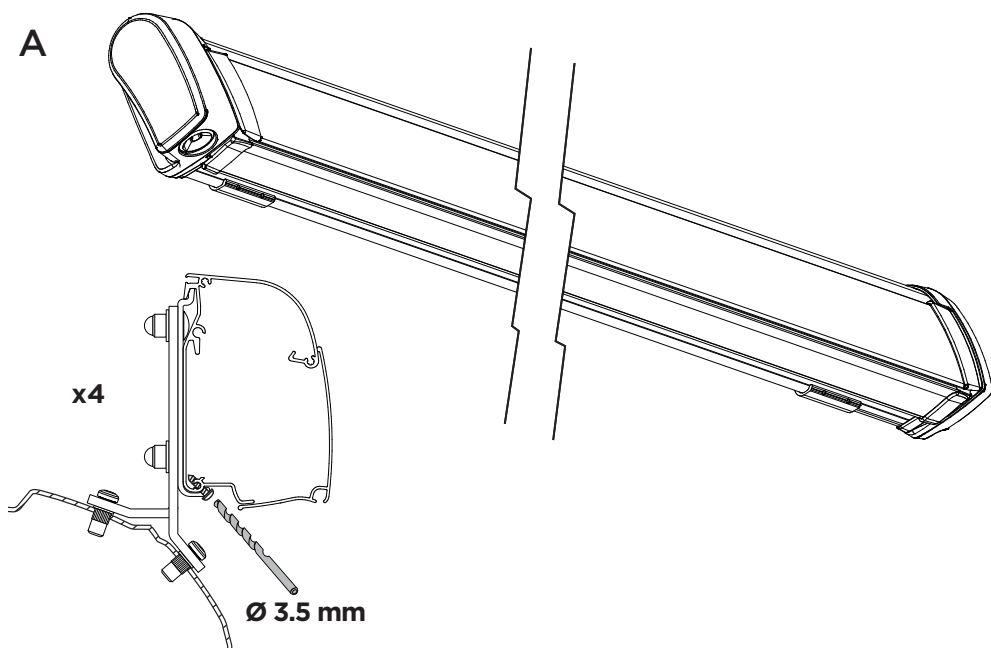

B

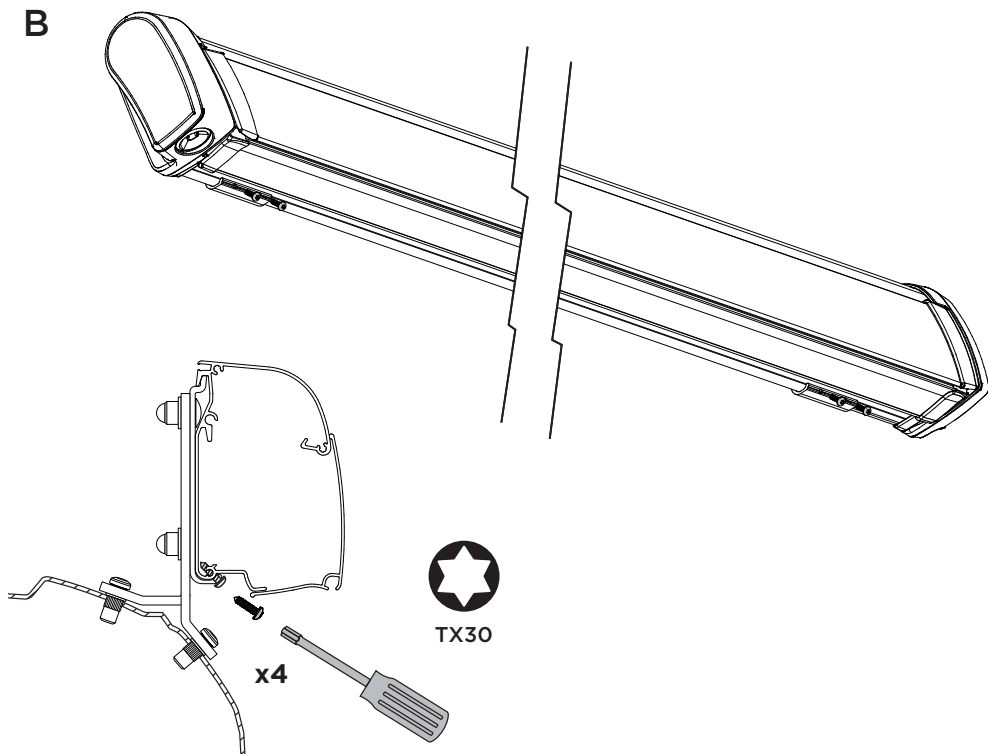



Thule NV, Kortrijkstraat 343 - BE 8930 Menen, BELGIUM

» PART OF THULE GROUP



infoRV@thule.com

© Thule Group 2020. All rights reserved.



www.thule.com

AD999-01