

1



Kit 145478

NIO ES8 (MK.III), 5-dr SUV, 26-


THULE

SWEDEN

1
KIT

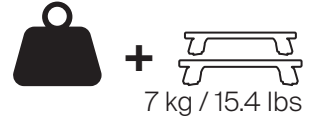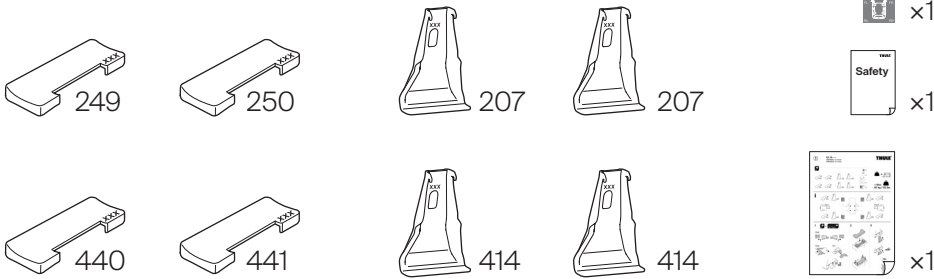


i

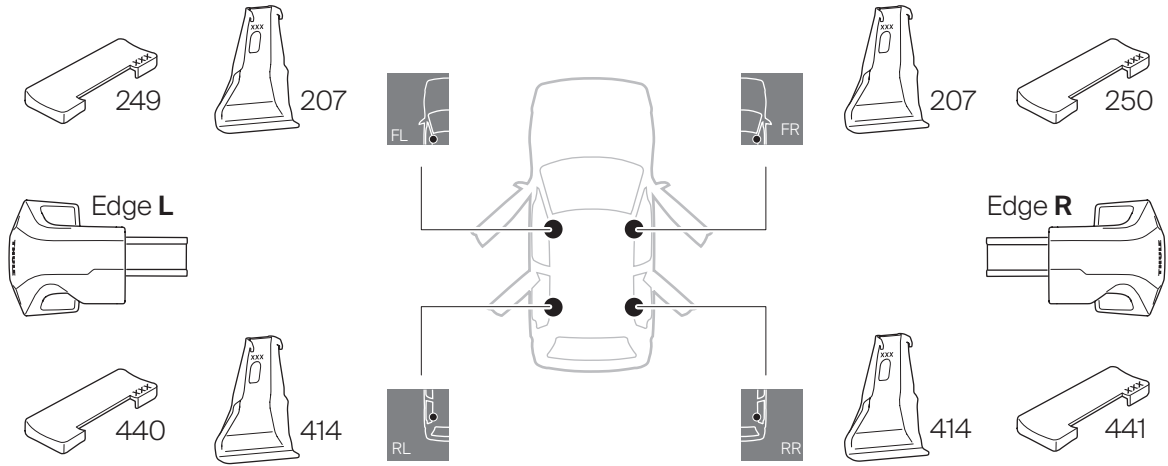

1 KIT + FOOT PACK


Edge

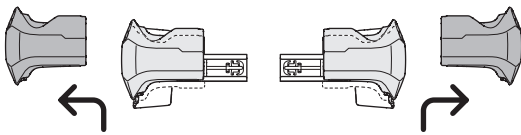


Edge




Evo

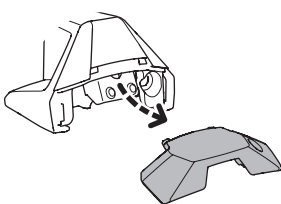


2

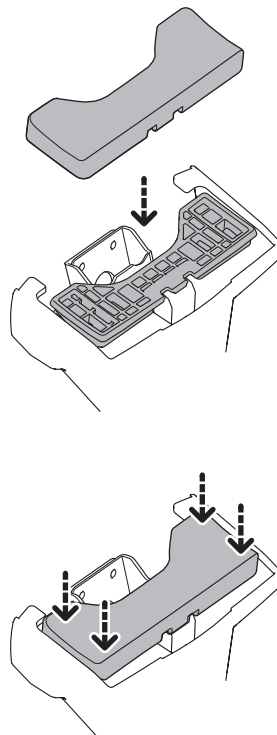

3

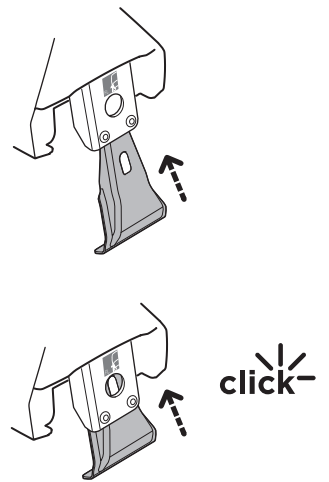


2 THULE
Instructions
Thule Foot Pack

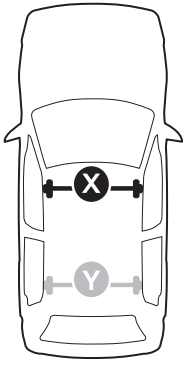


Thule WingBar Evo	Thule WingBar Edge	Thule SquareBar Evo	Evo X (scale)	Edge X (scale)
NIO ES8 (MK.III), 5-dr SUV, 26-			53	I

Thule ProBar Evo	Thule SlideBar Evo	X (mm/inch)
NIO ES8 (MK.III), 5-dr SUV, 26-		1181 mm / 46 1/2"

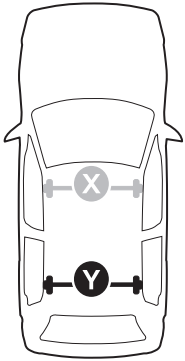

Thule WingBar Evo	Thule WingBar Edge	Thule SquareBar Evo	Evo Y (scale)	Edge Y (scale)
NIO ES8 (MK.III), 5-dr SUV, 26-			475	B

Thule ProBar Evo	Thule SlideBar Evo	Y (mm/inch)
NIO ES8 (MK.III), 5-dr SUV, 26-		1126 mm / 44 3/8"

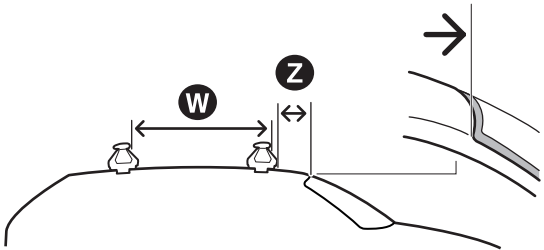

	W (mm/inch)	Z (mm/inch)
NIO ES8 (MK.III), 5-dr SUV, 26-	730 mm / 28 3/4"	435 mm / 17 1/8"

