



INSTALLATION

➤ Instructions

Adapter PSA Mini Van Thule 4200

301990, 301991

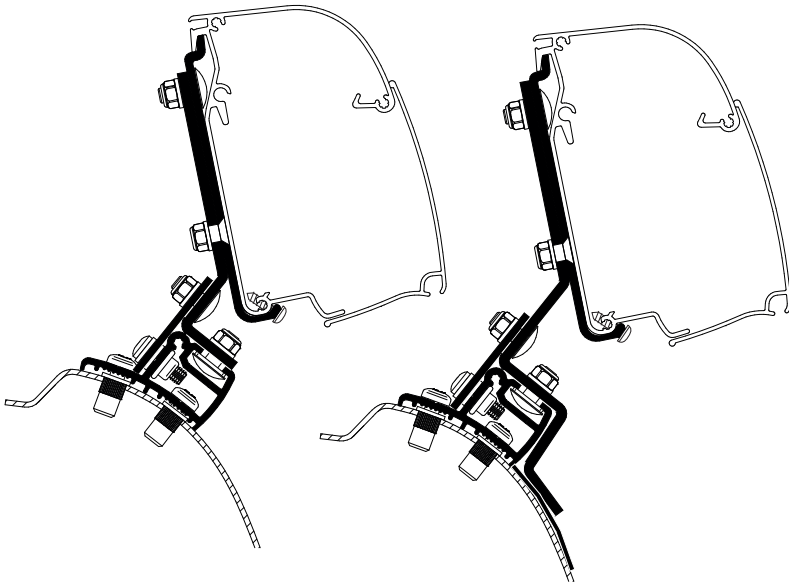

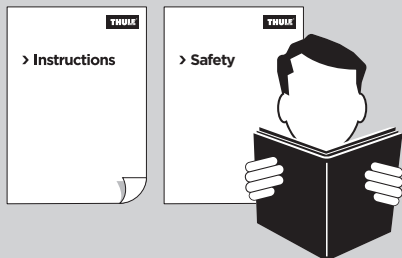

DE Adapter -
Anleitung
NL Adapter -
Instructies
FR Adaptateur -
Instructions
IT Adattatore -
Istruzioni
ES Adaptador -
Instrucciones
SV Adapter -
Instruktioner
FI Adapteri -
Ohjeet
DA Adapter -
Instruktioner
NO Adapter -
Instruksjoner

PL Adapter -
Instrukcje
PT Adaptador -
Instruções
CS Adaptér -
Návod
SL Adapter -
Navodila
TR Adaptör -
Talimatlar
ZH 适配器 -
说明
JA アダプター -
取扱説明書
KO 어댑터 -
지침

1 WARNINGS & INFO

4

Warnungen & Infos / Waarschuwingen & info / Avertissements & informations / Avvertenze & informazioni / Advertencias & información / Varningar & information / Varoituksia & tietoja / Advarsler & info / Advarsler & information / Ostrzeżenia & informacje / Avisos e informações / Varování a informace / Opozorila in informacije / Uyarılar ve Bilgiler / 警告和信息 / 警告と情報 / 경고 및 정보

2 FITGUIDE

5

Kaufhilfe / Koopgids / Guide de sélection / Guida alla scelta / Guía de ajuste / Storleksguide / Valintaopas / Tilpasningsguide / Tilpasningsveiledning / Przewodnik Fit Guide / Guia de compatibilidade / Průvodce velikostmi / Fitguide / Takma Kilavuzu / 选配指南 / フィッティングガイド / 장착 가이드

3 CONTENT

6

Inhalt / Inhoudsopgave / Sommaire / Contenuto / Contenido / Innehåll / Sisälllys / Indhold / Innhold / Treść / Índice / Obsah / Kazalo / İçerik / 目录 / 目次 / 목차

4 TOOLS

7






Werkzeuge / Gereedschappen / Outils / Strumenti / Herramientas / Verktøy / Työkalut / Værktøj / Verktøy / Narzędzia / Ferramentas / Nářadí / Orodja / Aletler / 工具 / ツール / 도구

5 INSTALLATION

8

Montage / Installatie / Installation / Installazione / Instalación / Montering / Asennus / Montering / Montering / Montaż / Instalação / Montáž / Namestitev / Montaj / 安装 / 取り付け / 설치



1 WARNINGS & INFO

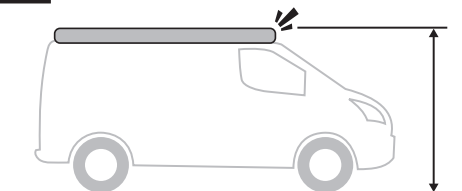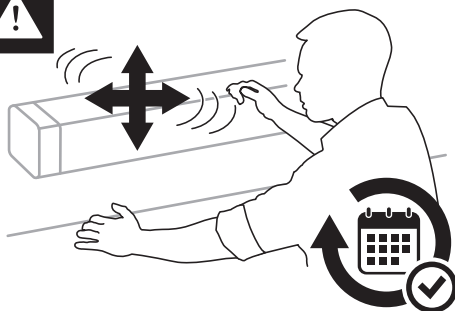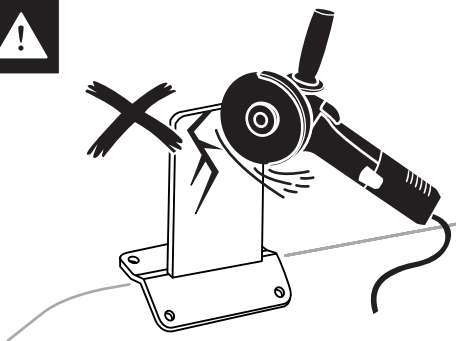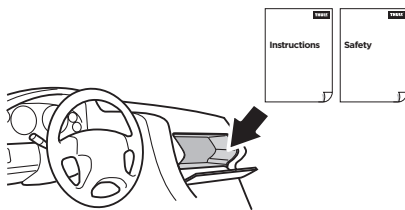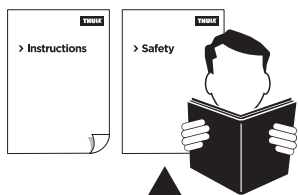


2 FITGUIDE

BRAND	MODEL	YEAR	ADAPTER	AWNING
Citroën	SpaceTourer L2H1 LHD	2016 - ...	301990	T4200 - 2.60m
Citroën	SpaceTourer L2H1 RHD		301991	
Citroën	Jumpy L2H1 LHD		301990	
Citroën	Jumpy L2H1 RHD		301991	
Peugeot	Traveller L2H1 LHD		301990	
Peugeot	Traveller L2H1 RHD		301991	
Peugeot	Expert L2H1 LHD		301990	
Peugeot	Expert L2H1 RHD		301991	
Toyota	ProAce L2H1 LHD		301990	
Toyota	ProAce L2H1 RHD		301991	
Toyota	ProAce Verso L2H1 LHD		301990	
Toyota	ProAce Verso L2H1 RHD		301991	
Opel	Vivaro C L2H1 LHD	2019 - ...	301990	
Opel	Zafira Life L2H1 LHD			
Vauxhall	Vivaro C L2H1 RHD		301991	
Vauxhall	Zafira Life L2H1 RHD			

3 CONTENT

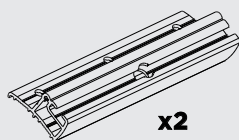


x2

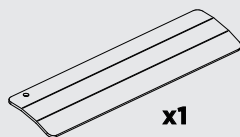

x1


LHD (301990)

RHD (301991)

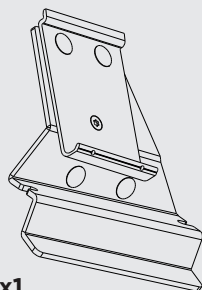


x1

LHD - Back

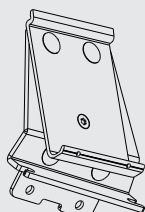


x1

LHD - Front

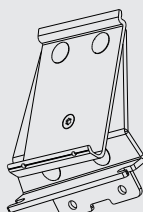


x1

RHD - Front

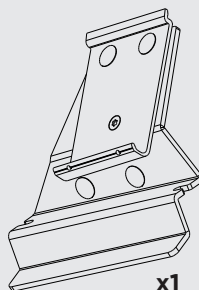

x1

RHD - Back

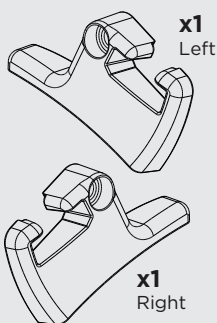

x1

Left

x1

Right



x4



x14



x8



x4

M6
DIN 985




x4

M6 x 16 mm
DIN 603




x4

M6 x 20 mm
ISO 7380



x4

4,2 x 16 mm
DIN 7981 - TX20



x4

4,2 x 16 mm
DIN 7504 - TX20



x8

M6 x 16 mm
DIN 7985 - TX30



x4

M6
DIN 127B




x4


M6
DIN 125

LHD (301990)

Left hand drive
(EU)

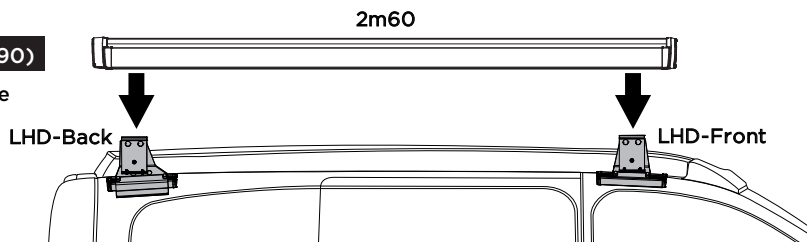**RHD (301991)**

Right hand drive
(UK)

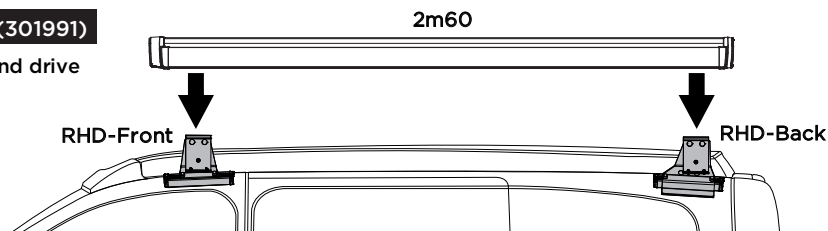


4 TOOLS



5 INSTALLATION



1

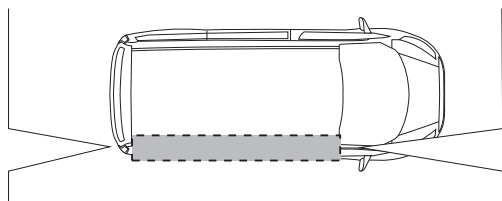




2





A

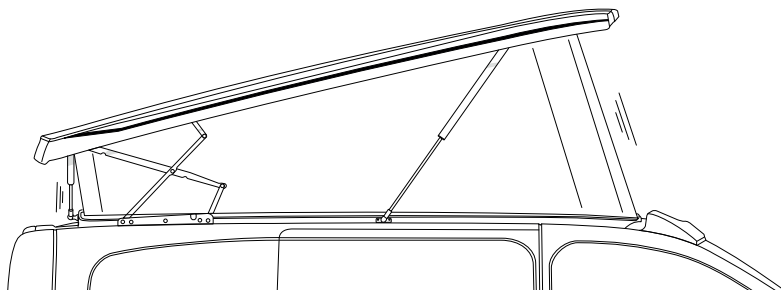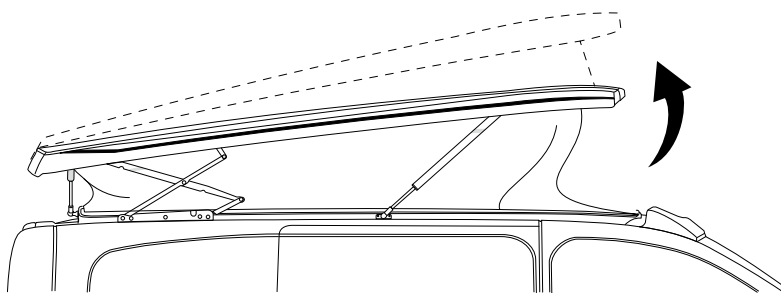


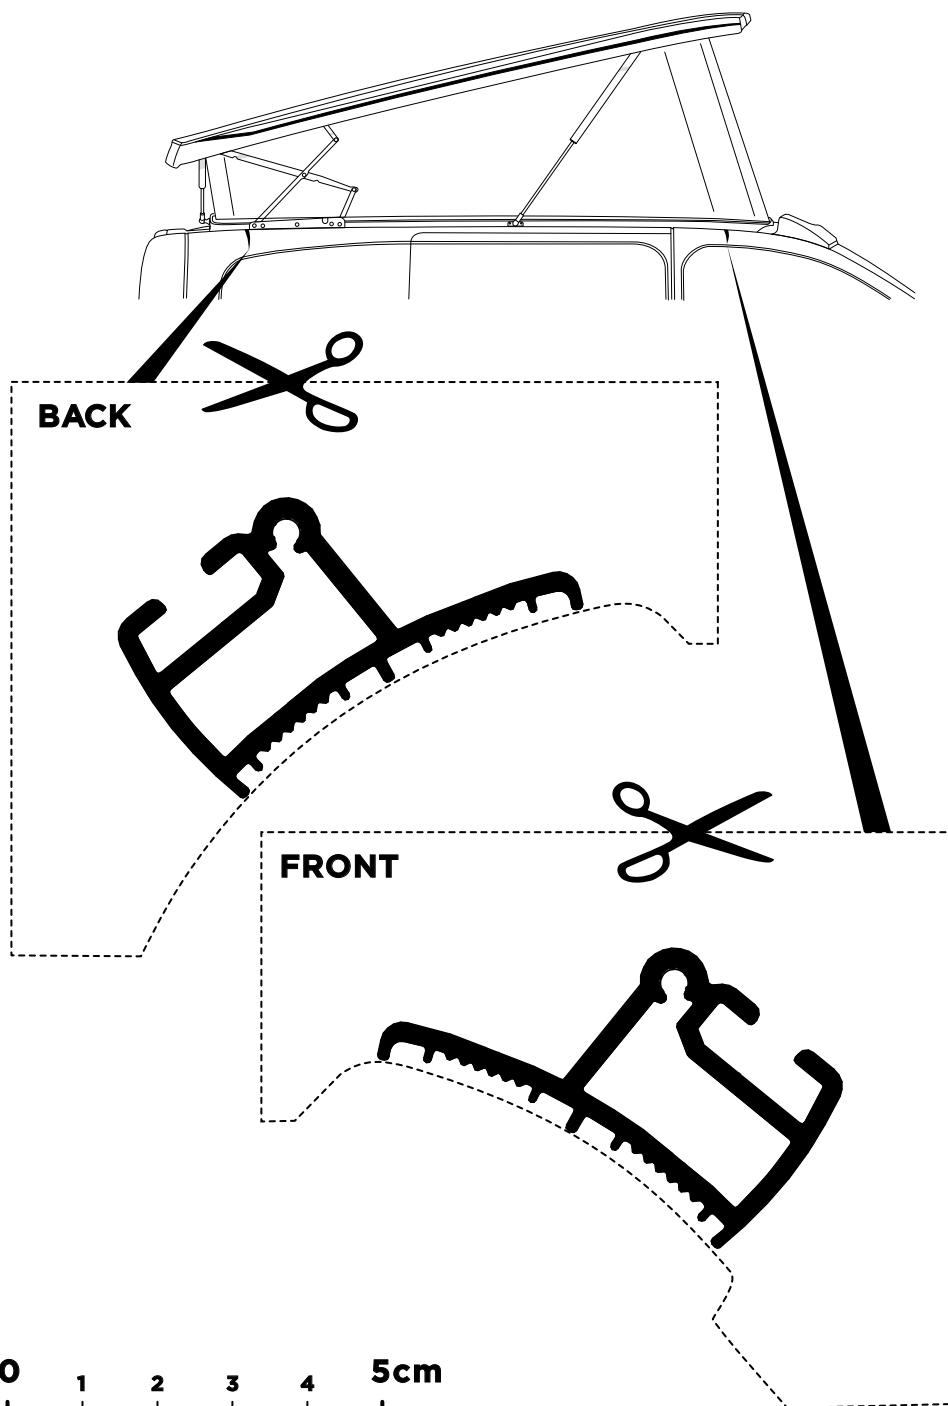


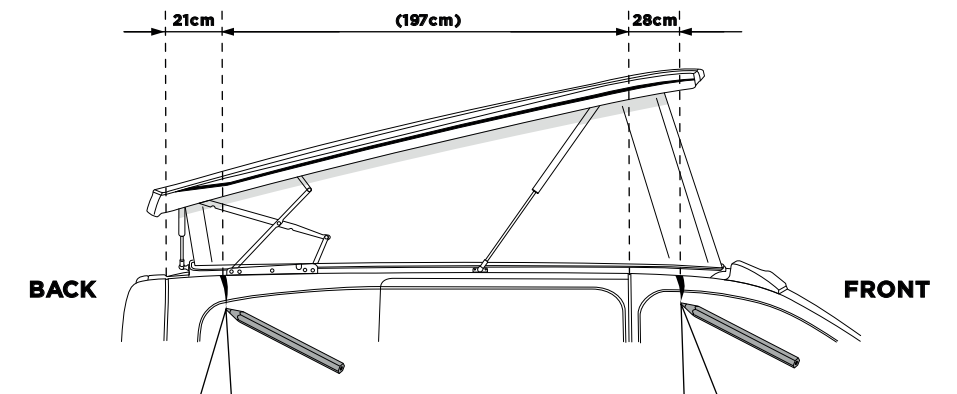







A

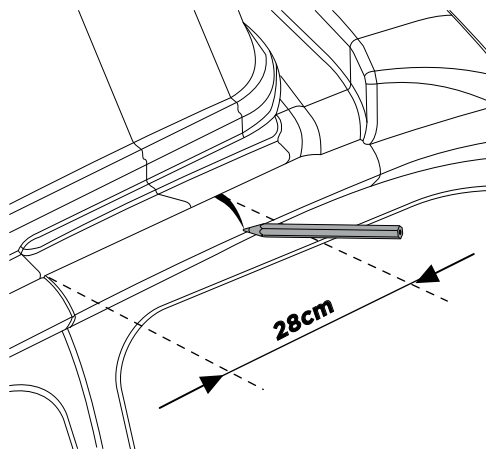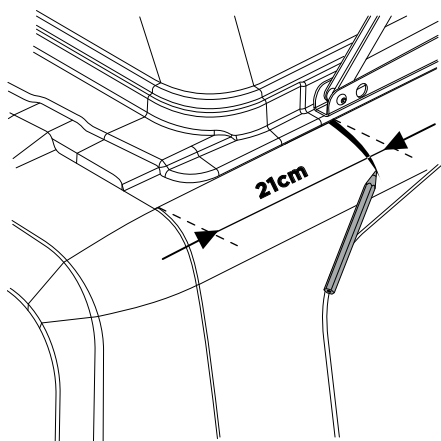


B

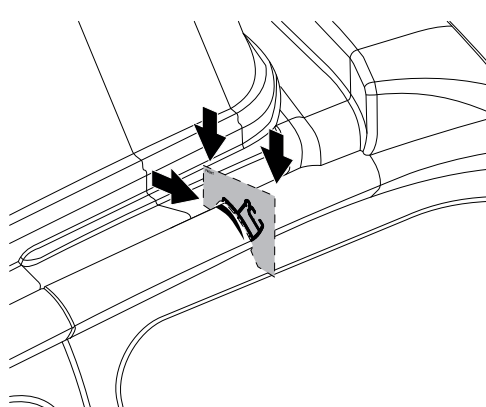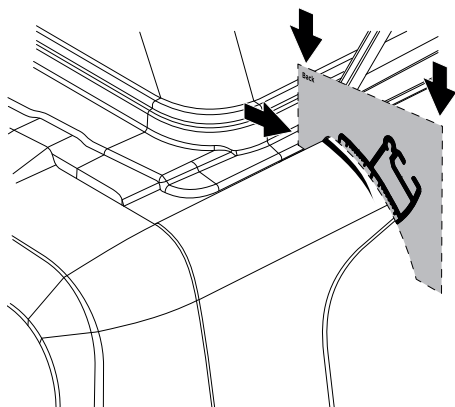


C

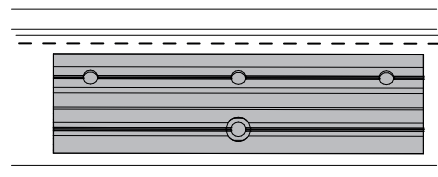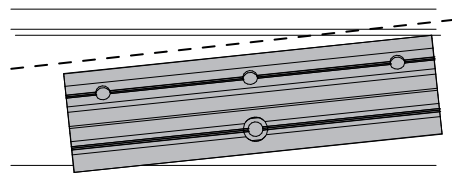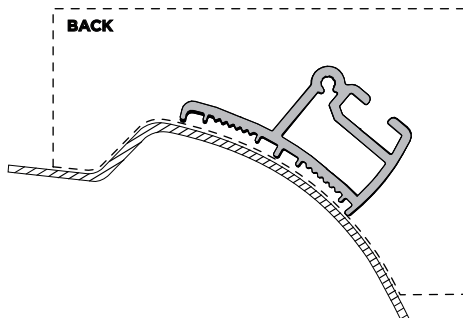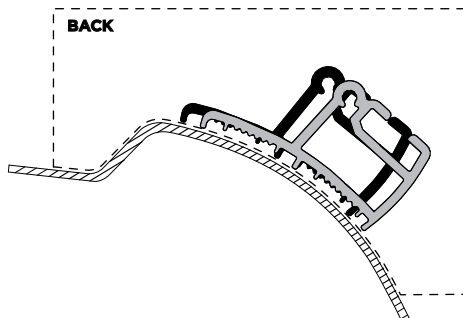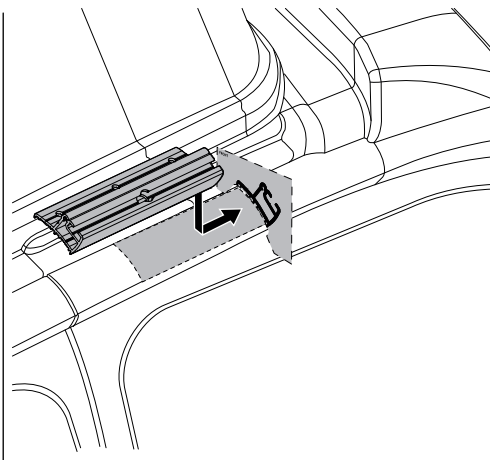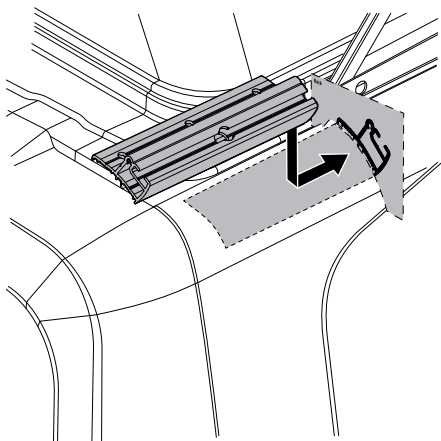




D



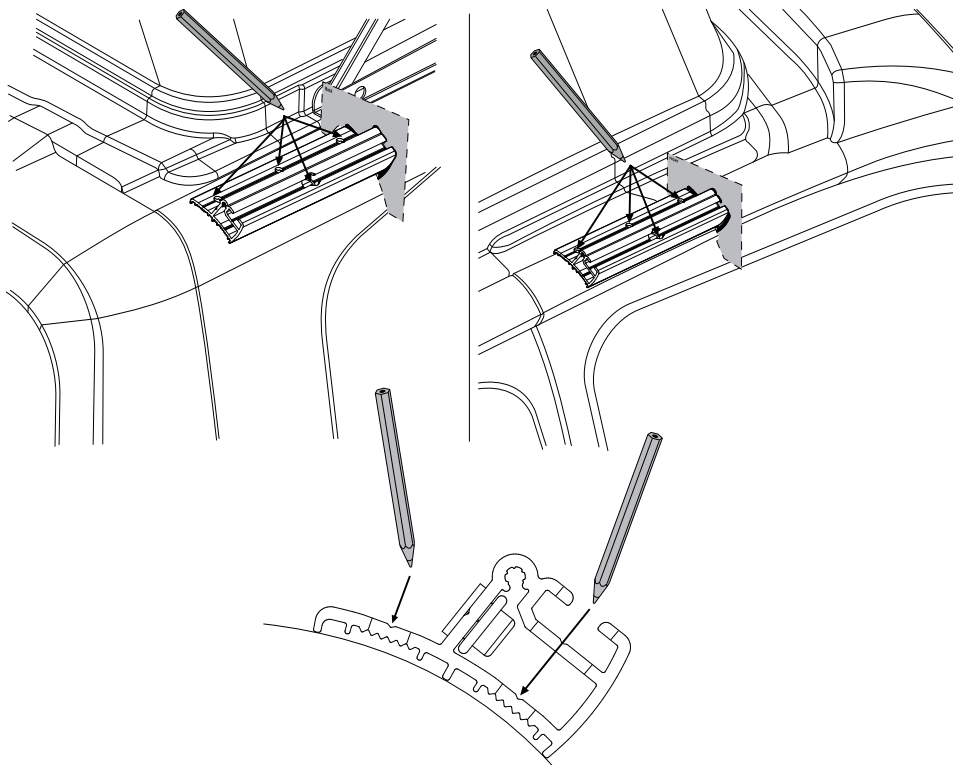


4




A

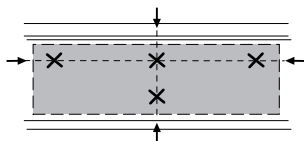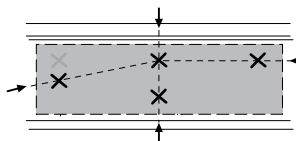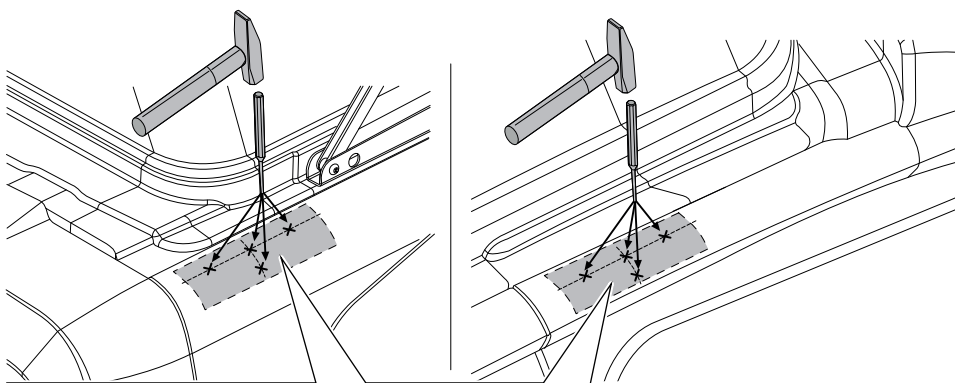

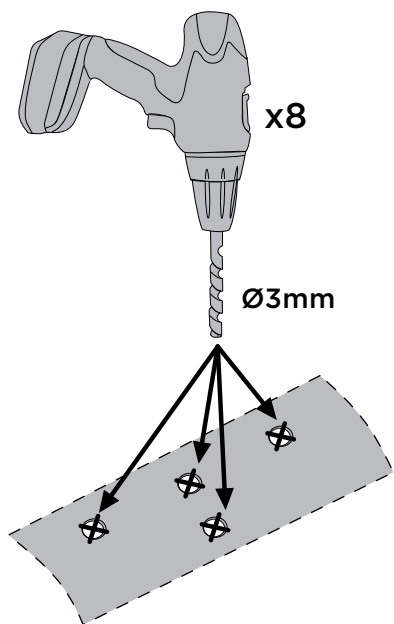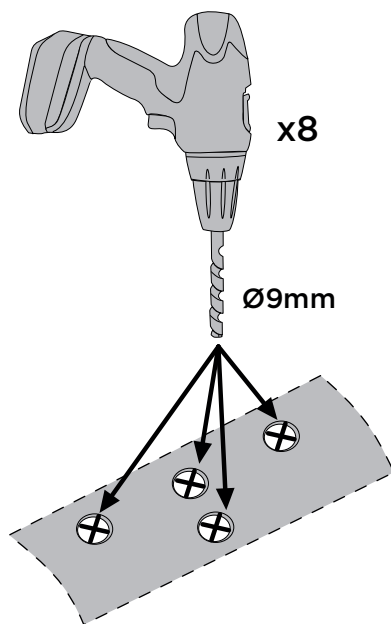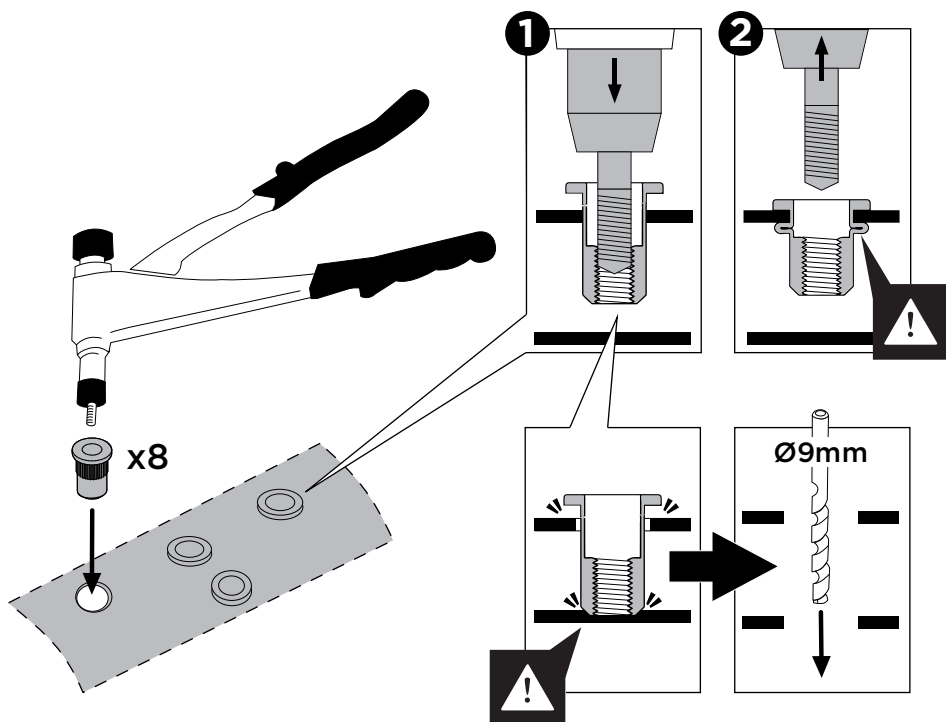
B**C****D**



A

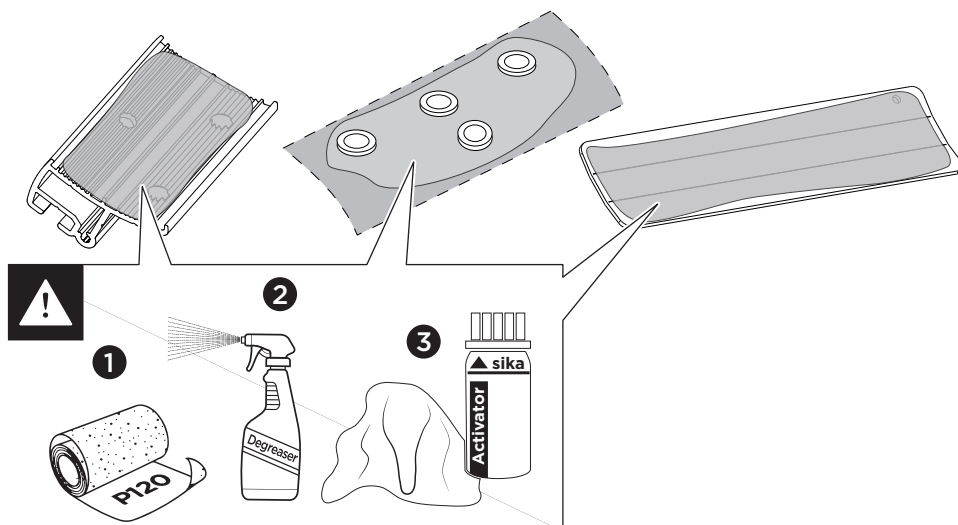

B

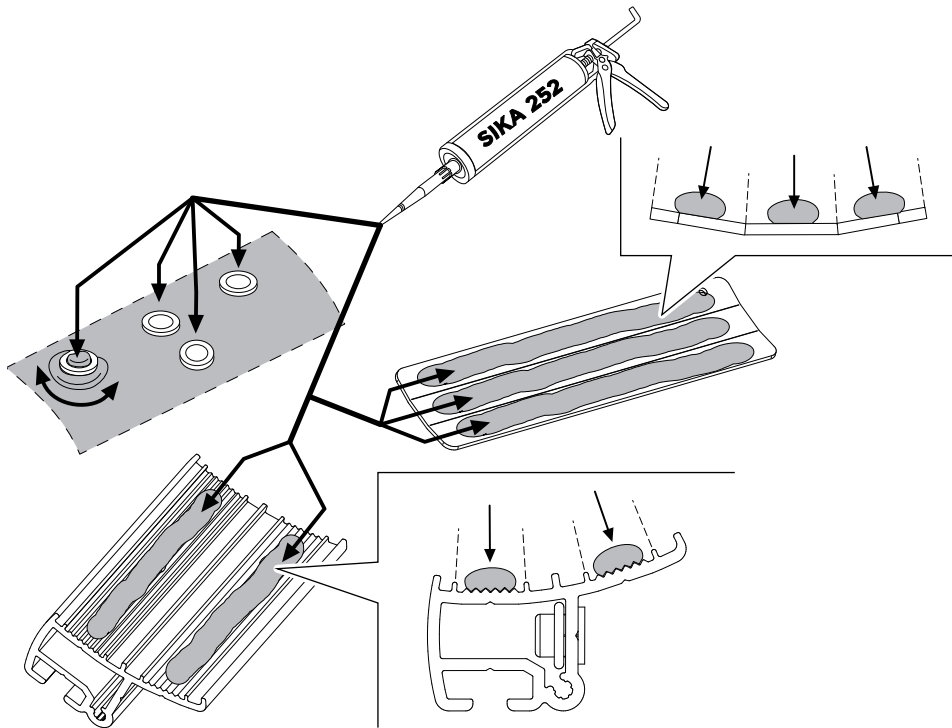

6



x8



x4



x1



x1




TX20




TX30

A

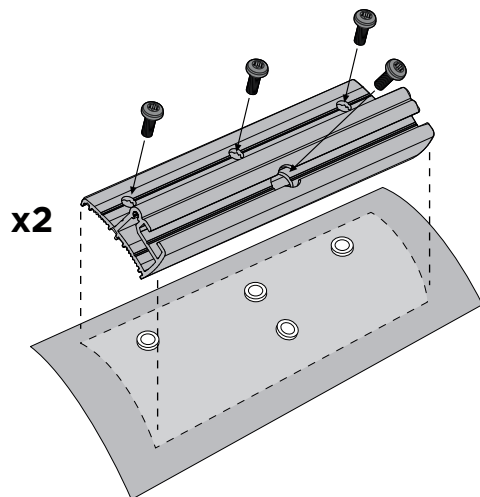

x2

B

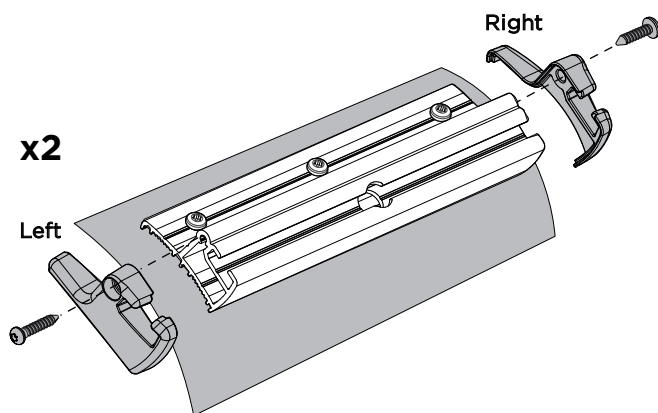


x2

Left


Right

C

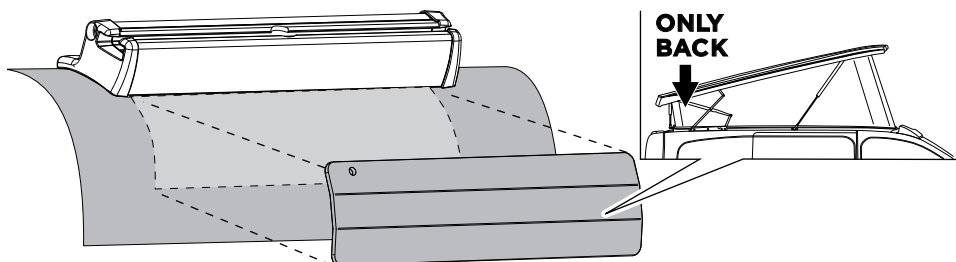


ONLY
BACK


7

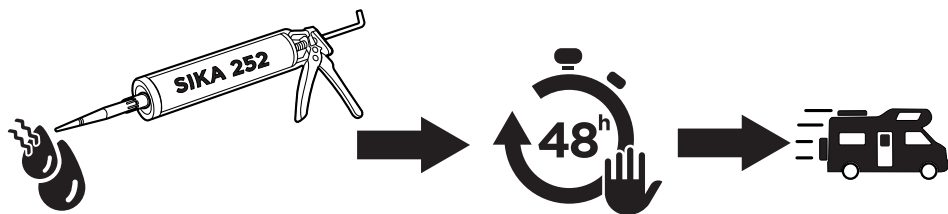


8

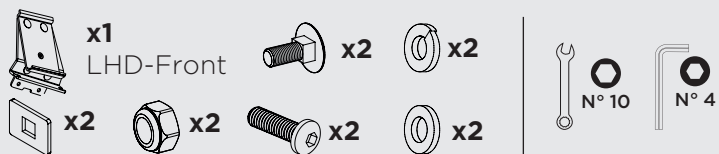


LHD

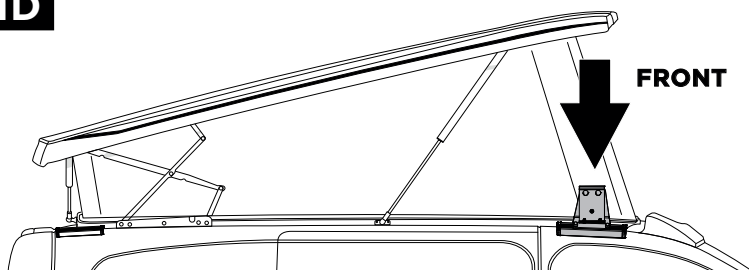


A

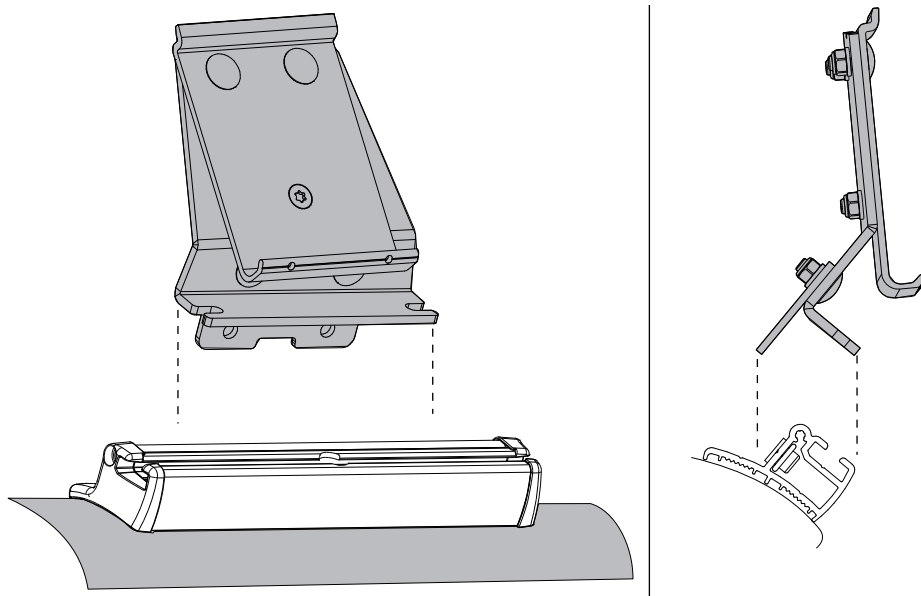

B

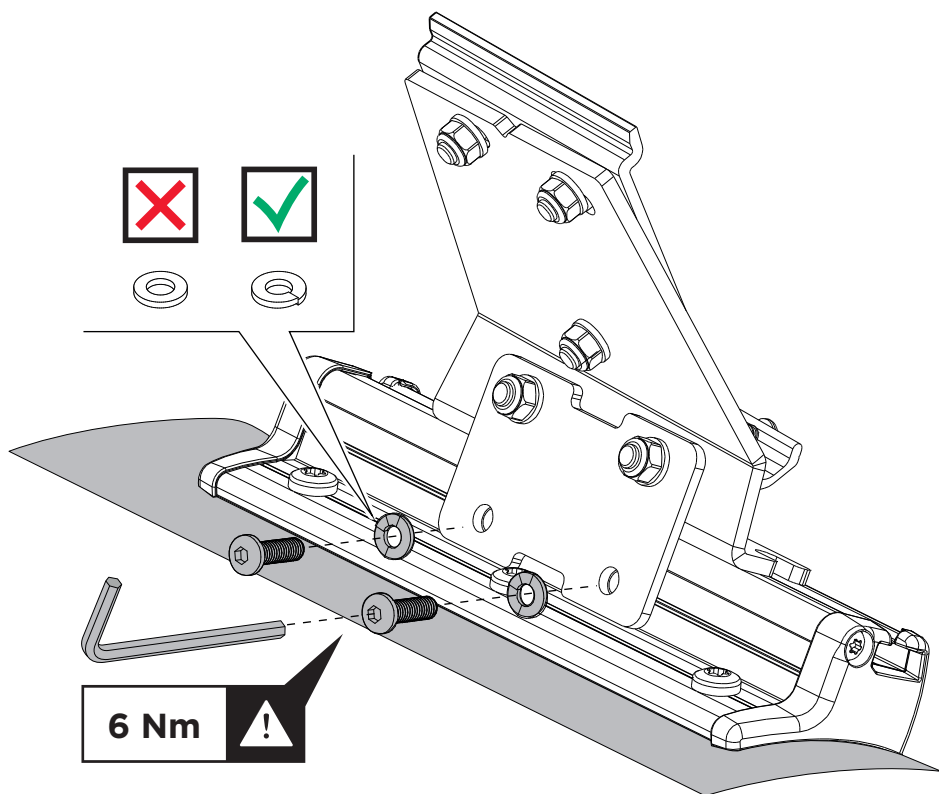

C

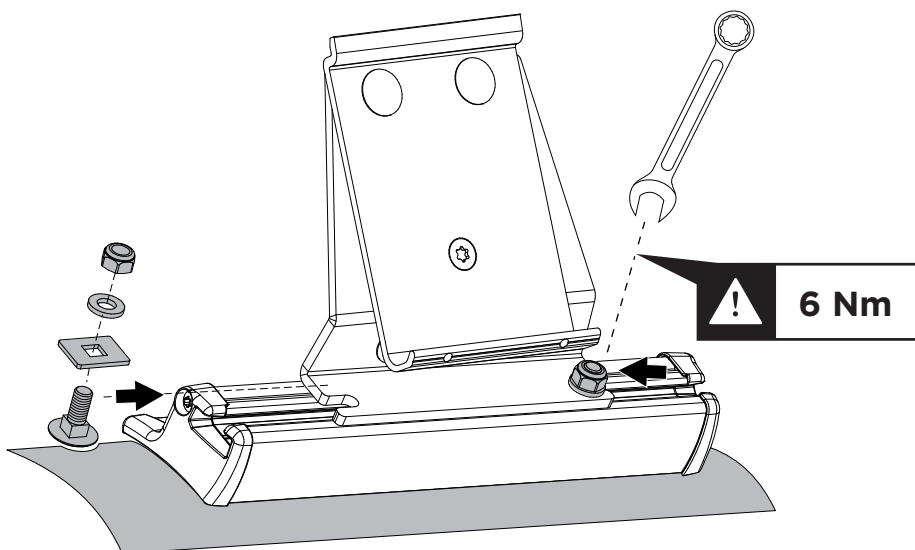

9



x1
LHD-Back



x2



x2



x2



x2



x2



x2




N° 10





N° 4

LHD


BACK

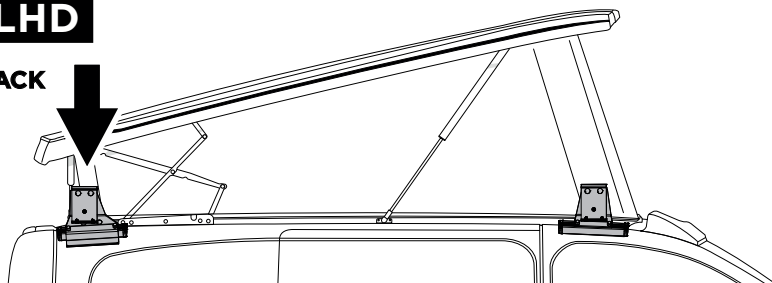


A

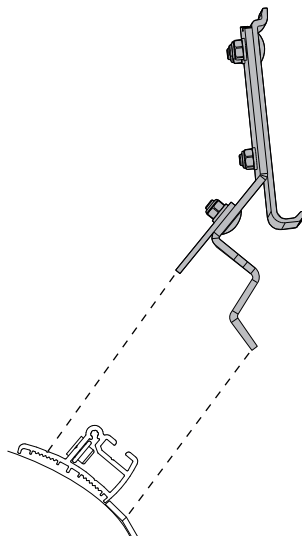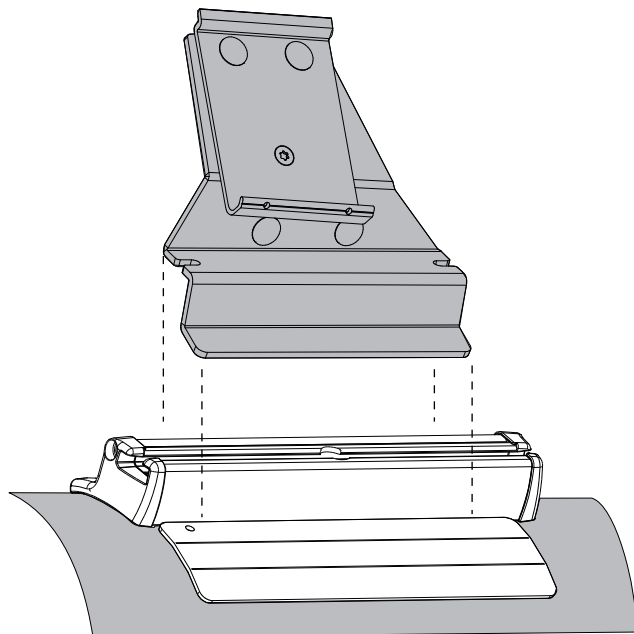

B

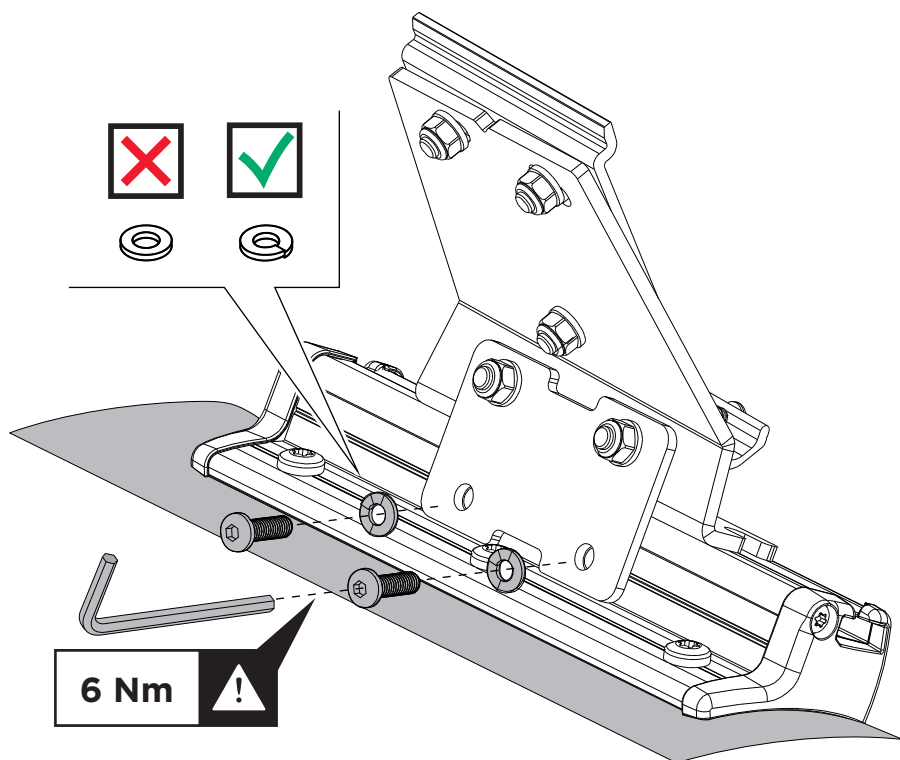


C

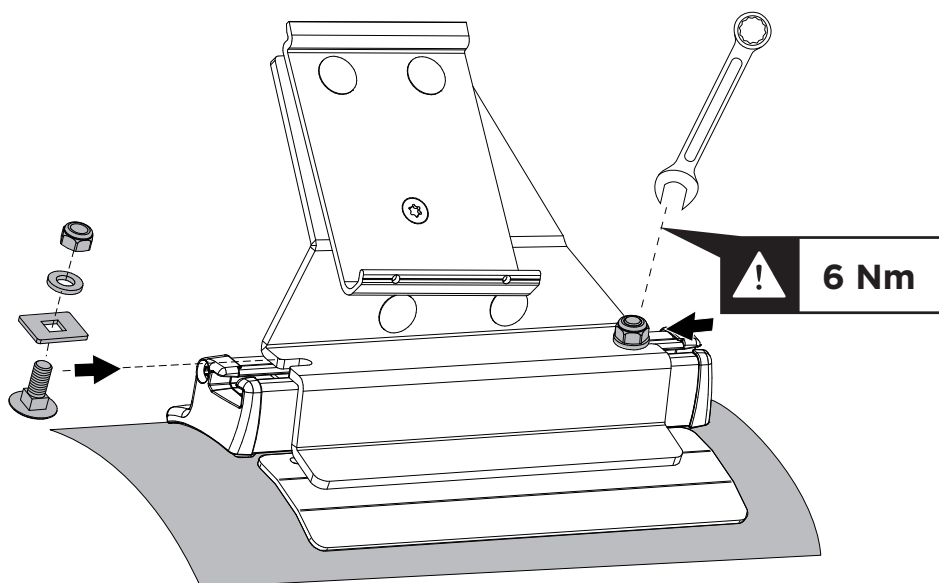


10



A

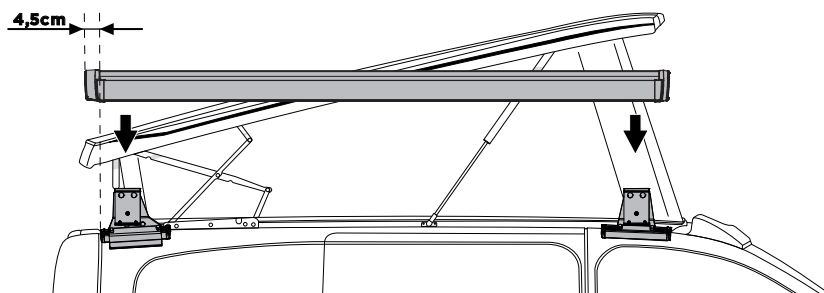

B

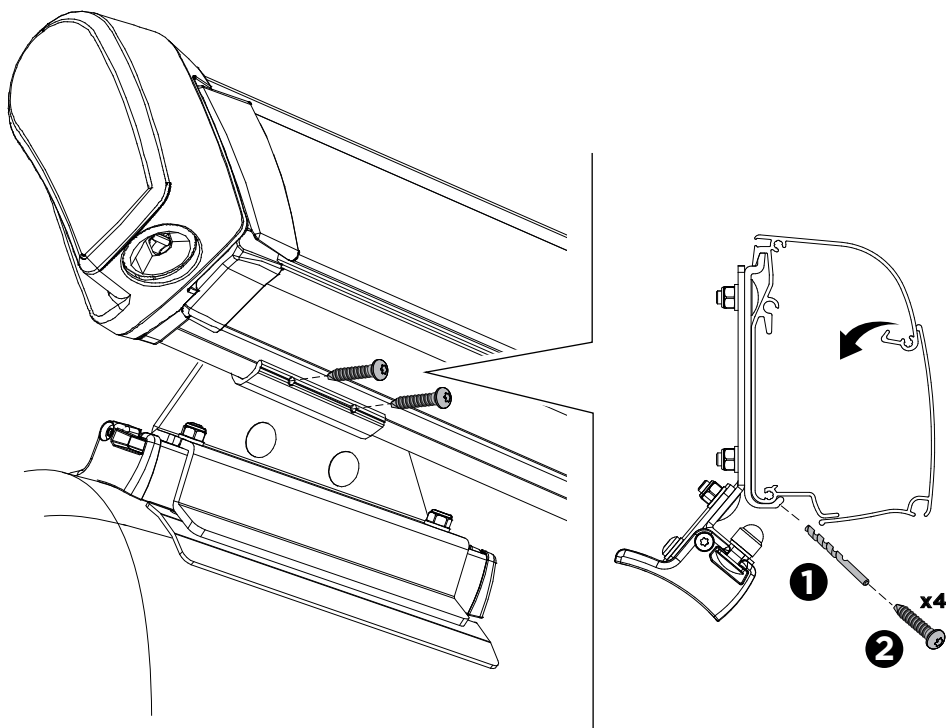



x14




TX20




N° 10

A


BACK

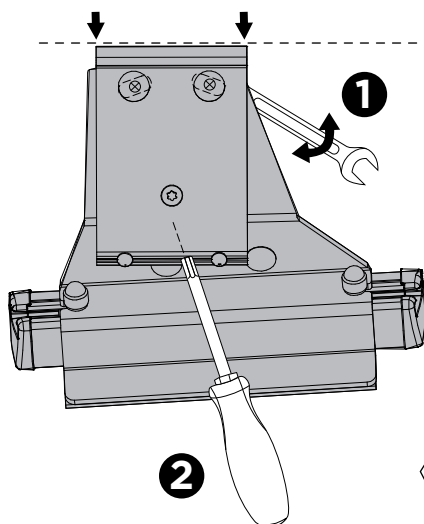

FRONT

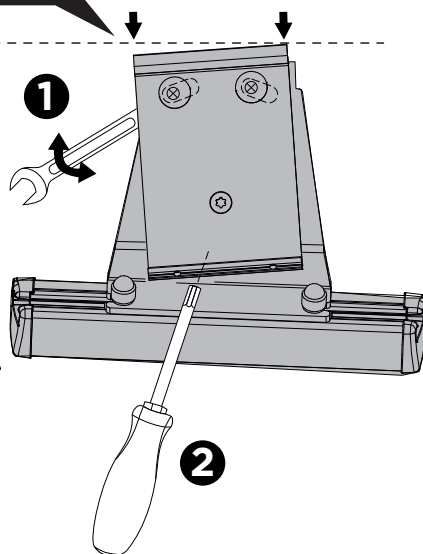

B

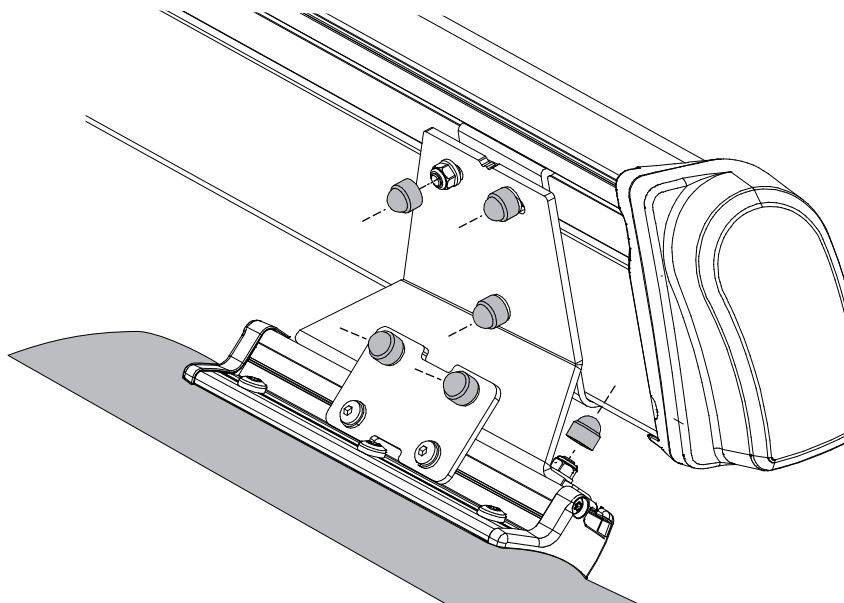







Thule NV, Kortrijkstraat 343 - BE 8930 Menen, BELGIUM

» PART OF THULE GROUP



infoRV@thule.com

© Thule Group 2020. All rights reserved.



www.thule.com

AD9000-02