

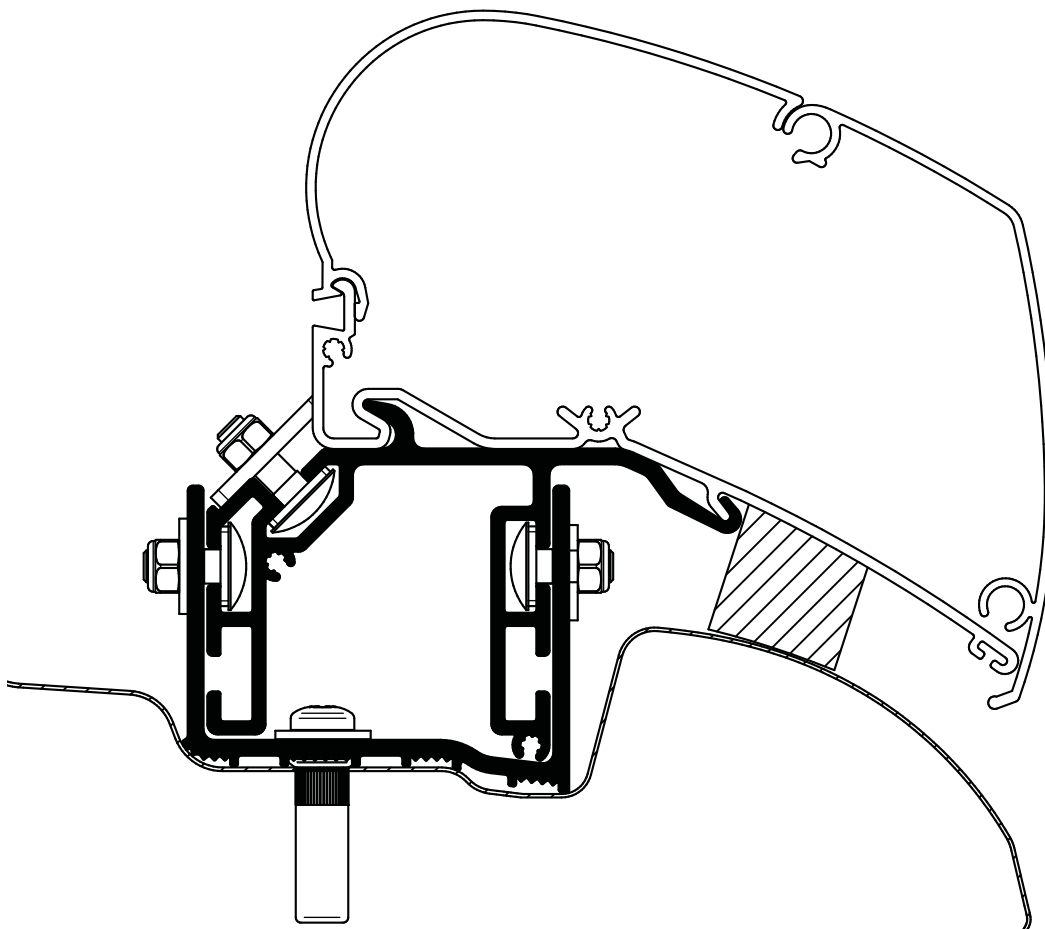


Adapter Roof VW Crafter 2017



➤ Instructions

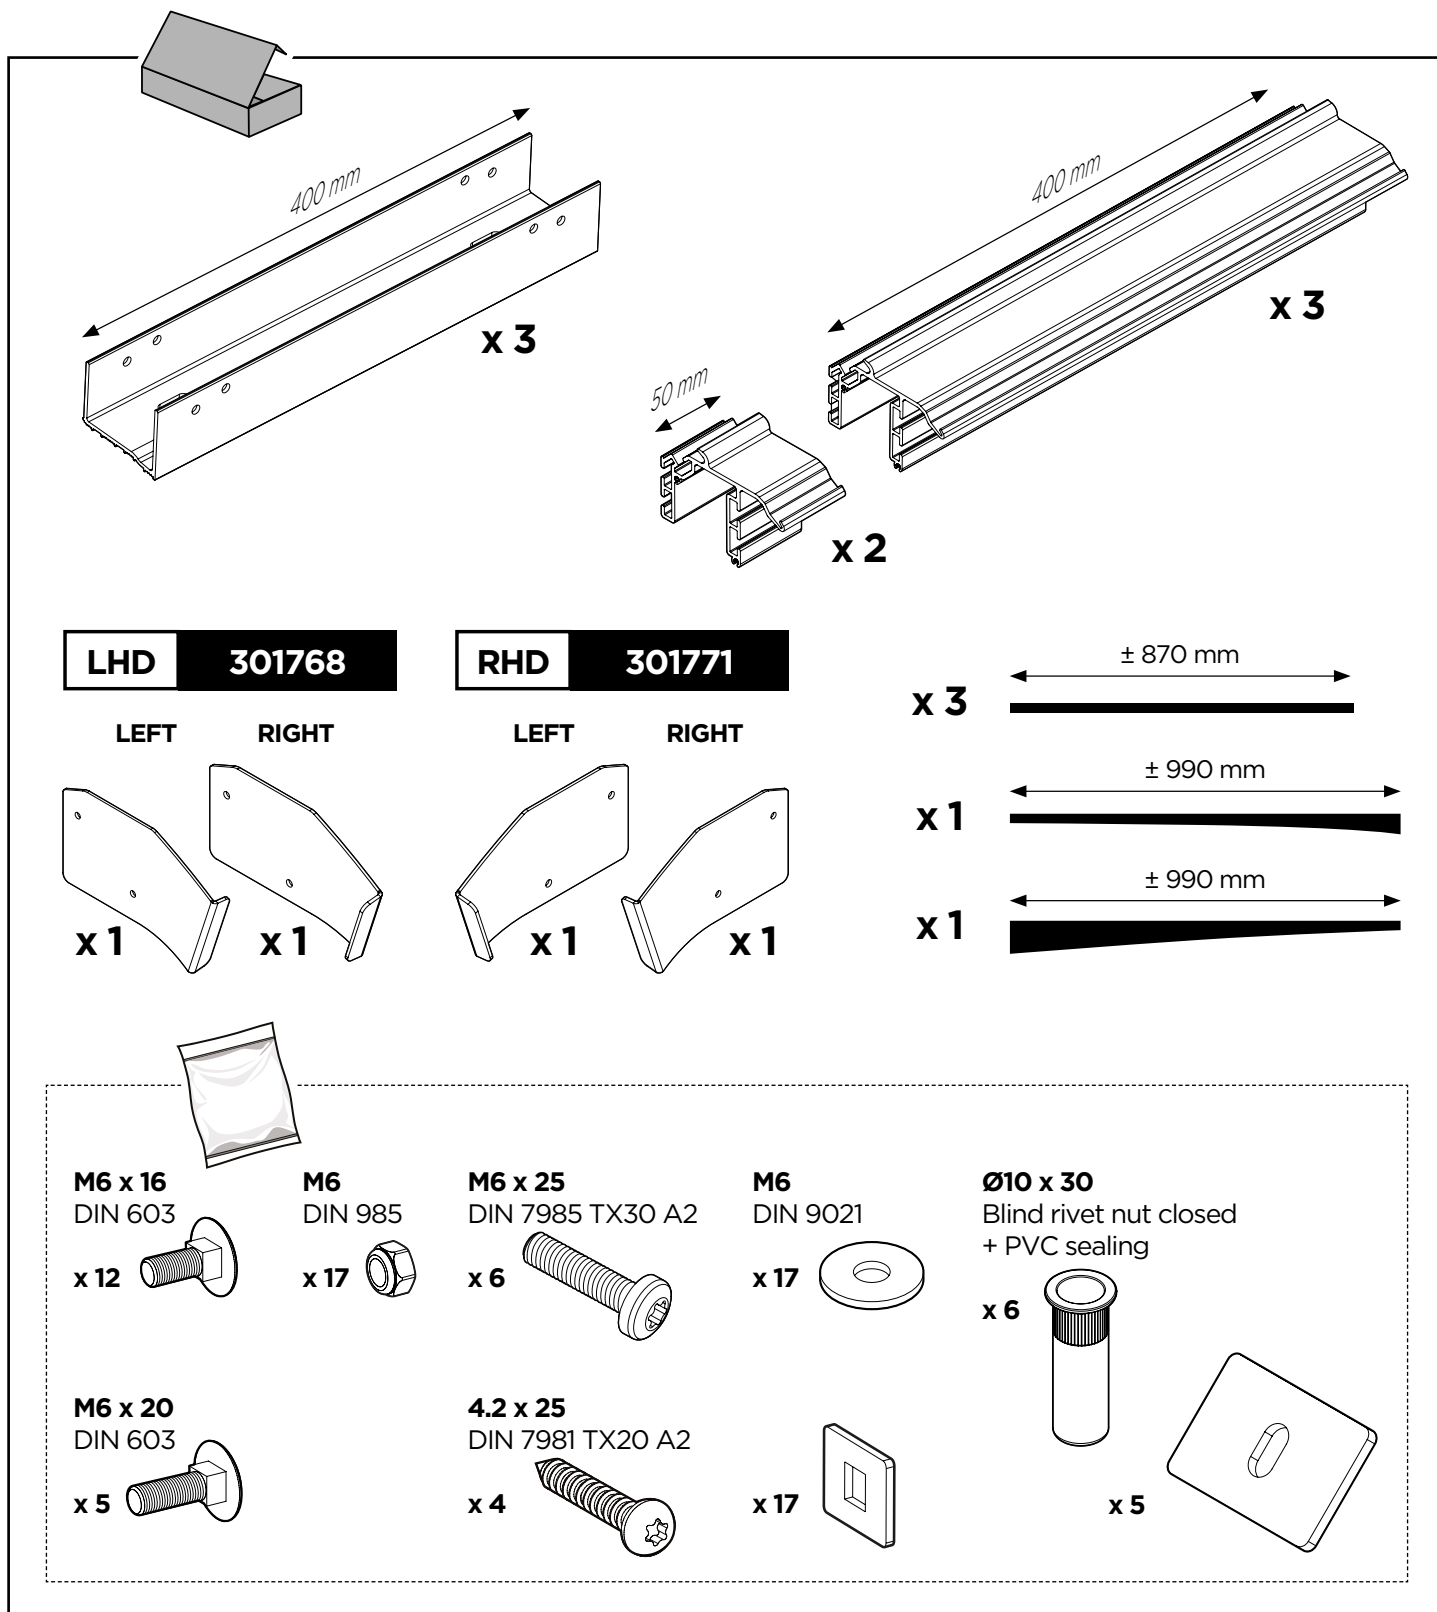

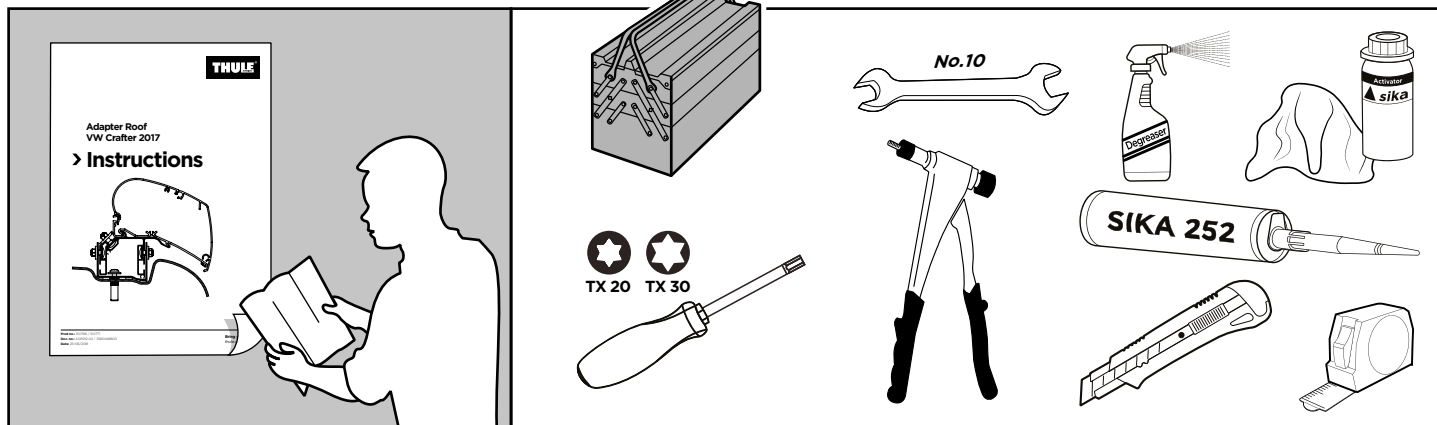



i

RIGHT HAND DRIVE (RHD) is **MIRROR** of LEFT HAND DRIVE (LHD)

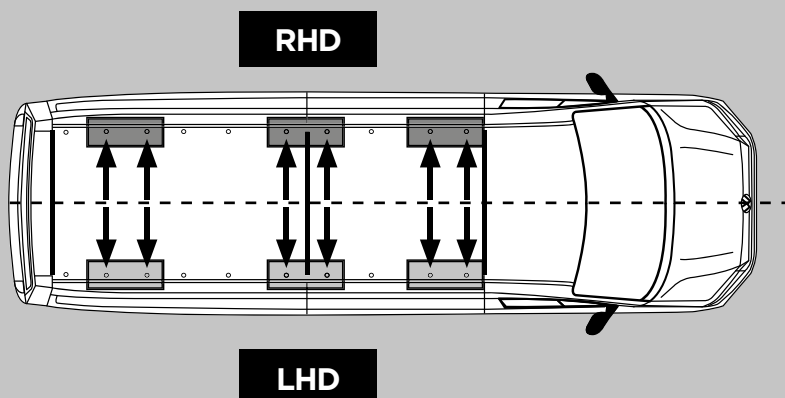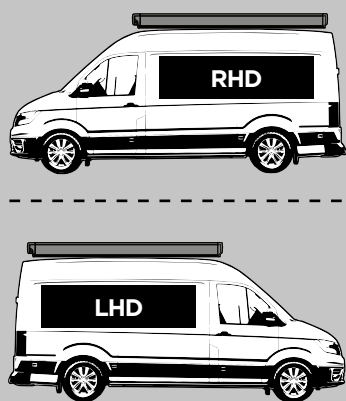



! IN THIS MANUAL **LEFT HAND DRIVE (LHD)** IS SHOWN BY **DEFAULT**

L3H3

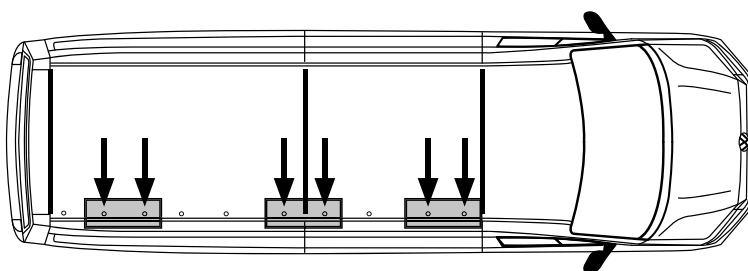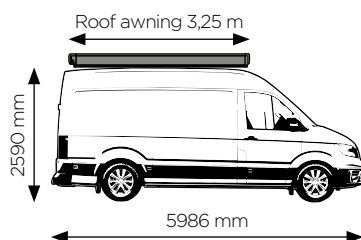



use **6/10** roof fixation points

L4H3

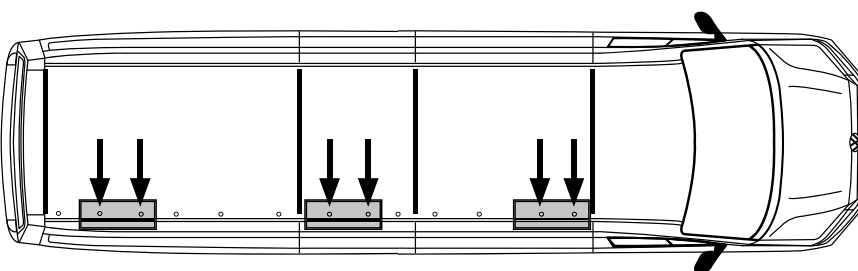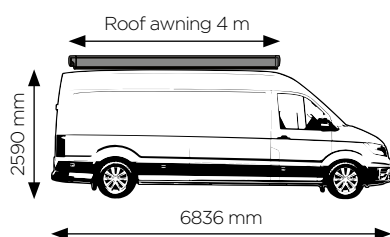


use **6/13** roof fixation points

L5H3

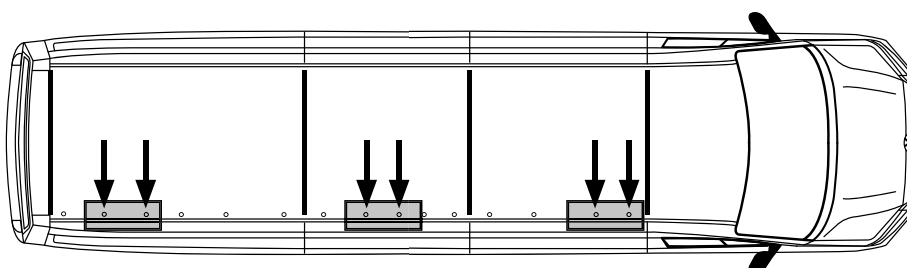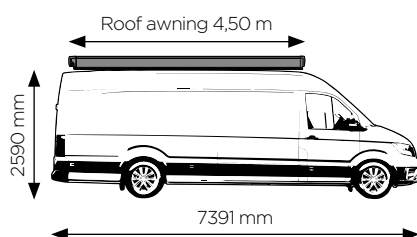


use **6/15** roof fixation points

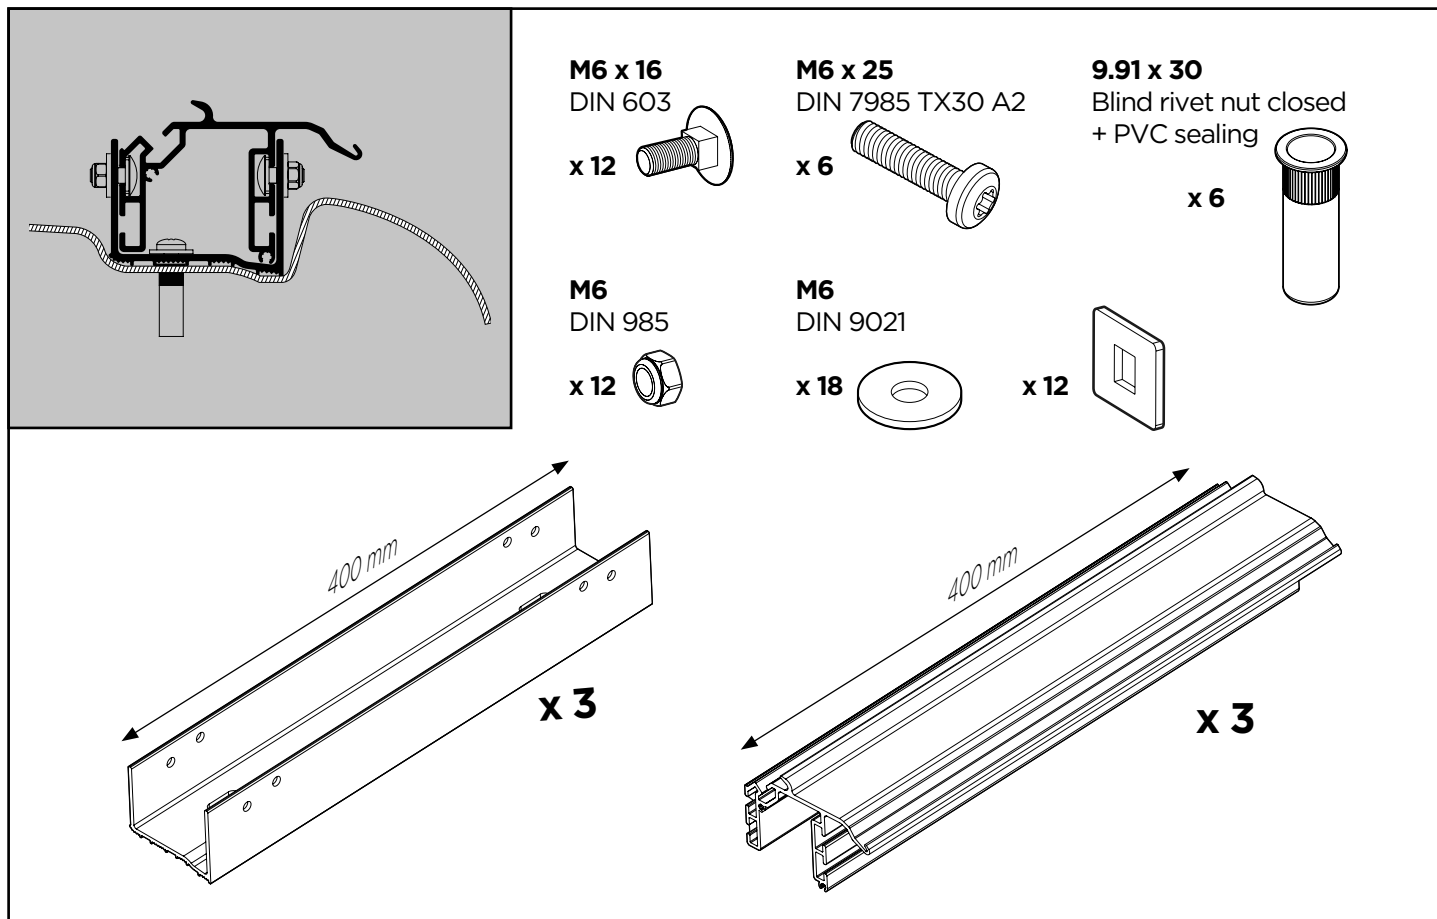


1 Remove protection of the 6 adapter fixation points

L4H3


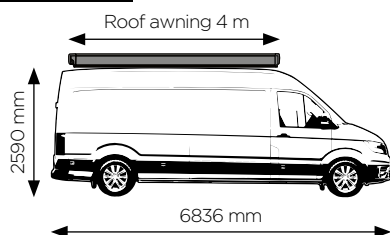


! RHD IS MIRROR OF LHD



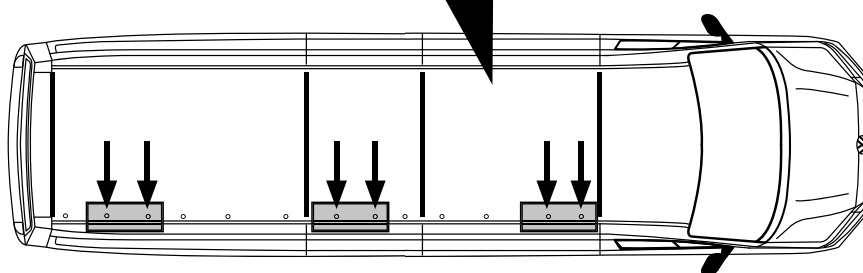


L3H3 p3

L5H3 p3




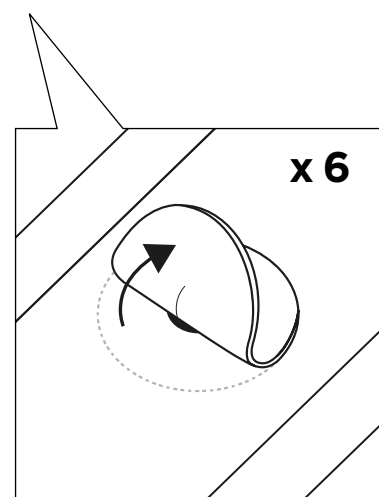
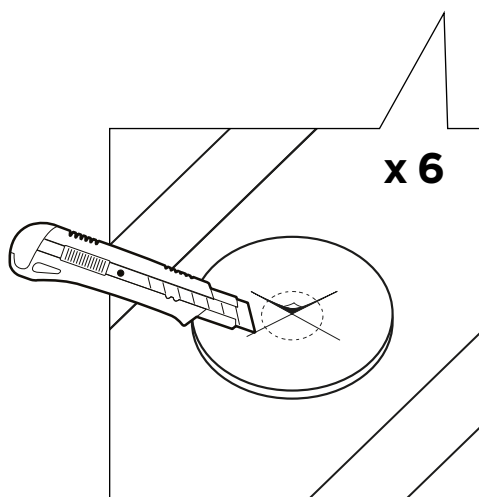


2 Degrease the roof

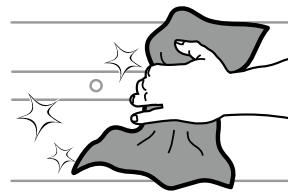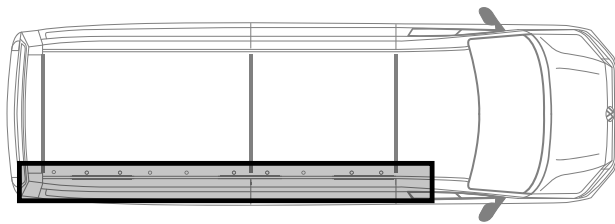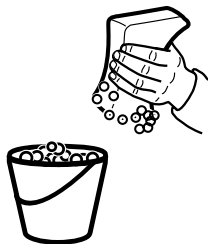



3 Assemble the blind rivet nuts

! RHD IS MIRROR OF LHD

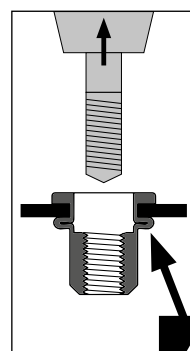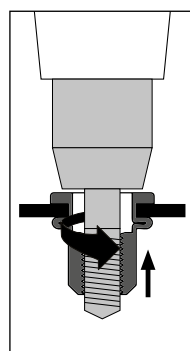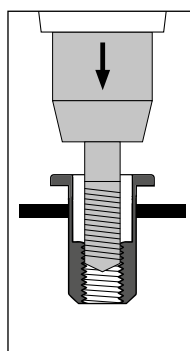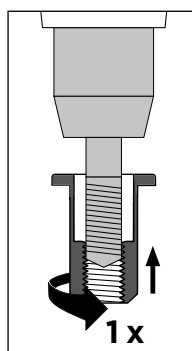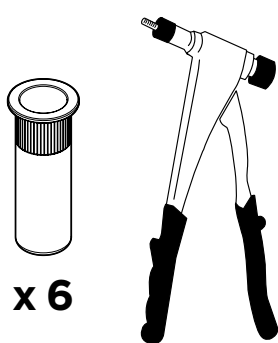

x 3

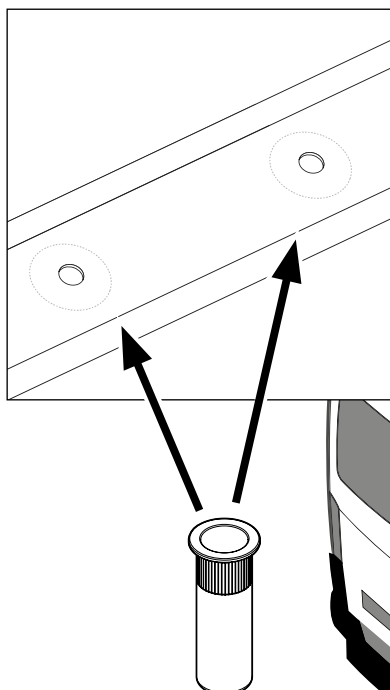

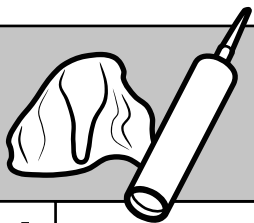


Glue / Lijmen / Verklebung:

Thule recommends / beveelt aan / empfiehlt: **SIKA 252 or Terostat MS937**

Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.


Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.

Preparation and sealing according to the prescripts of the glue supplier.

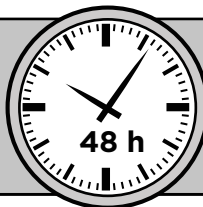


4 Gluing

A

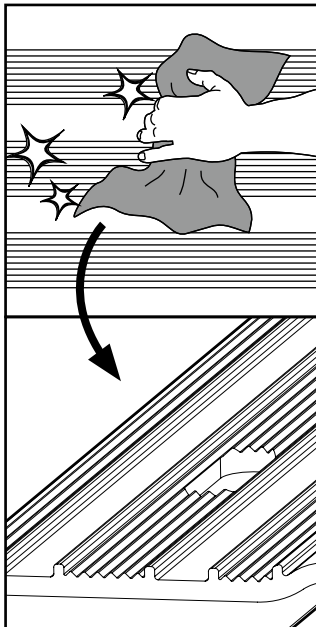

B

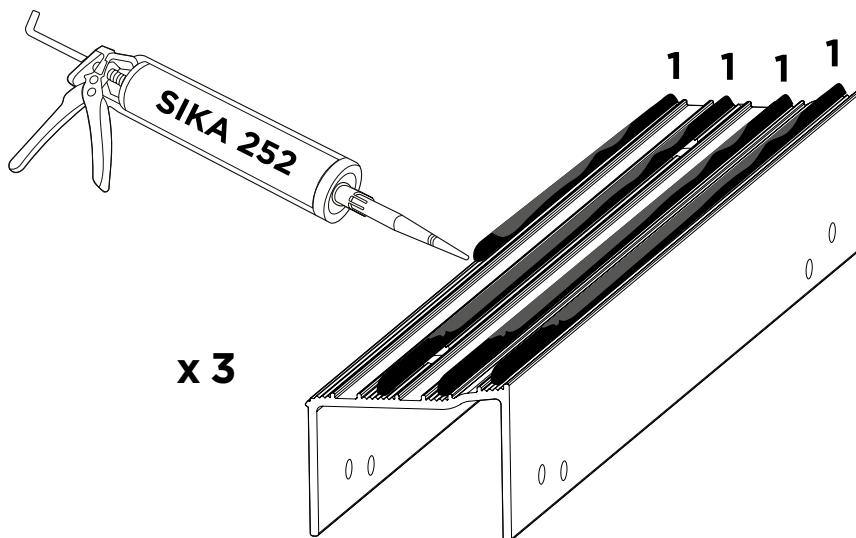


x 3

5 Mounting the base on the roof

! RHD IS MIRROR OF LHD




M6 x 25
DIN 7985 TX30 A2

x 6

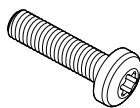

M6
DIN 9021

x 6

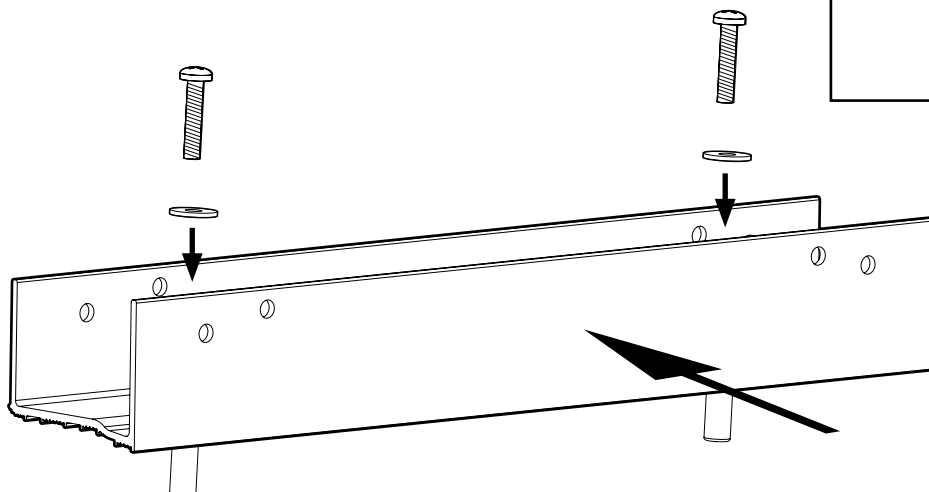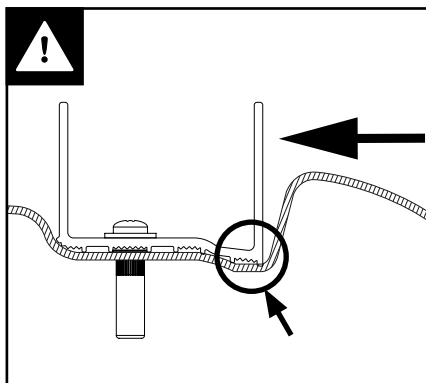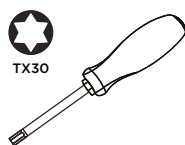

x 3

6


Mounting the adapter



RHD IS MIRROR OF LHD

M6 x 16
DIN 603

x 12

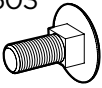


M6
DIN 985

x 12





M6
DIN 9021

x 12

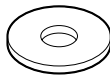

x 12



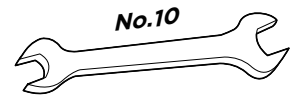
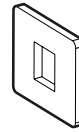


A

BACK

MID

FRONT

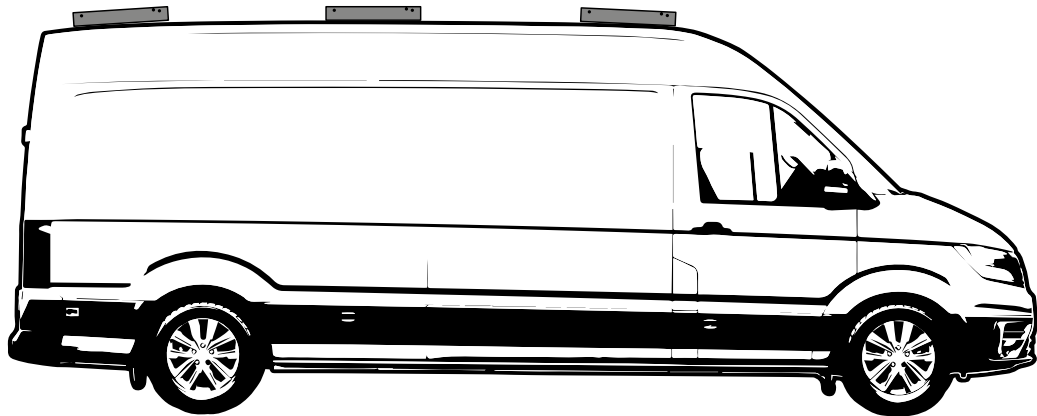
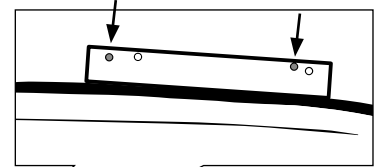
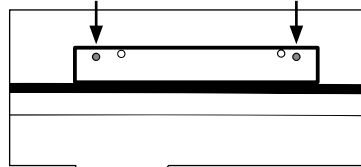
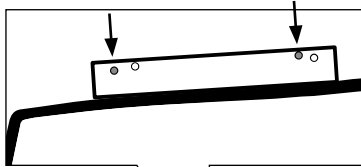


B

BACK

MID

FRONT

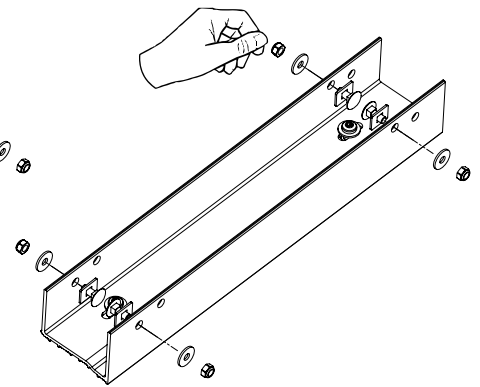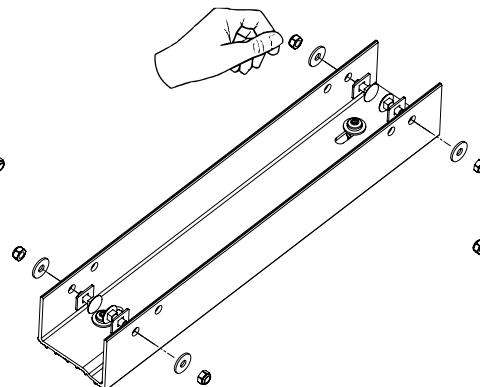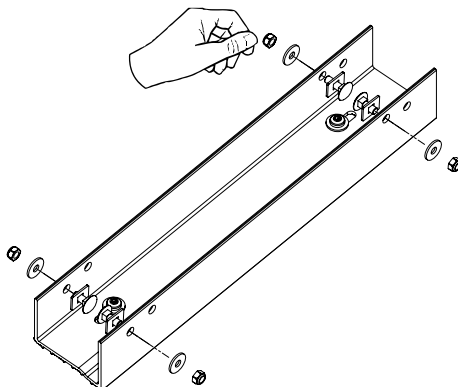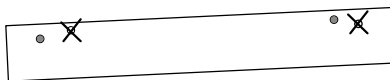


C

BACK

MID

FRONT

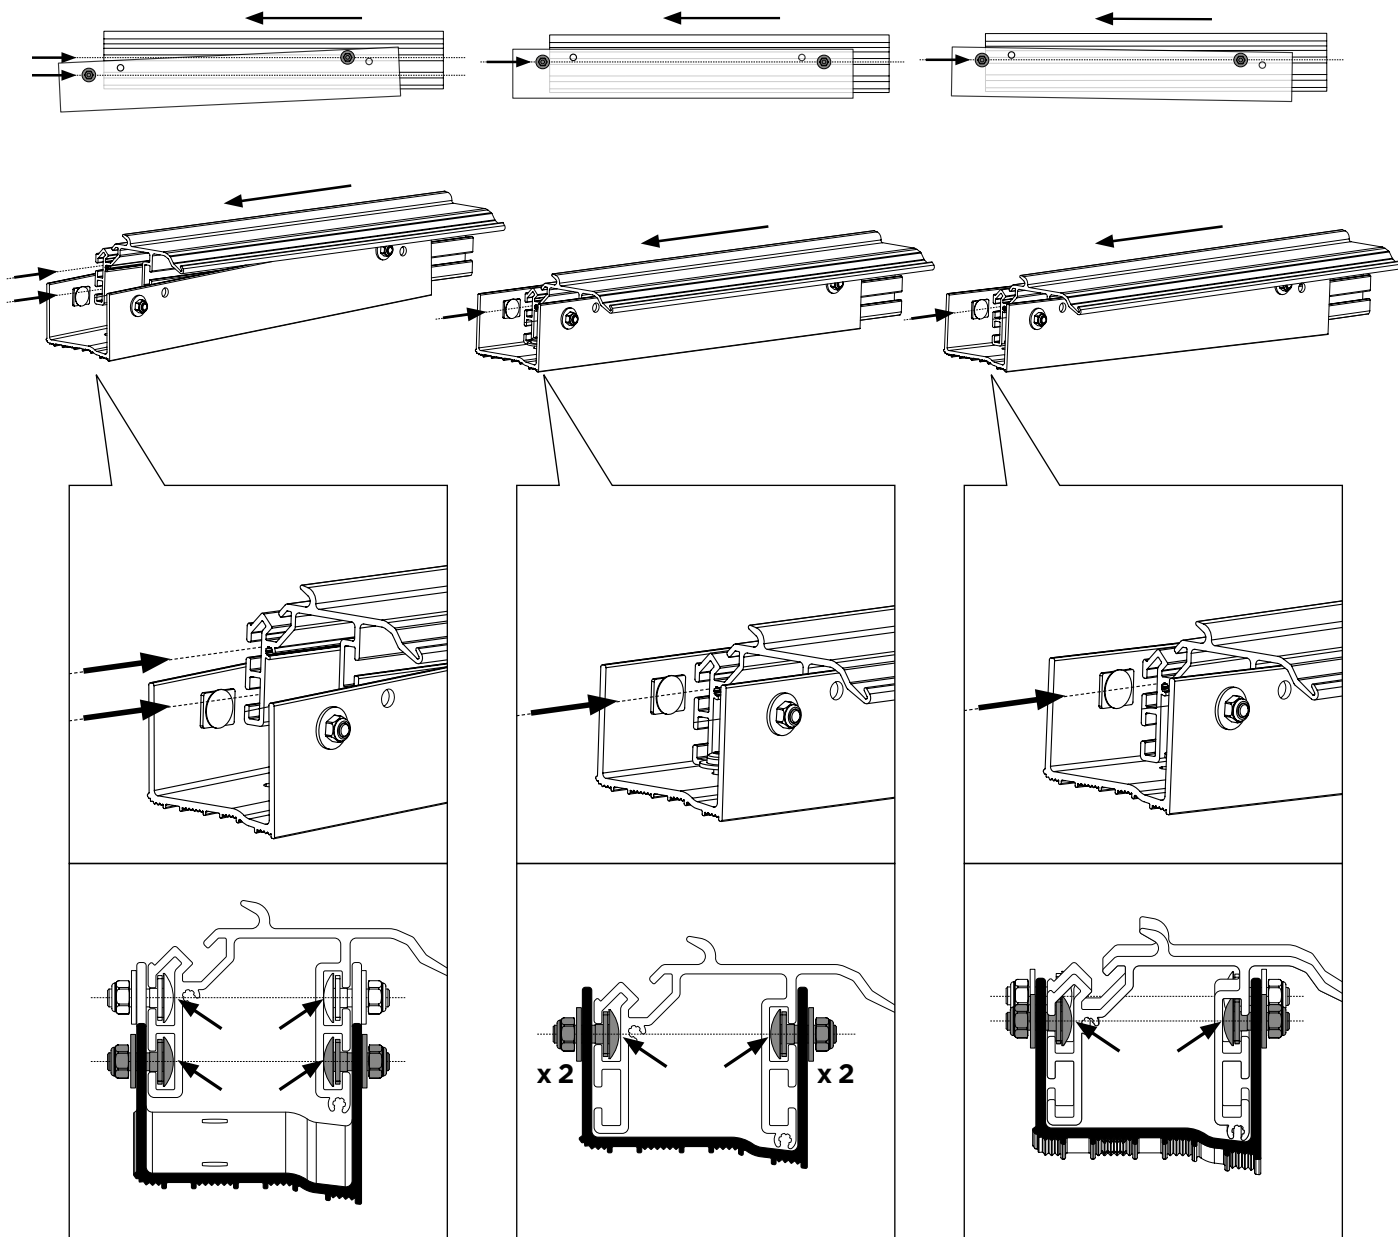



D

BACK


MID

FRONT

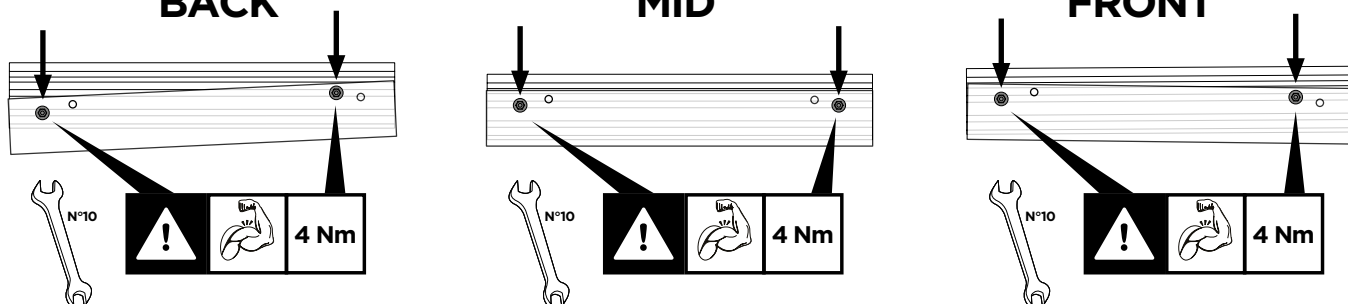

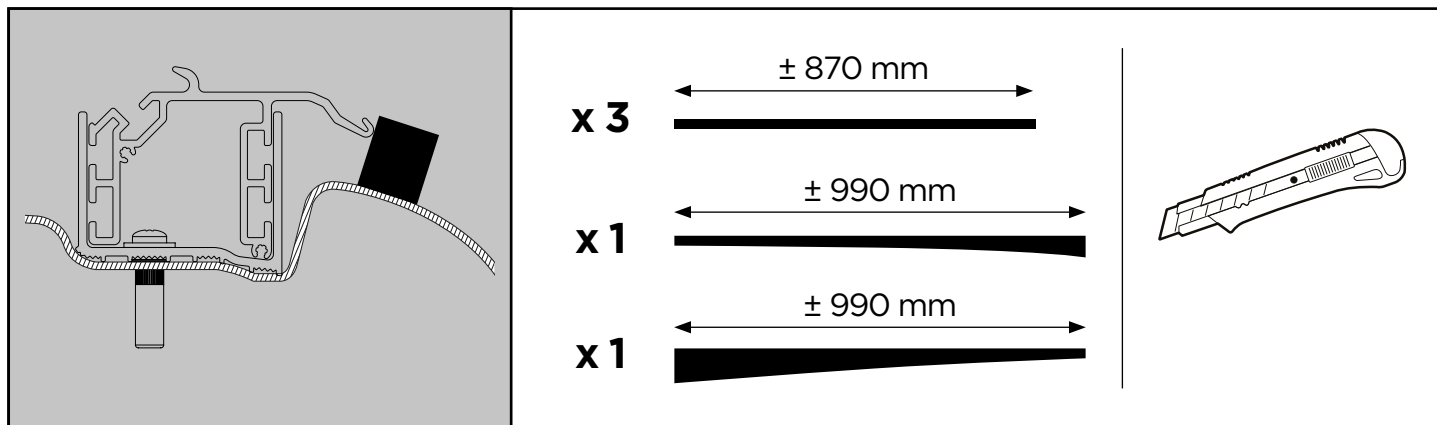


1 Degrease the roof

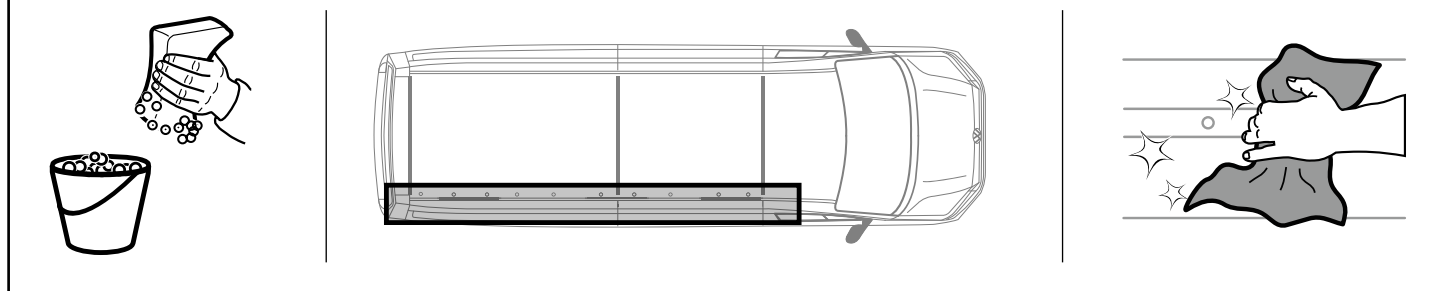


2 Cut the EPDM

! RHD IS MIRROR OF LHD


L3H3

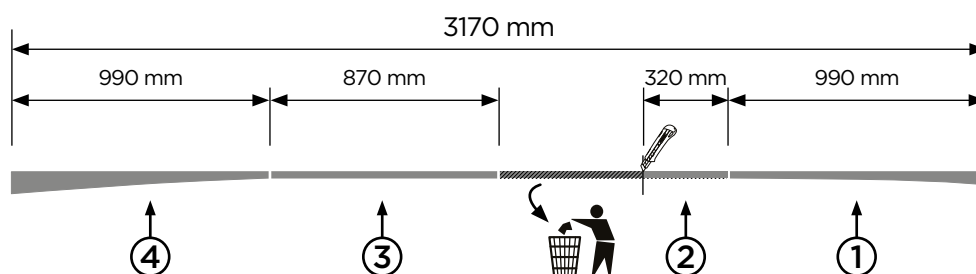

L4H3


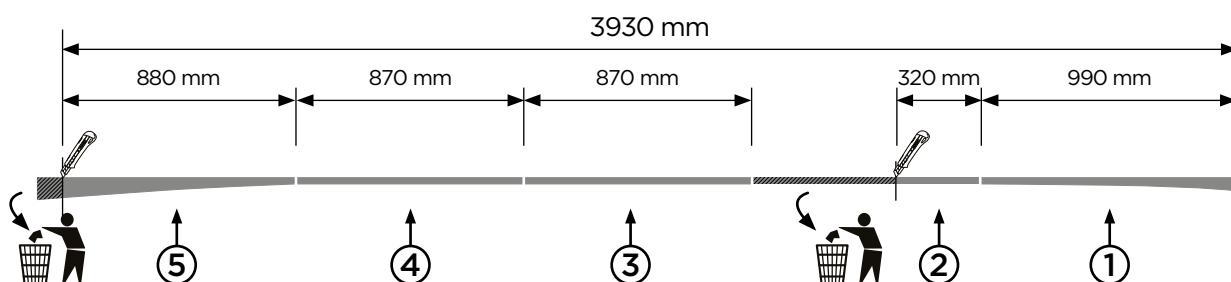


L5H3

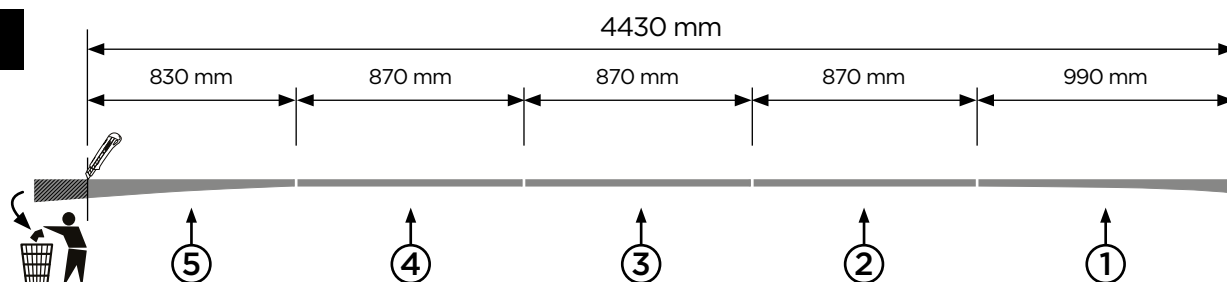


3 Applying the EPDM


! RHD IS MIRROR OF LHD

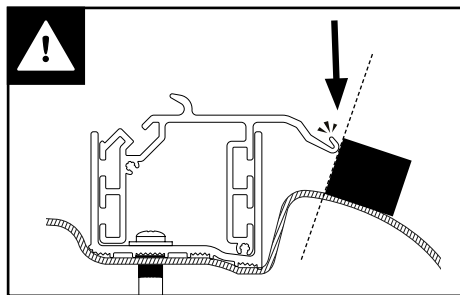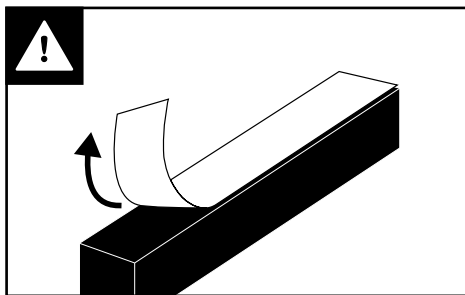


L3H3



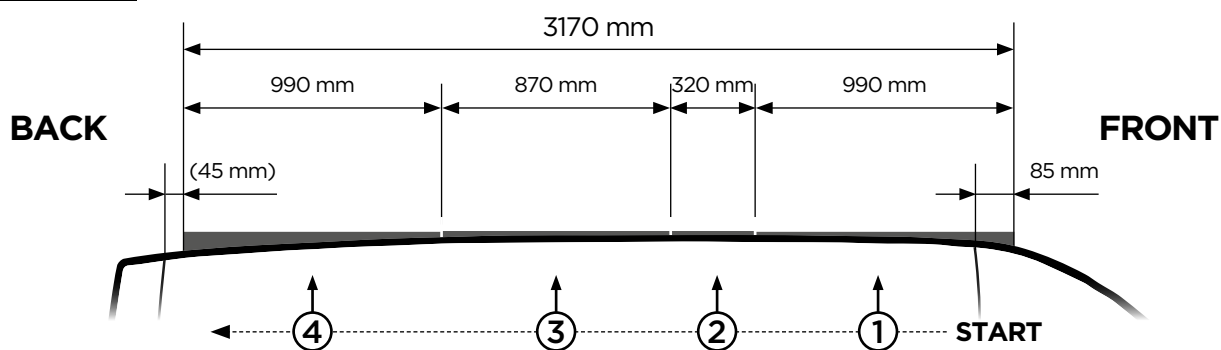


L4H3

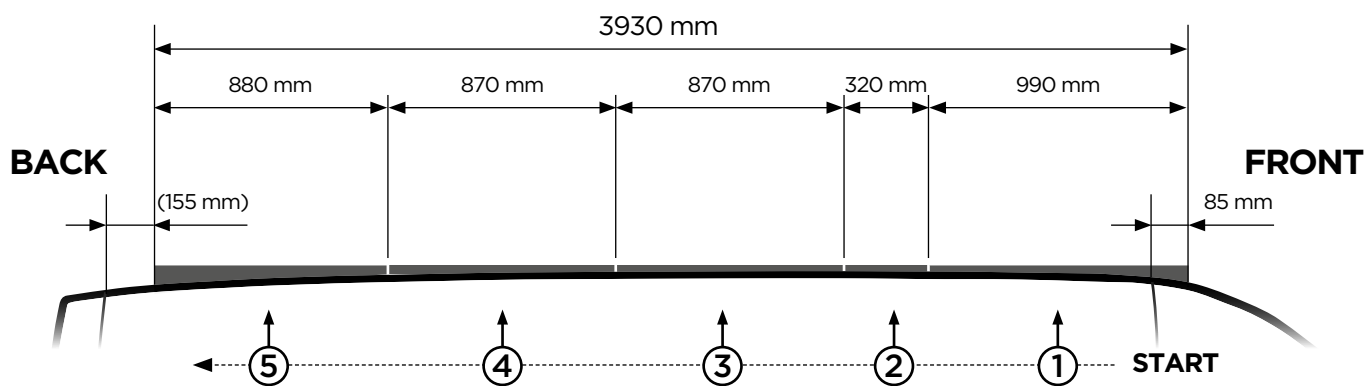


L5H3

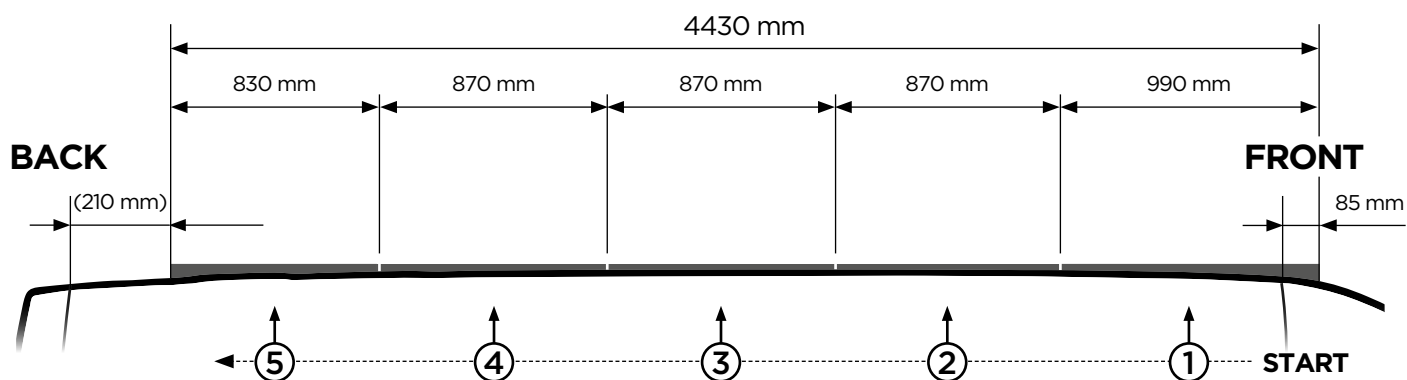

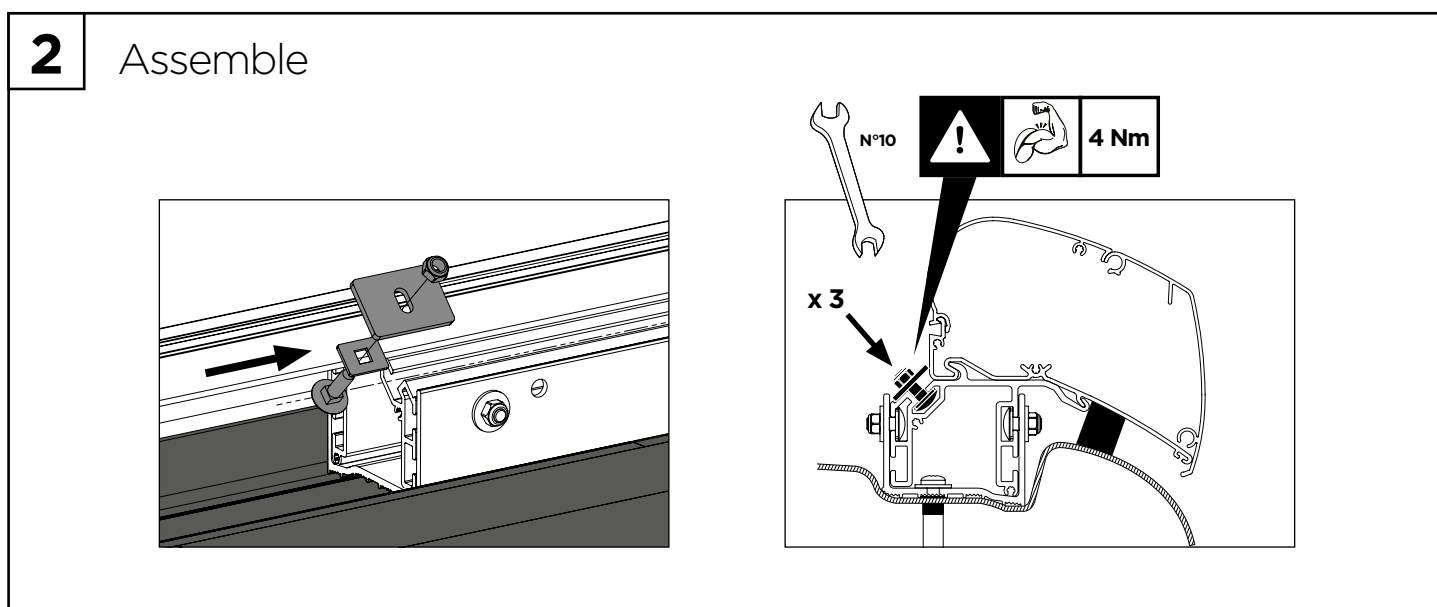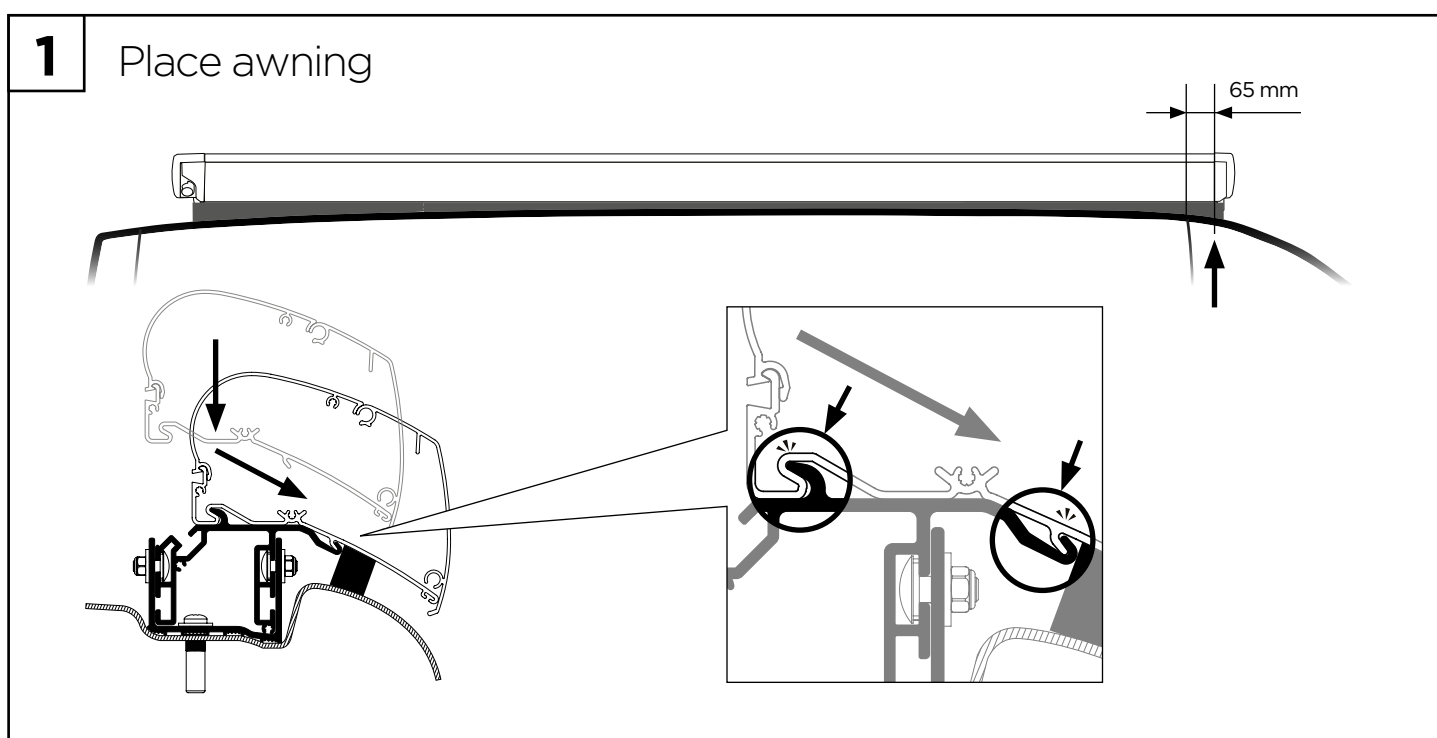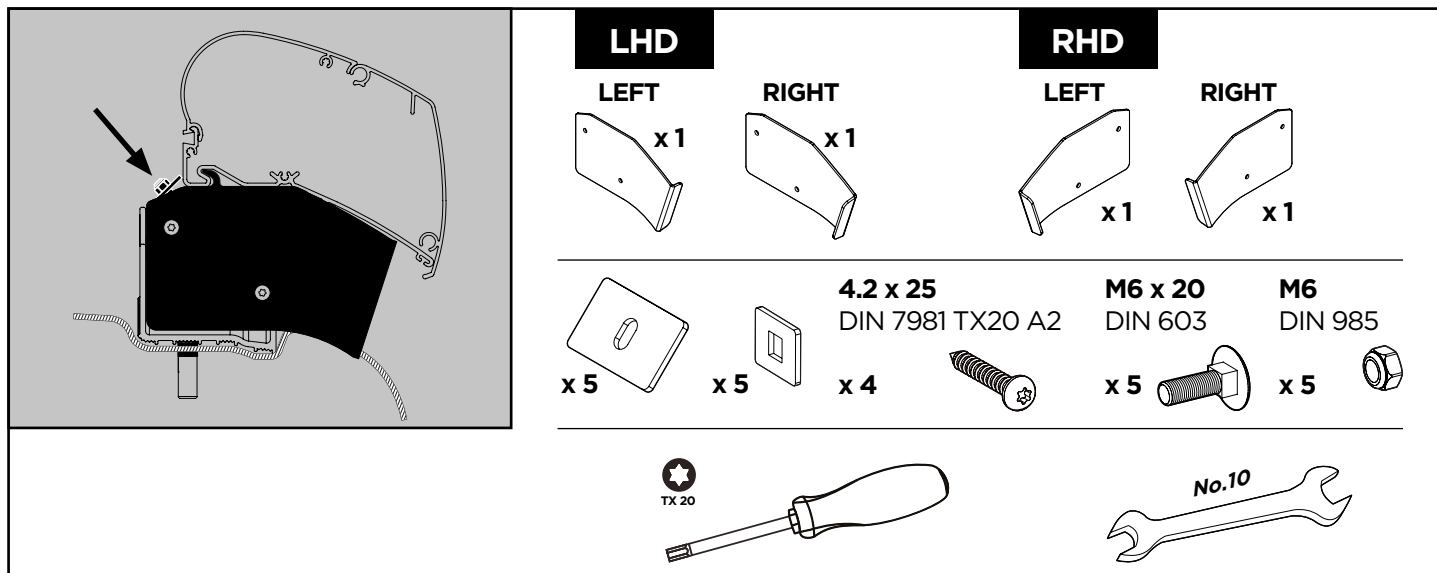

3 Prepare sealing covers (left and right)


! RHD IS MIRROR OF LHD

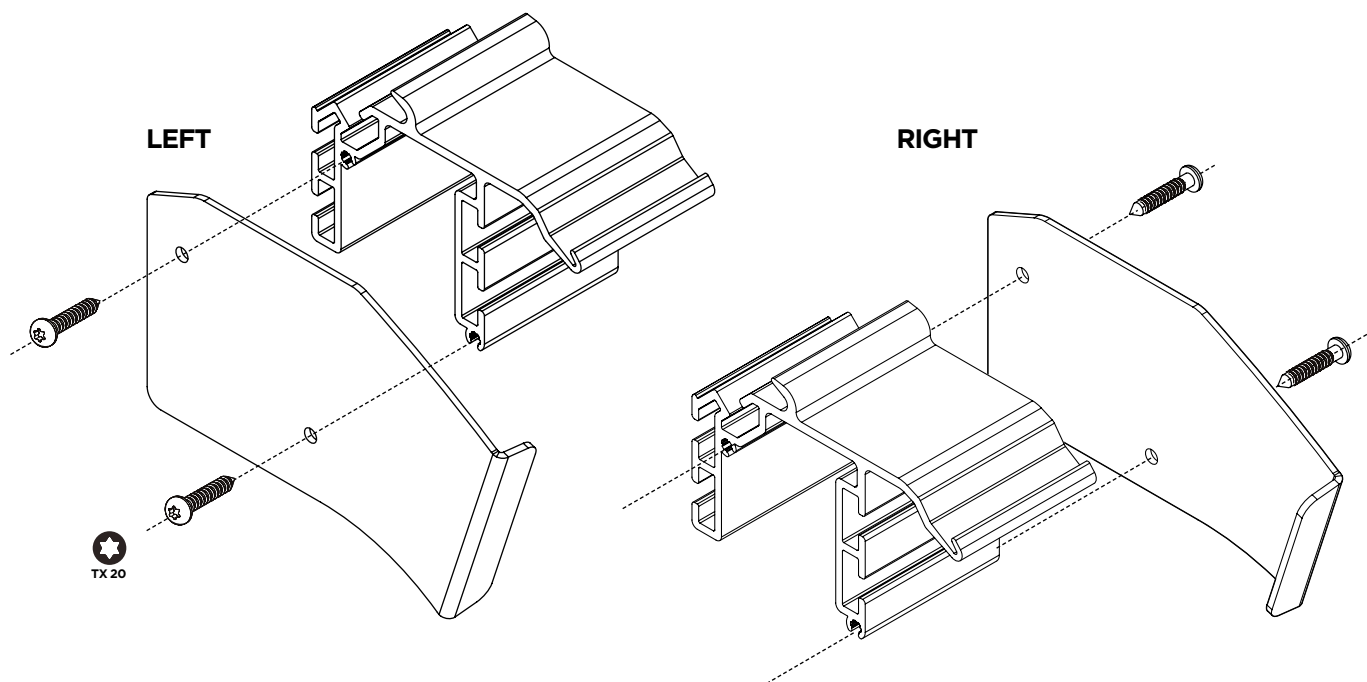


4 Assemble

! RHD IS MIRROR OF LHD


A

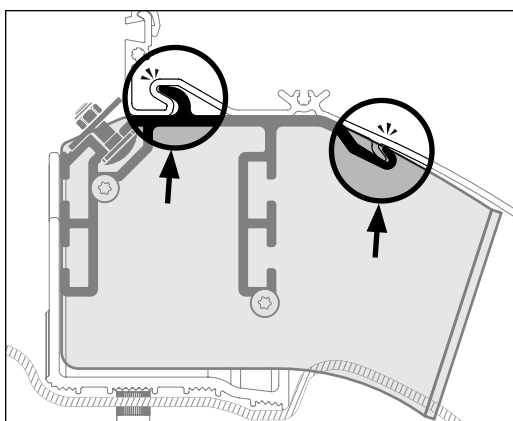


LEFT + RIGHT

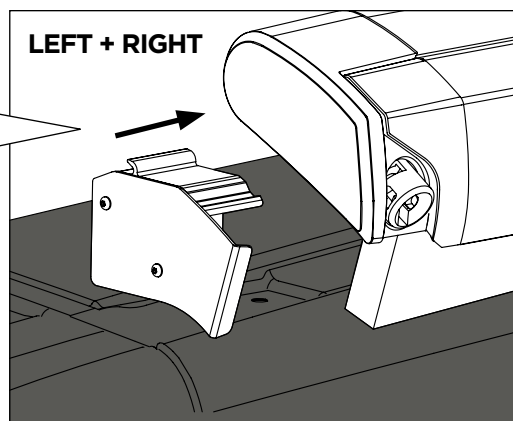

B

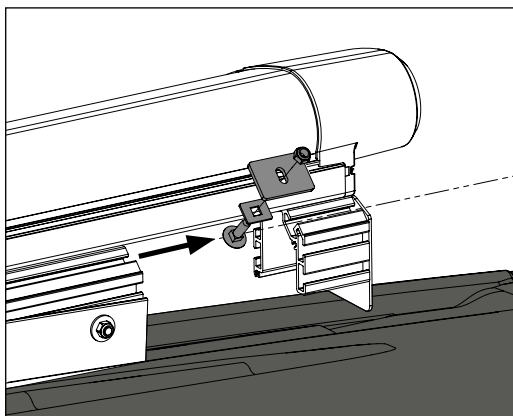

C

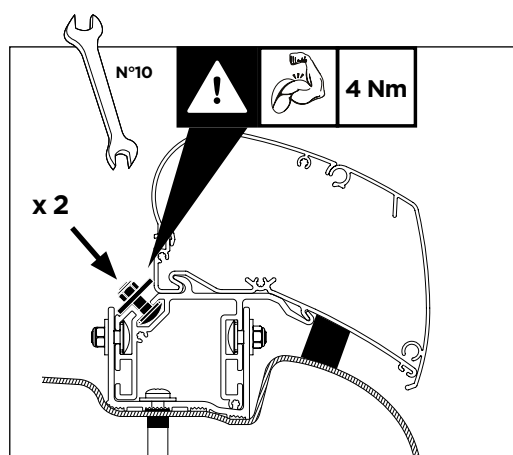

[illegible]

Blank lined paper for writing.

Blank lined paper for writing.

