

# MONTAGEANLEITUNG

sun-10469abc · BMW 1er F20/F21 2011-2018 SunClip Sonnenschutz



DE: Montageanleitung

MT: Istruzzjonijiet għall-assemblaġġ

EN: Installation instructions

NL: Montagehandleiding

DK: Installationsvejledning til

PL: Instrukcje montażu

EE: Paigaldusjuhised

PT: Instruções de montagem

FI: Paigaldusjuhised

RO: Instrucțiuni de asamblare

FR: Instructions de montage

SE: Monteringsanvisningar

GR: Οδηγίες συναρμολόγησης

SK: Návod na montáž

IE: Treoracha tionóil

SI: Navodila za sestavljanje

IT: Istruzioni di montaggio

ES: Instrucciones de montaje

HR: Összeszerelési útmutató

CZ: Návod k montáži

LV: Montāžas instrukcija

HU: Összeszerelési útmutató

LT: Surinkimo instrukcijos

BG: Инструкции за сглобяване




2x A1



1x C




1x

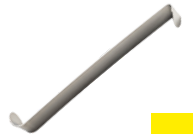

6x SC16



2x SC8-20






2x SC8-20



# MONTAGEANLEITUNG

sun-10469abc · BMW 1er F20/F21 2011-2018 SunClip Sonnenschutz

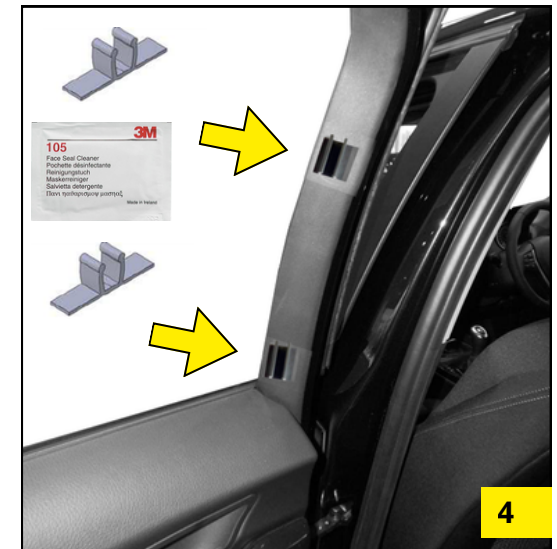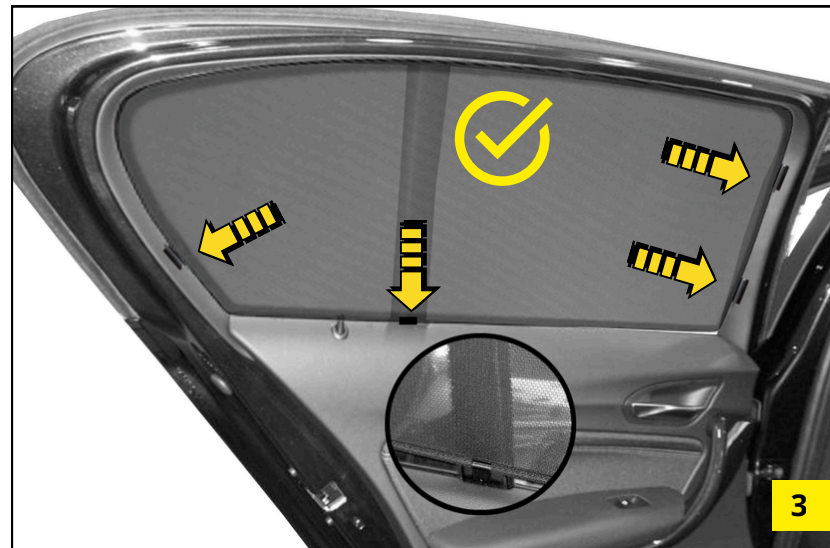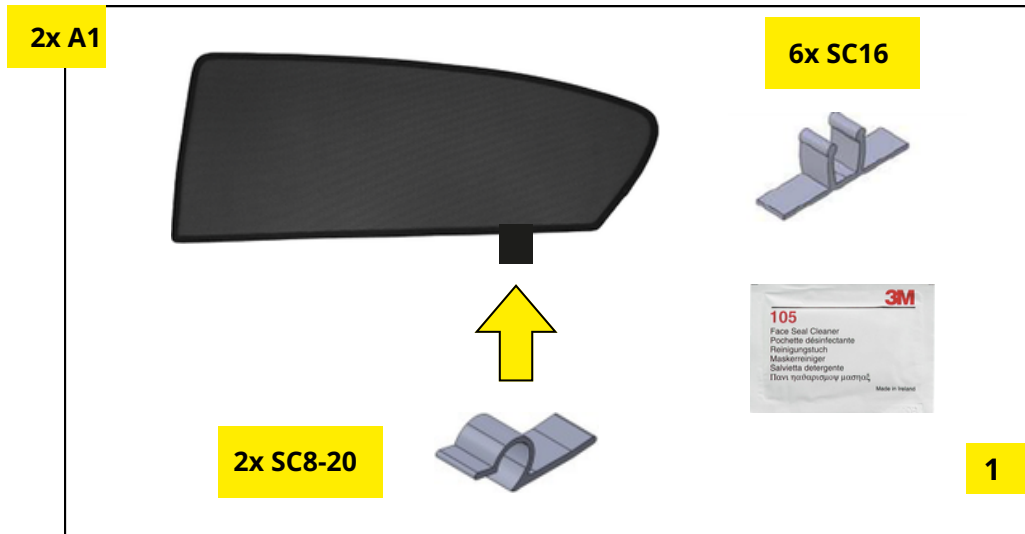

# MONTAGEANLEITUNG

sun-10469abc · BMW 1er F20/F21 2011-2018 SunClip Sonnenschutz

