


**Adapter roof
Ducato/Jumper/Boxer >2007**

➤ Instructions



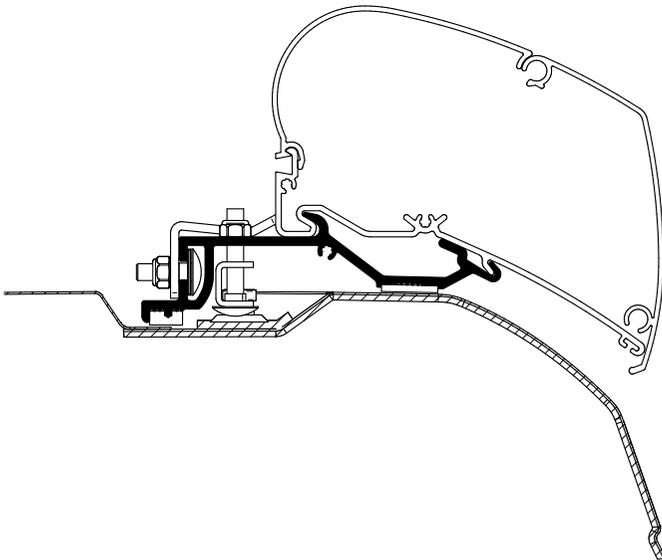


Prod no.: 301649 | 301650



Document: ADR906-04 | 3380049600

Date: 11/06/2020



Bring your life
thule.com

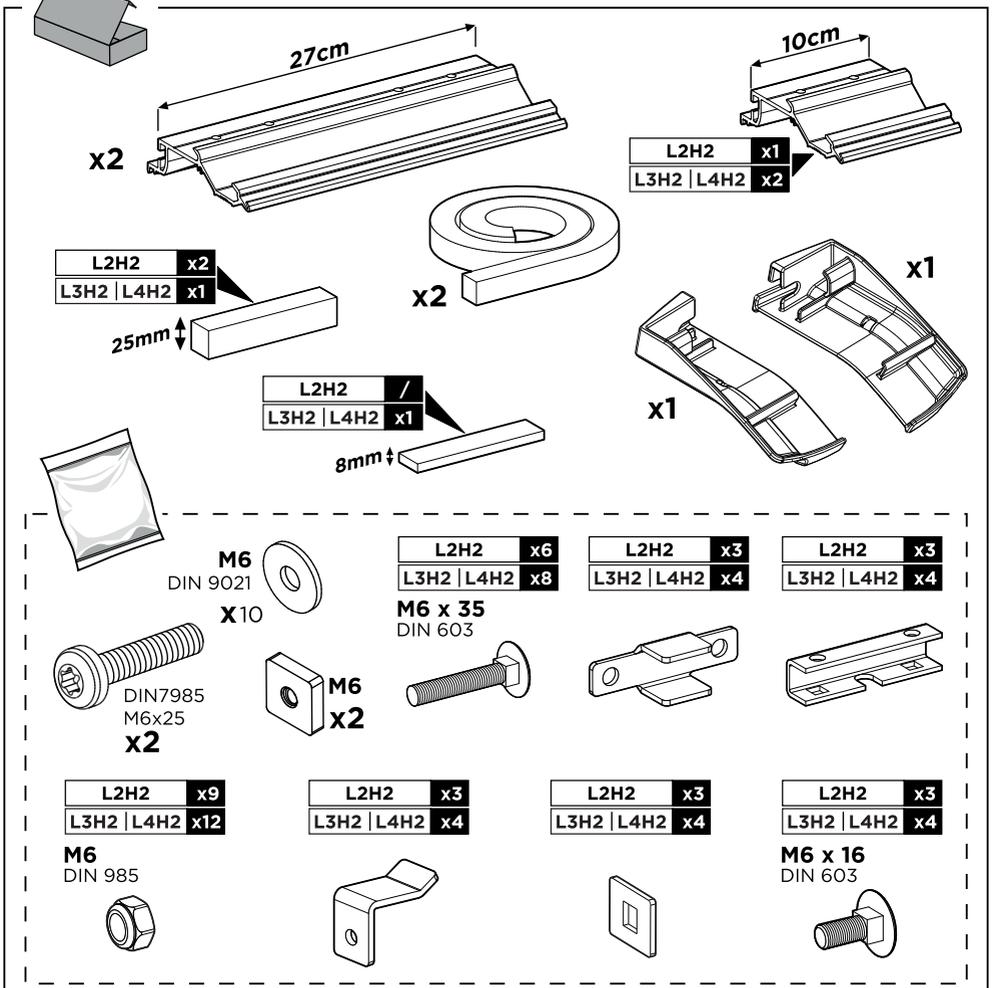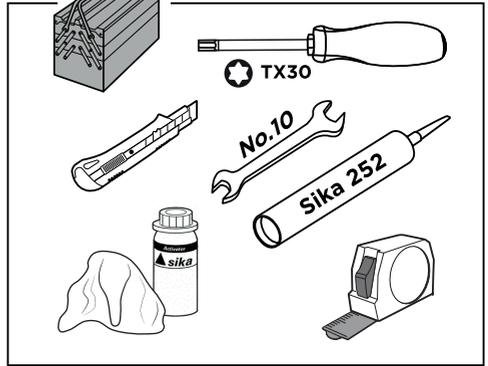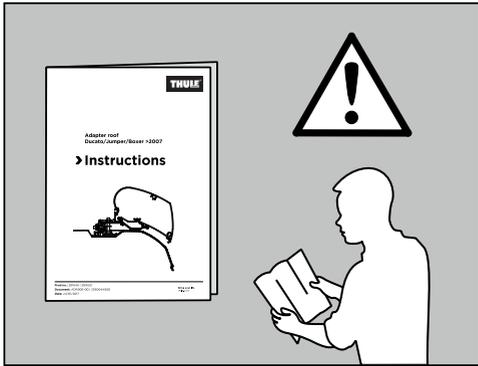



L2H2

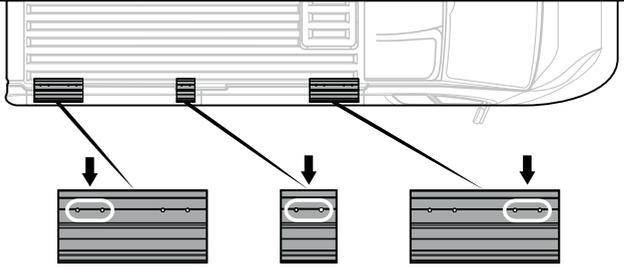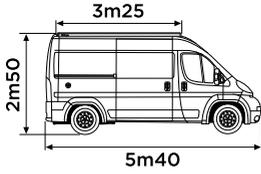




L3H2

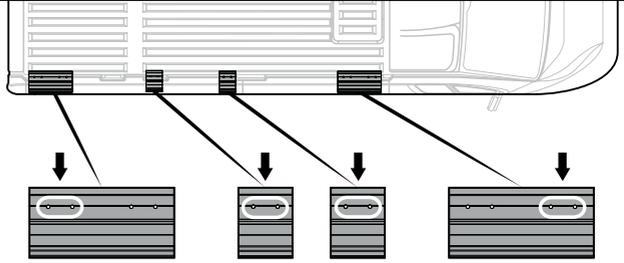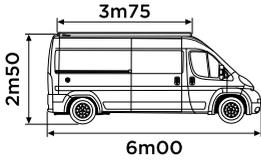

L4H2

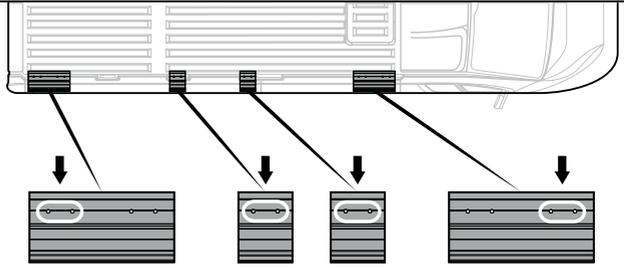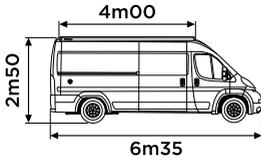


1

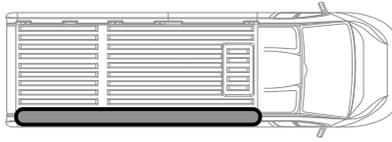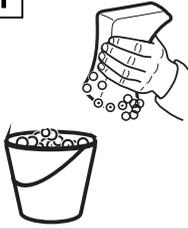

L2H2 x1
L3H2 | L4H2 x2



x2






L2H2 x6
L3H2 | L4H2 x8

L2H2 x6
L3H2 | L4H2 x8

L2H2 x3
L3H2 | L4H2 x4


L2H2 x3
L3H2 | L4H2 x4

L2H2 x6
L3H2 | L4H2 x8




2



A

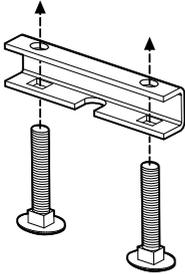


B

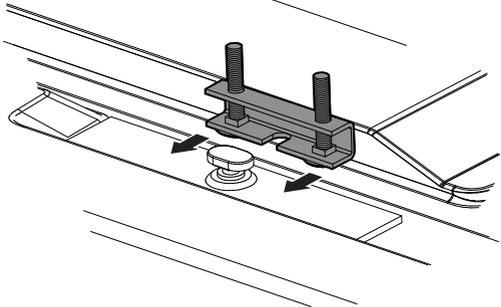

3

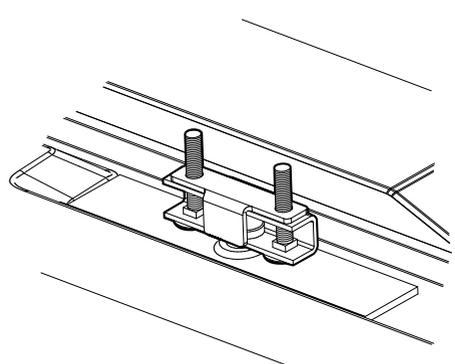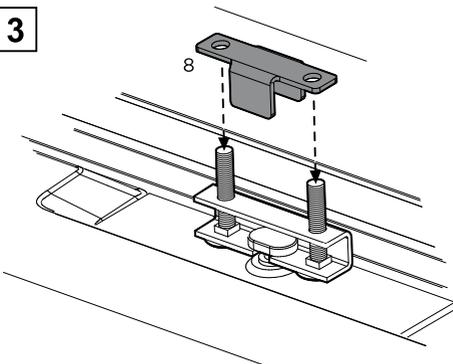

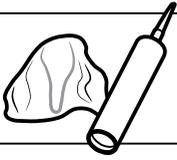

Glue / Lijmen / Verklebung:

Thule recommends / beveelt aan / empfiehlt: **SIKA 252 or Terostat MS937**

Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.


Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.

Preparation and sealing according to the prescripts of the glue supplier.





4

A

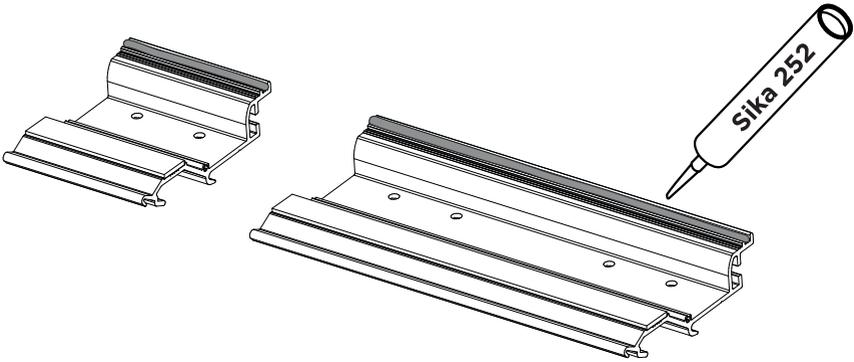

B

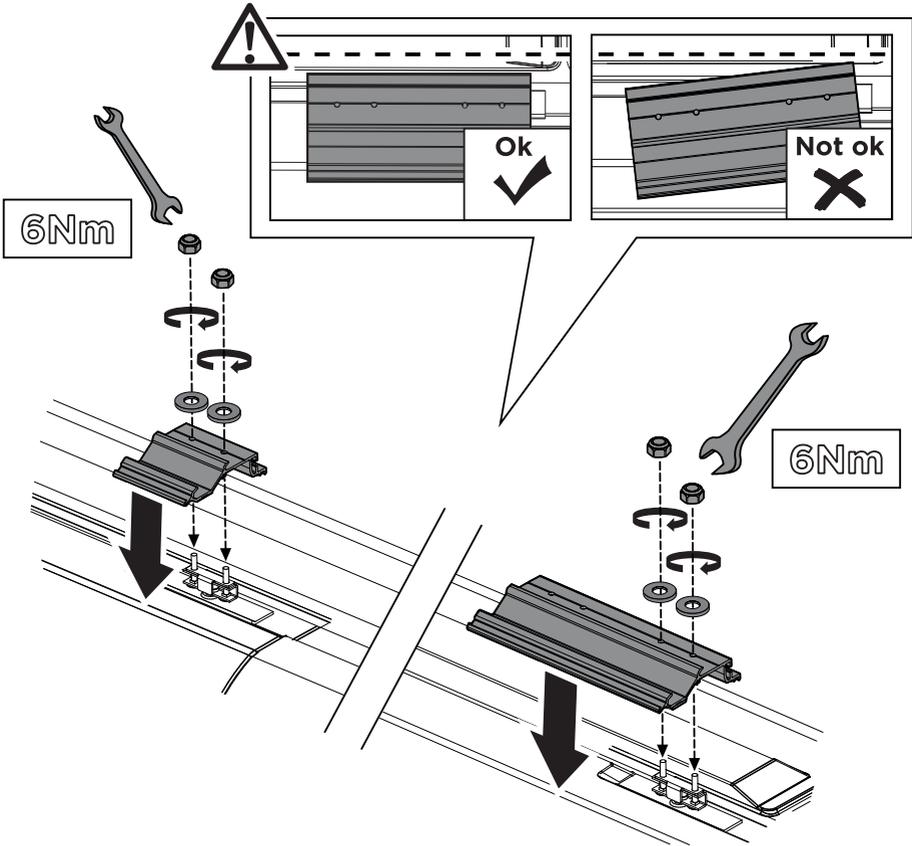

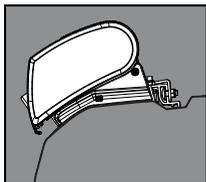


x2
M6
DIN 9021

x2
M6


L2H2	/
L3H2 L4H2	x1

8mm



x2

x2
DIN7985
M6x25

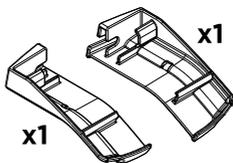

x1



L2H2	x2
L3H2 L4H2	x1

25mm



1

A


OPTIONAL LED

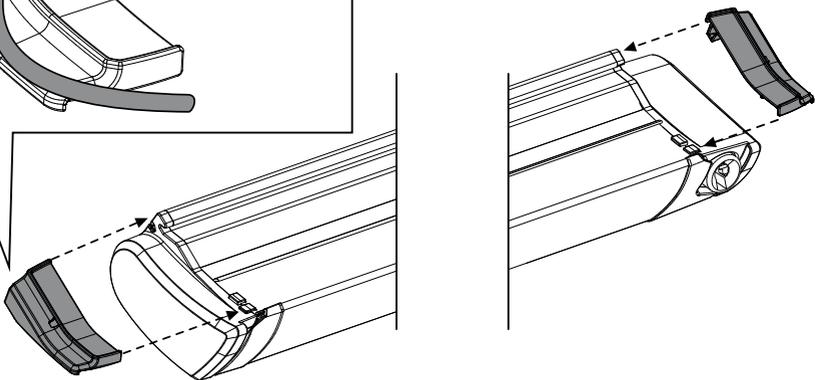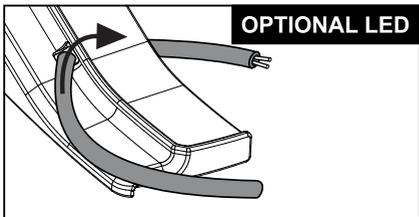



B

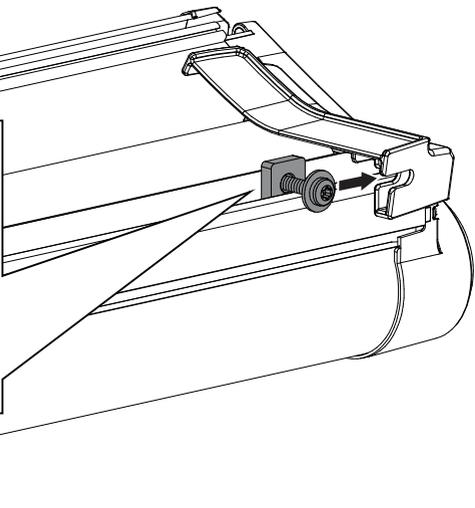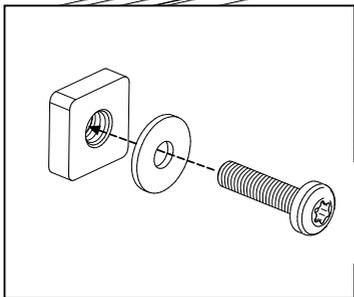


C

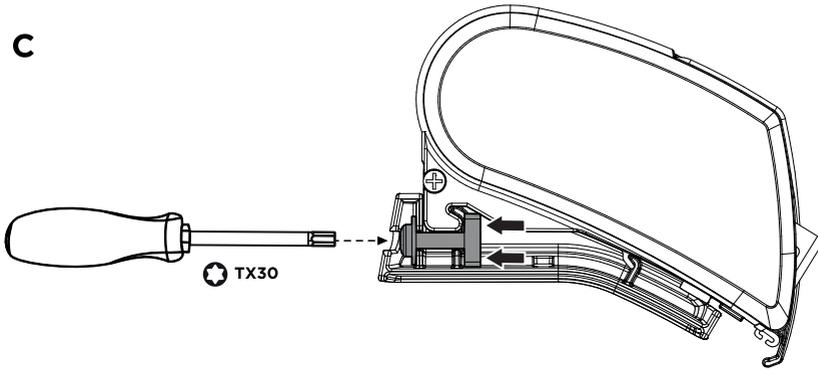


i




L2H2

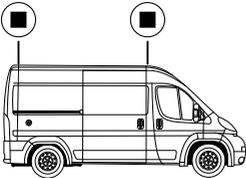



L3H2

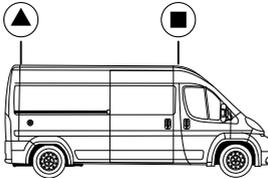

L4H2

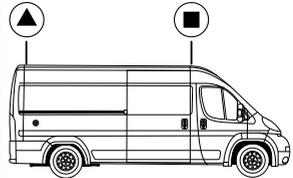


2

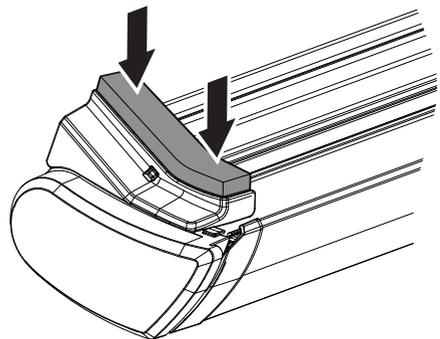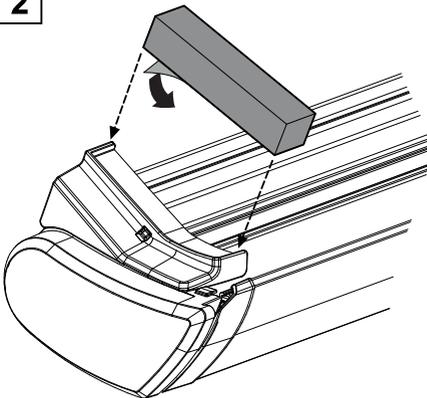



3

A

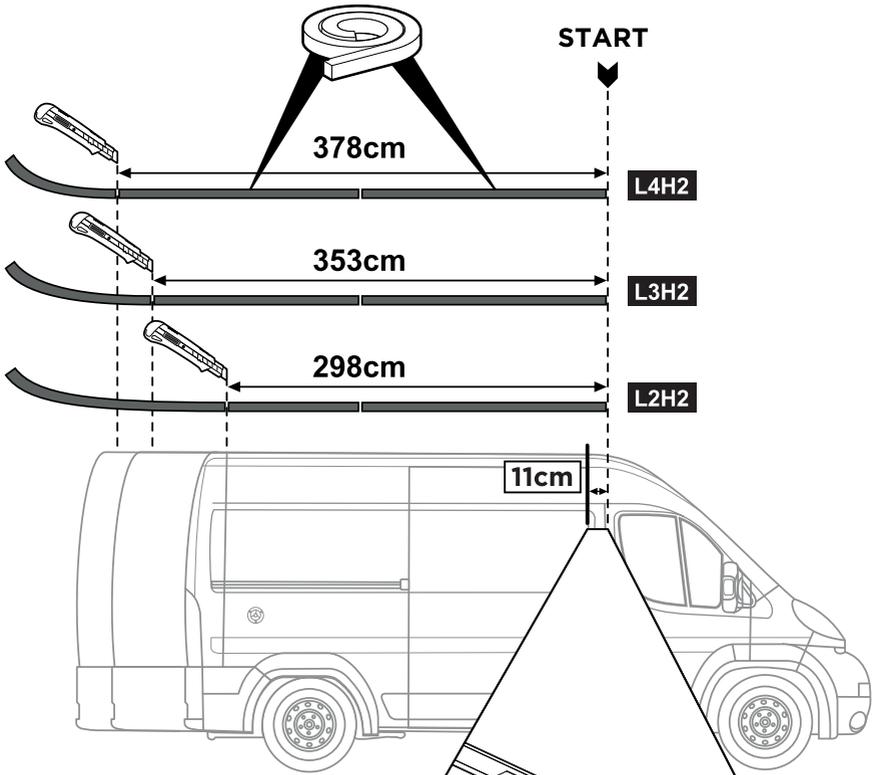

B

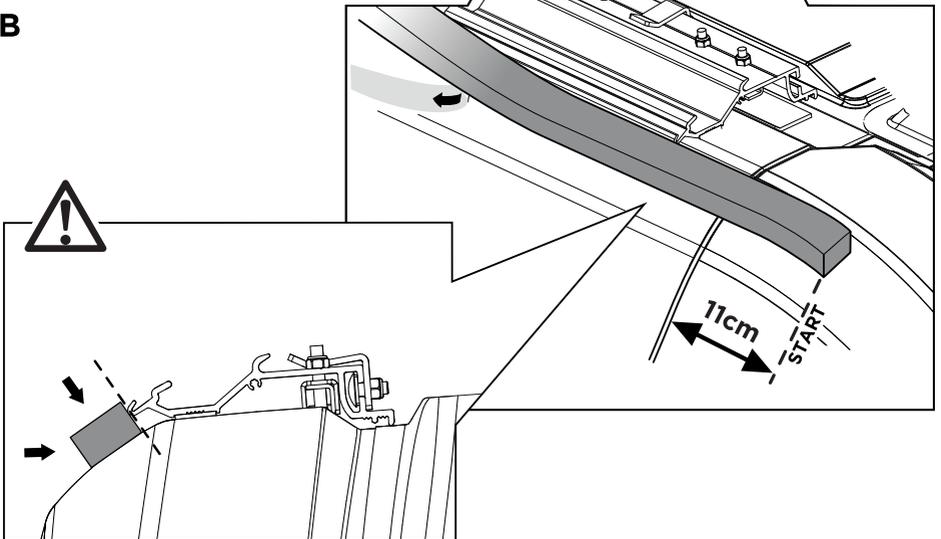

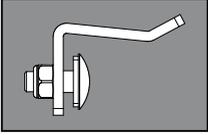

L2H2 x3
L3H2 | L4H2 x4



L2H2 x3
L3H2 | L4H2 x4



L2H2 x3
L3H2 | L4H2 x4




L2H2 x3
L3H2 | L4H2 x4




1



A

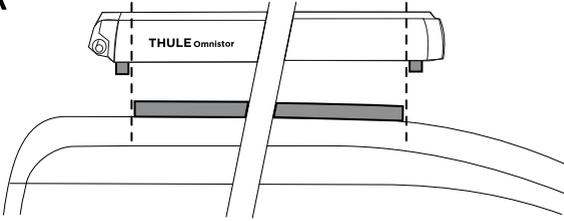

B

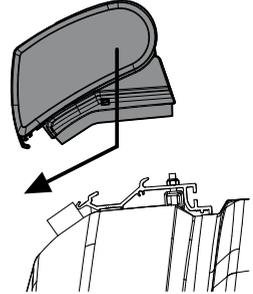

2

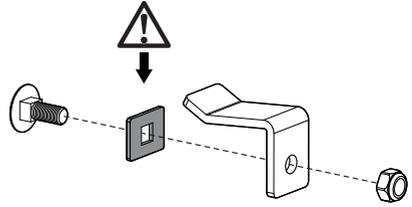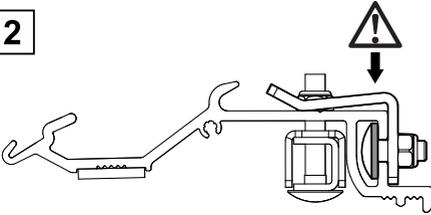

3

