


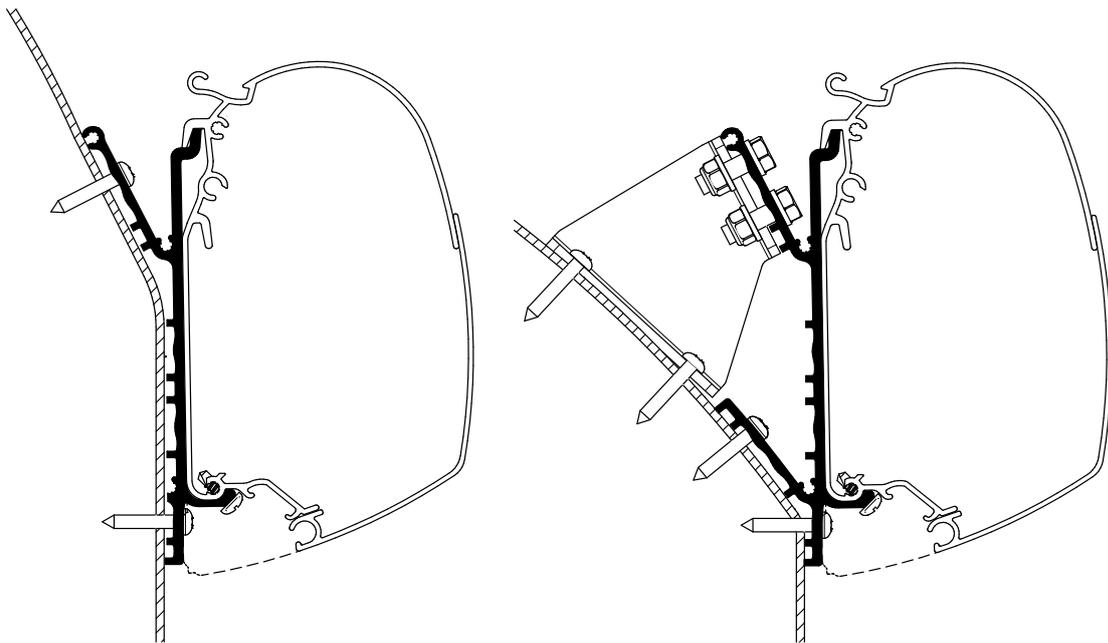
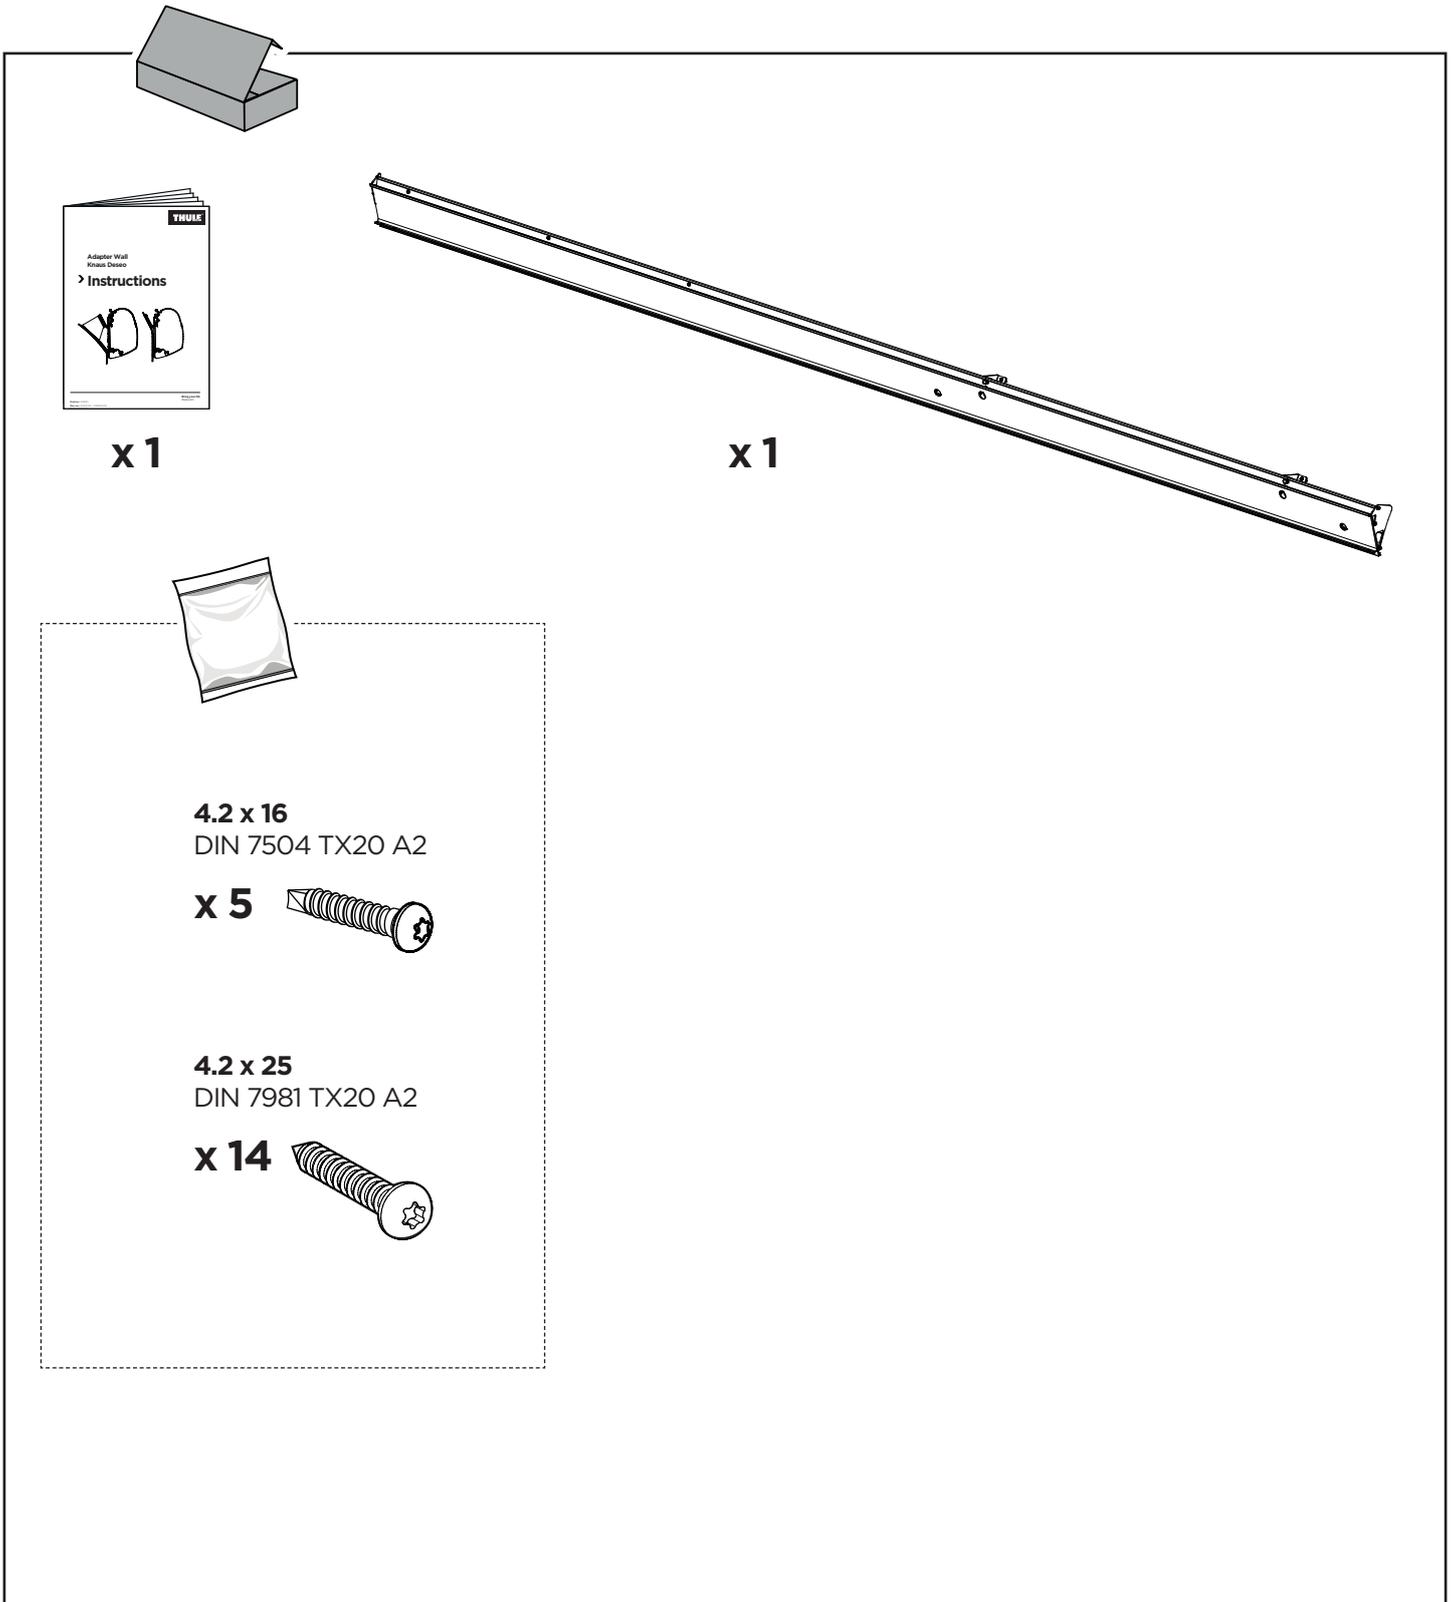
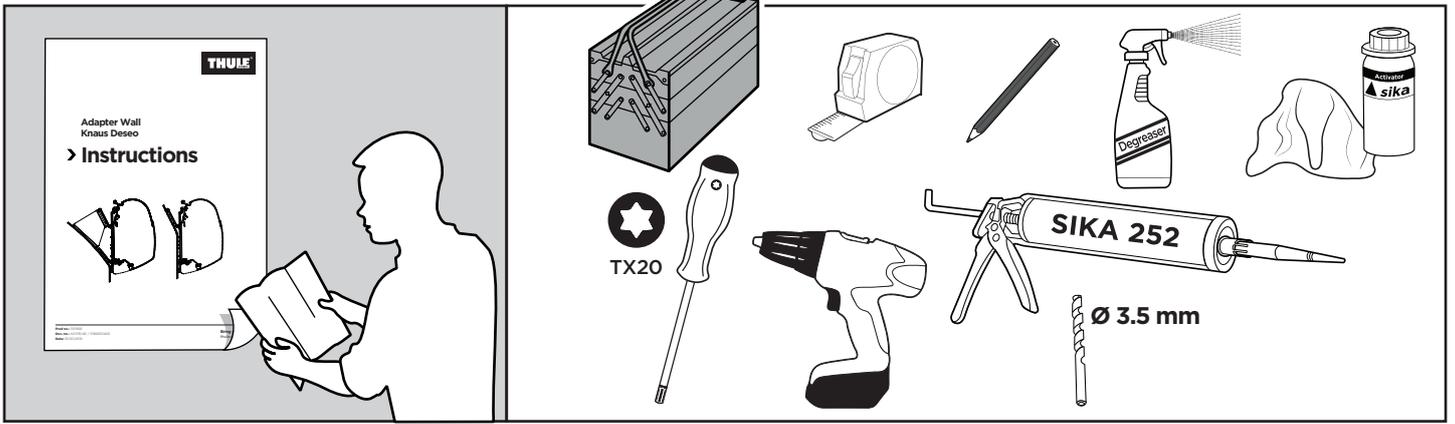


Adapter Wall Knaus Deseo


➤ Instructions

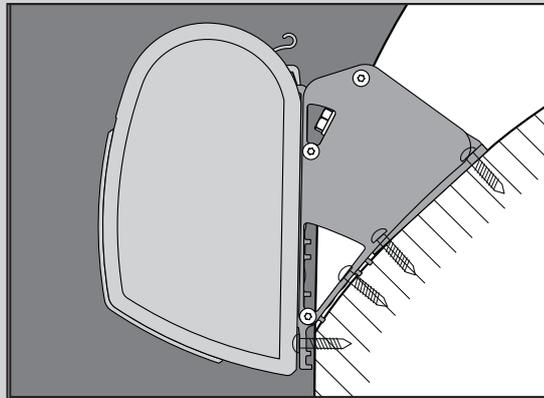

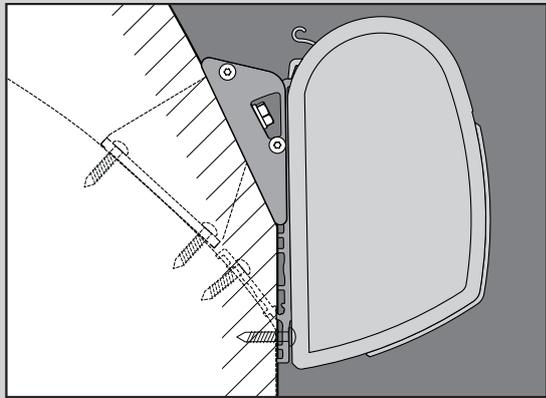


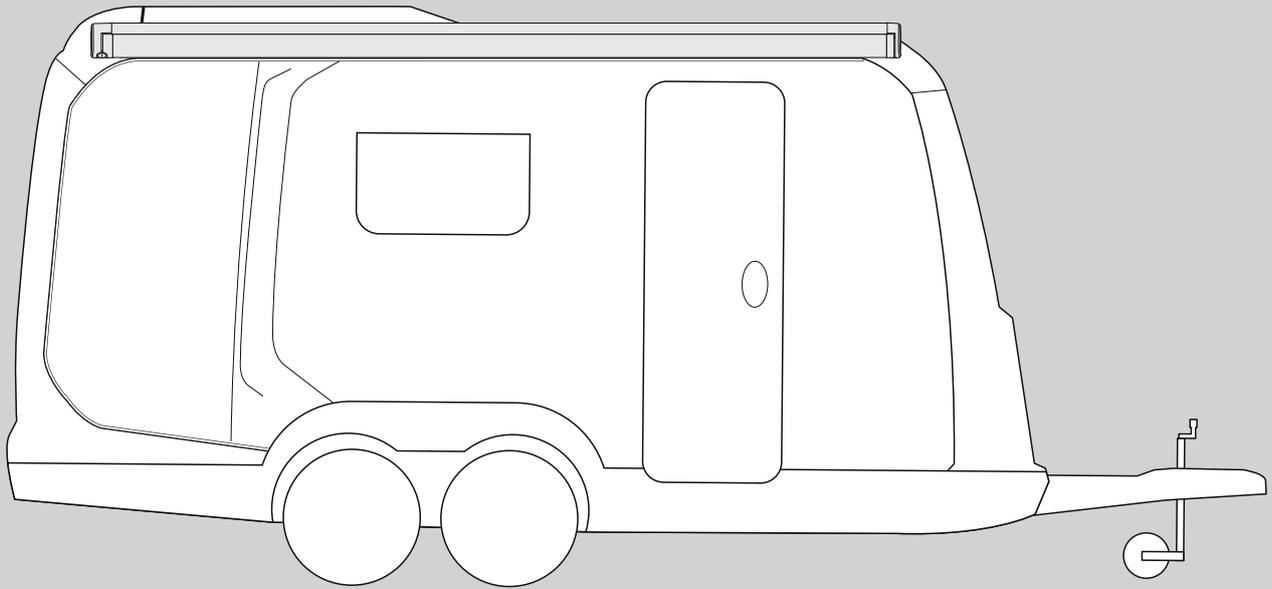


1 Measure

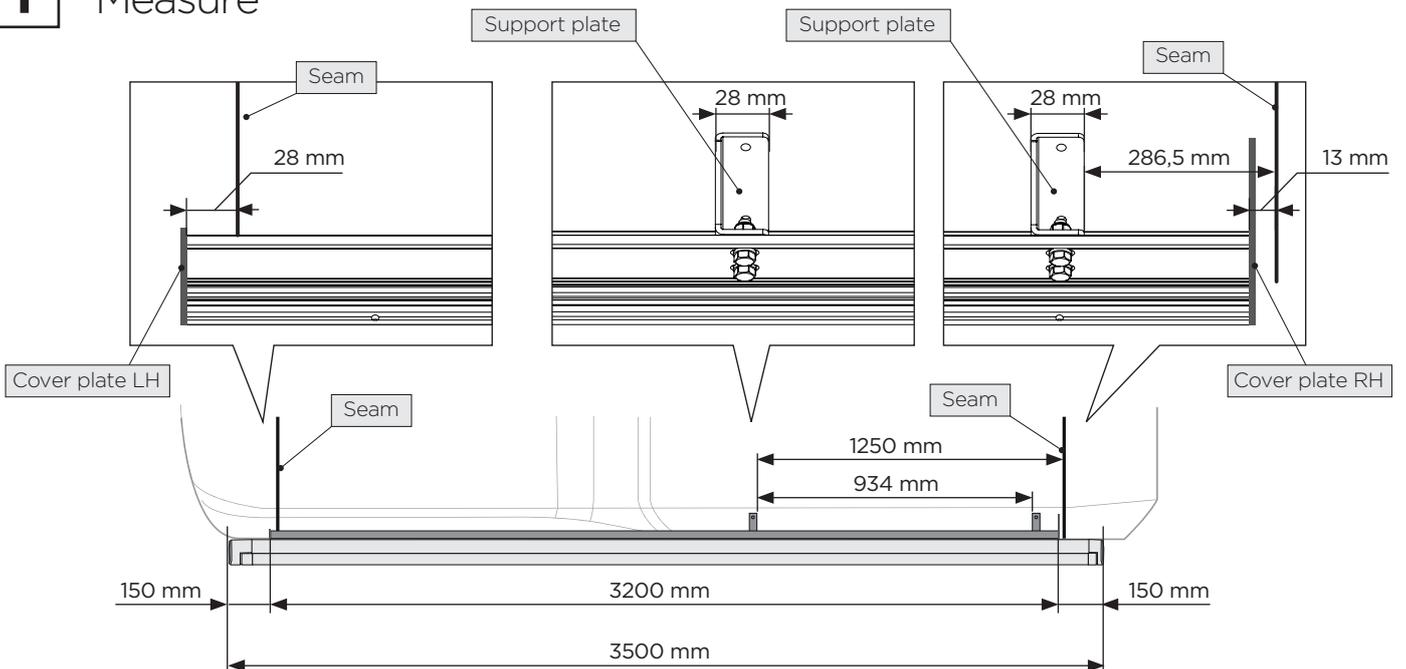






2 Position de adapter + support plates on the caravan

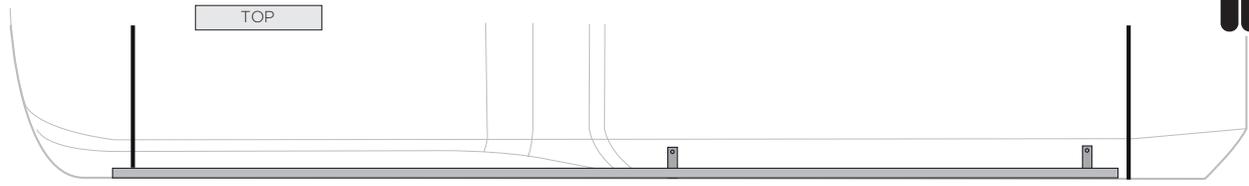


FRONT

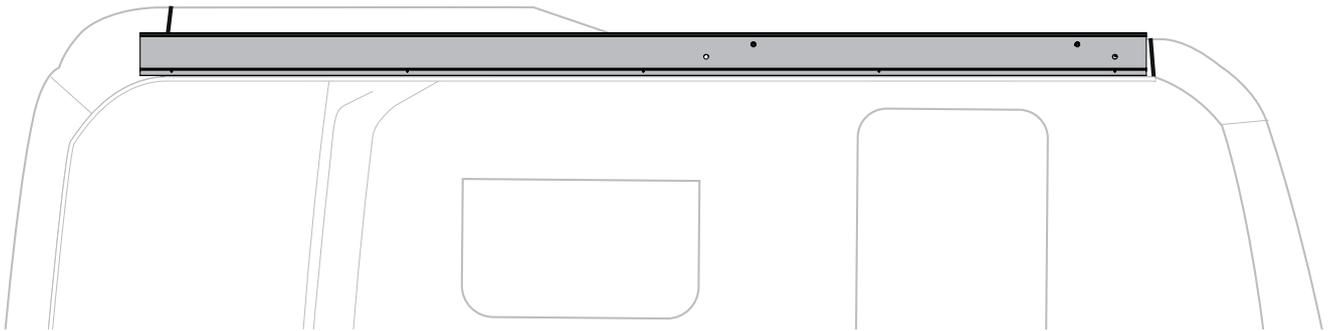


3 Mark the holes (4) for the support plates

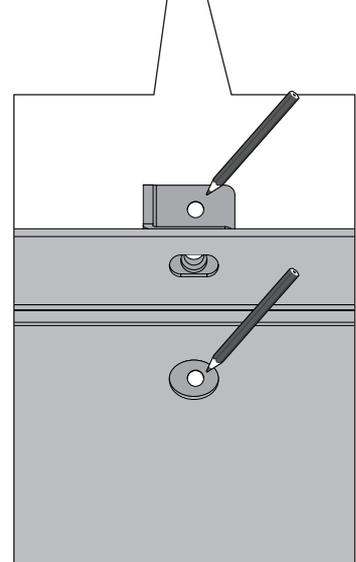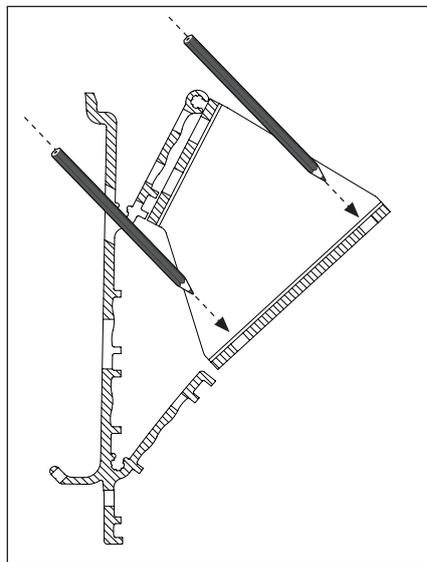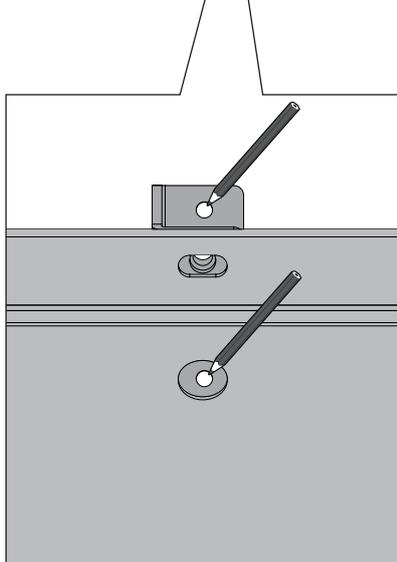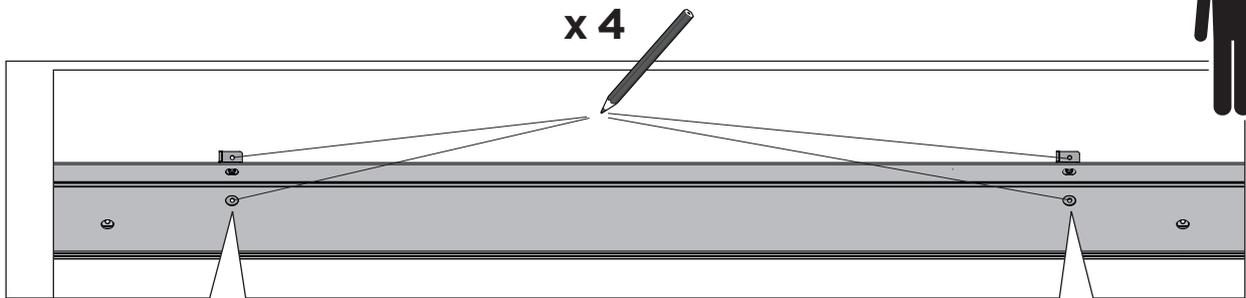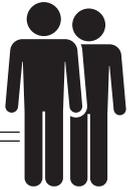


4 Mark the holes (10) for the adapter plate

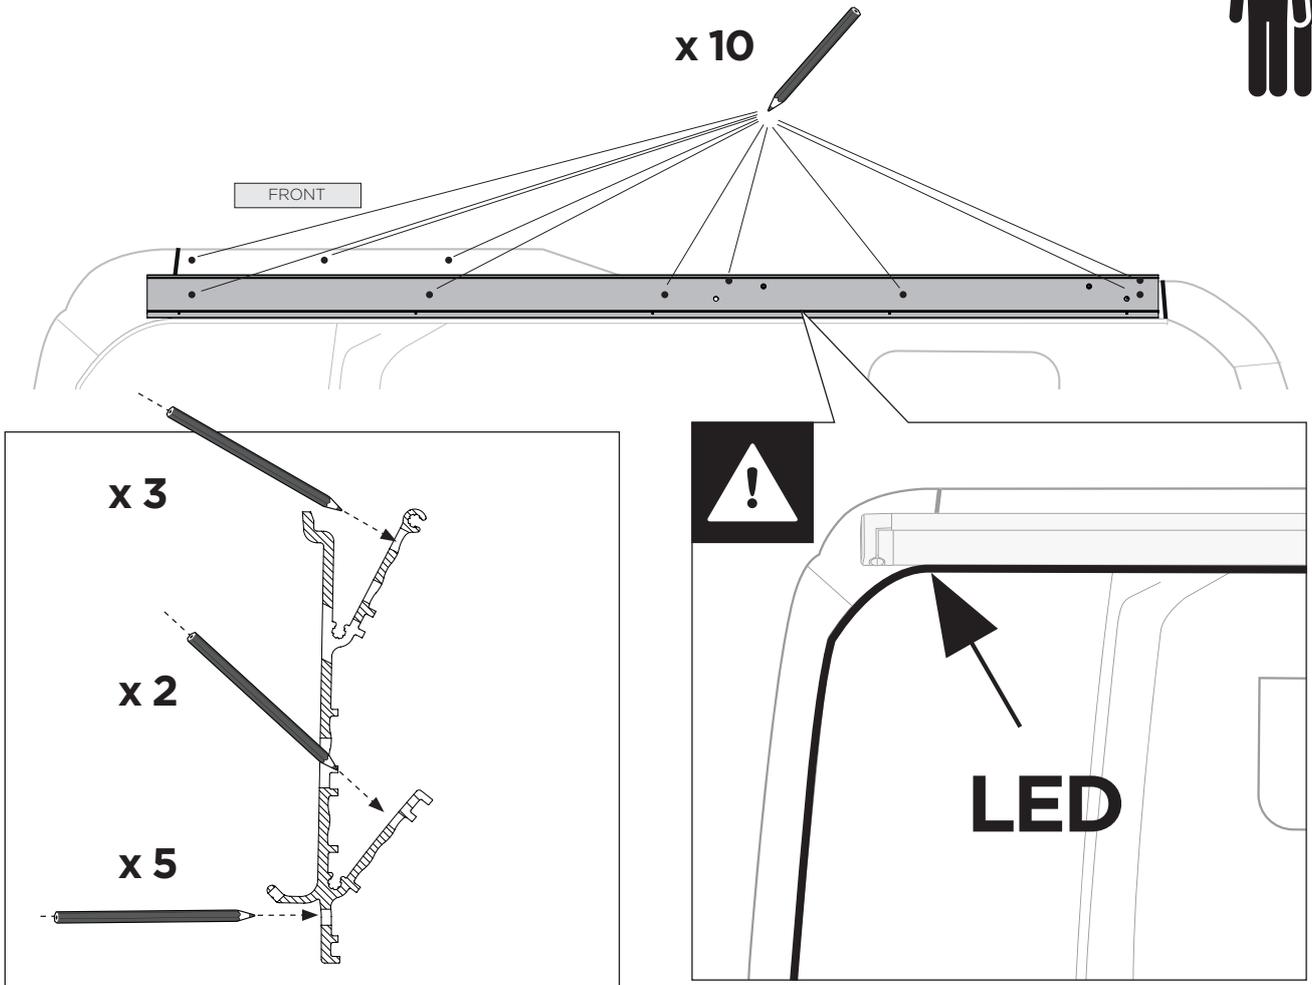


5 Predrill the holes (4) for the support plates

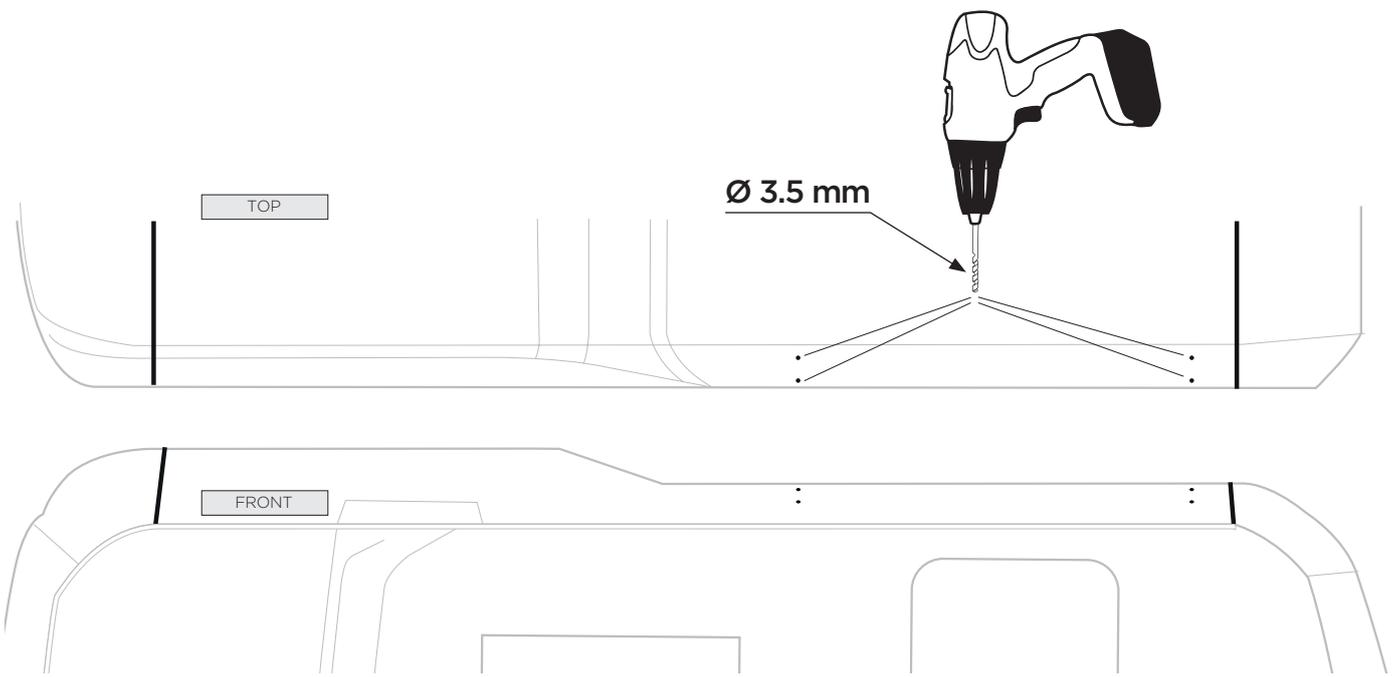


6 Predrill the holes (10) for the adapter plate

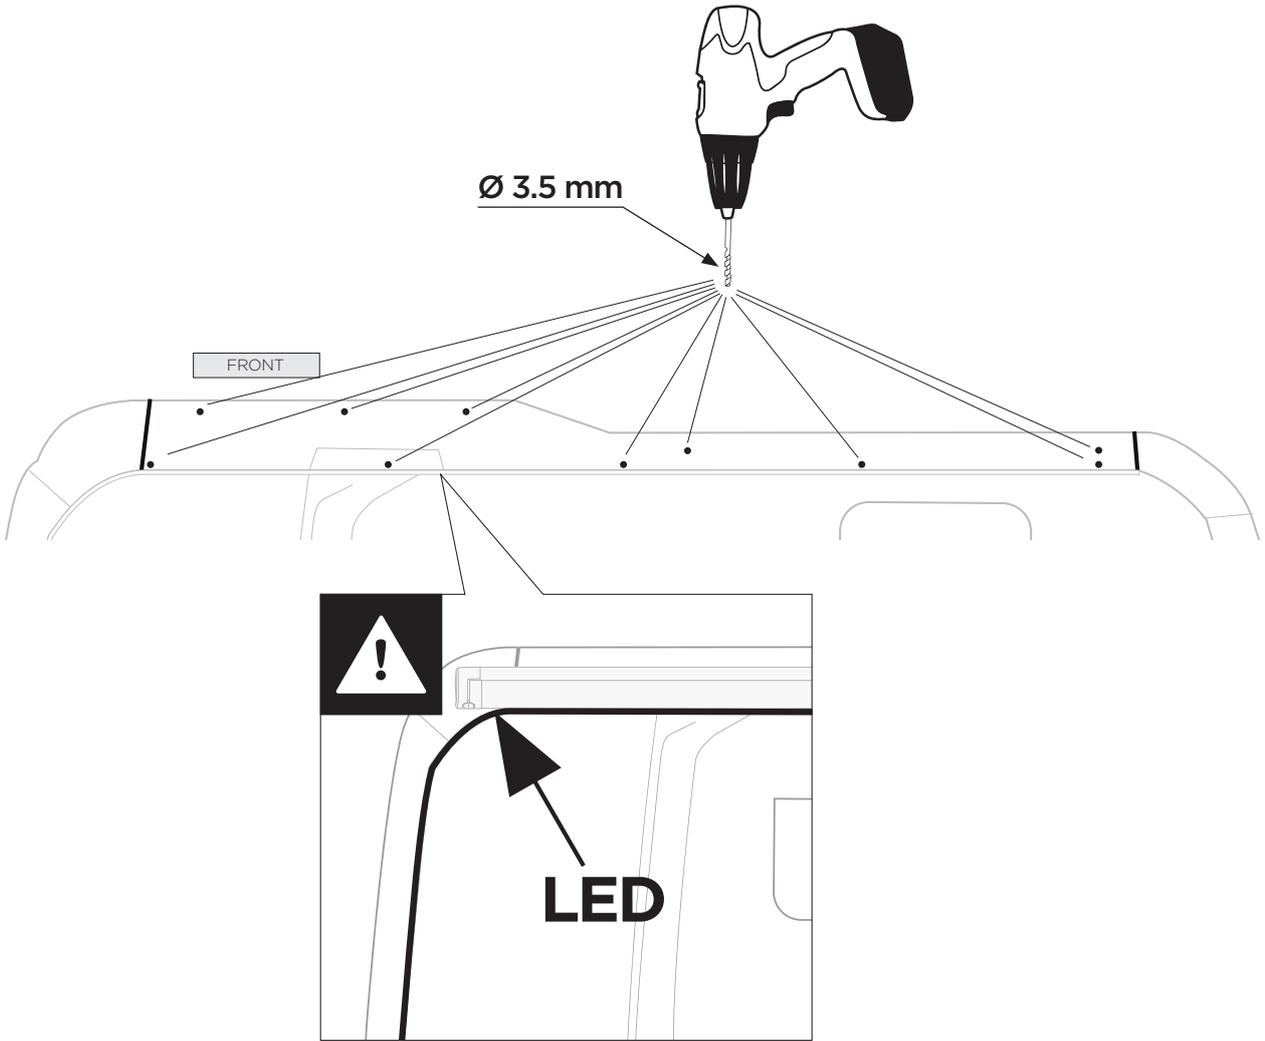

7 Clean, degrease the surface (caravan), the support plates and the adapter surface.

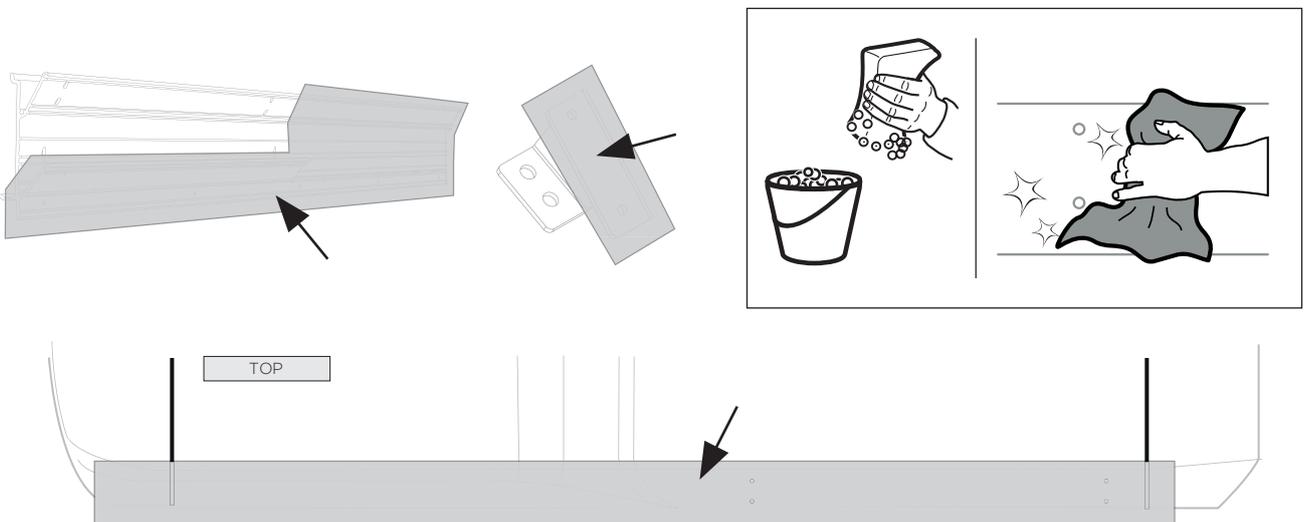

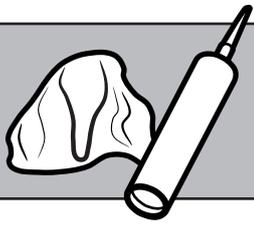


Glue / Lijmen / Verklebung:

Thule recommends / beveelt aan / empfiehlt: **SIKA 252 or Terostat MS937**

Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.


Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.

Preparation and sealing according to the prescripts of the glue supplier.

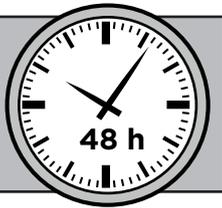


8 Provide glue in the pre-drilled holes

A

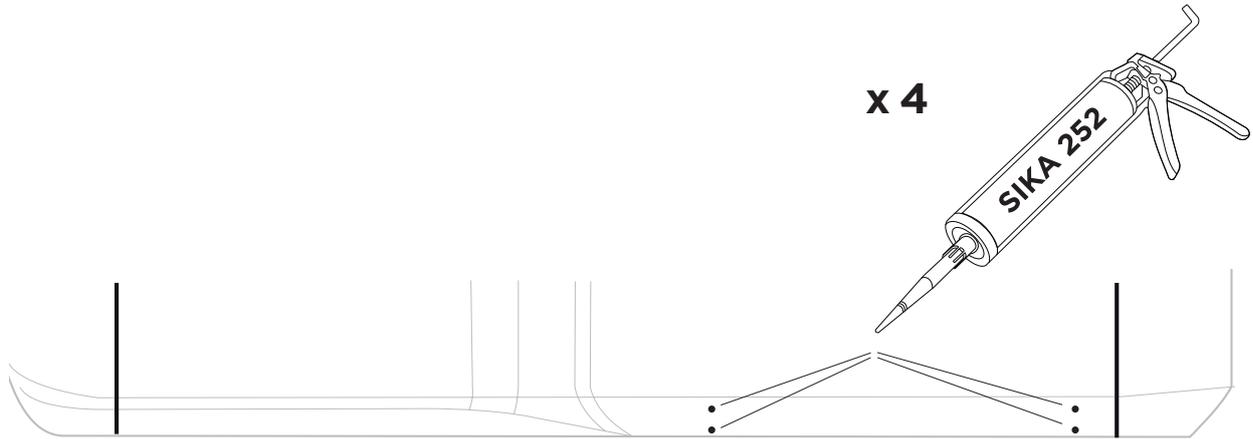


B

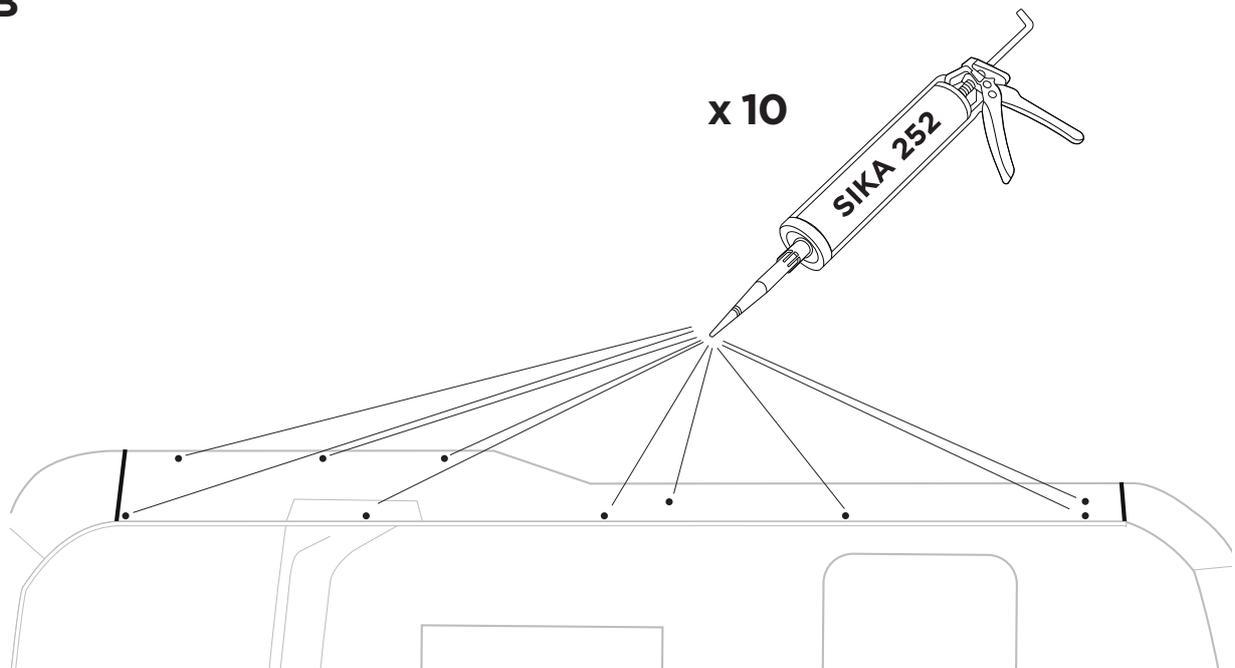


9 Gluing

A Gluing the adapter

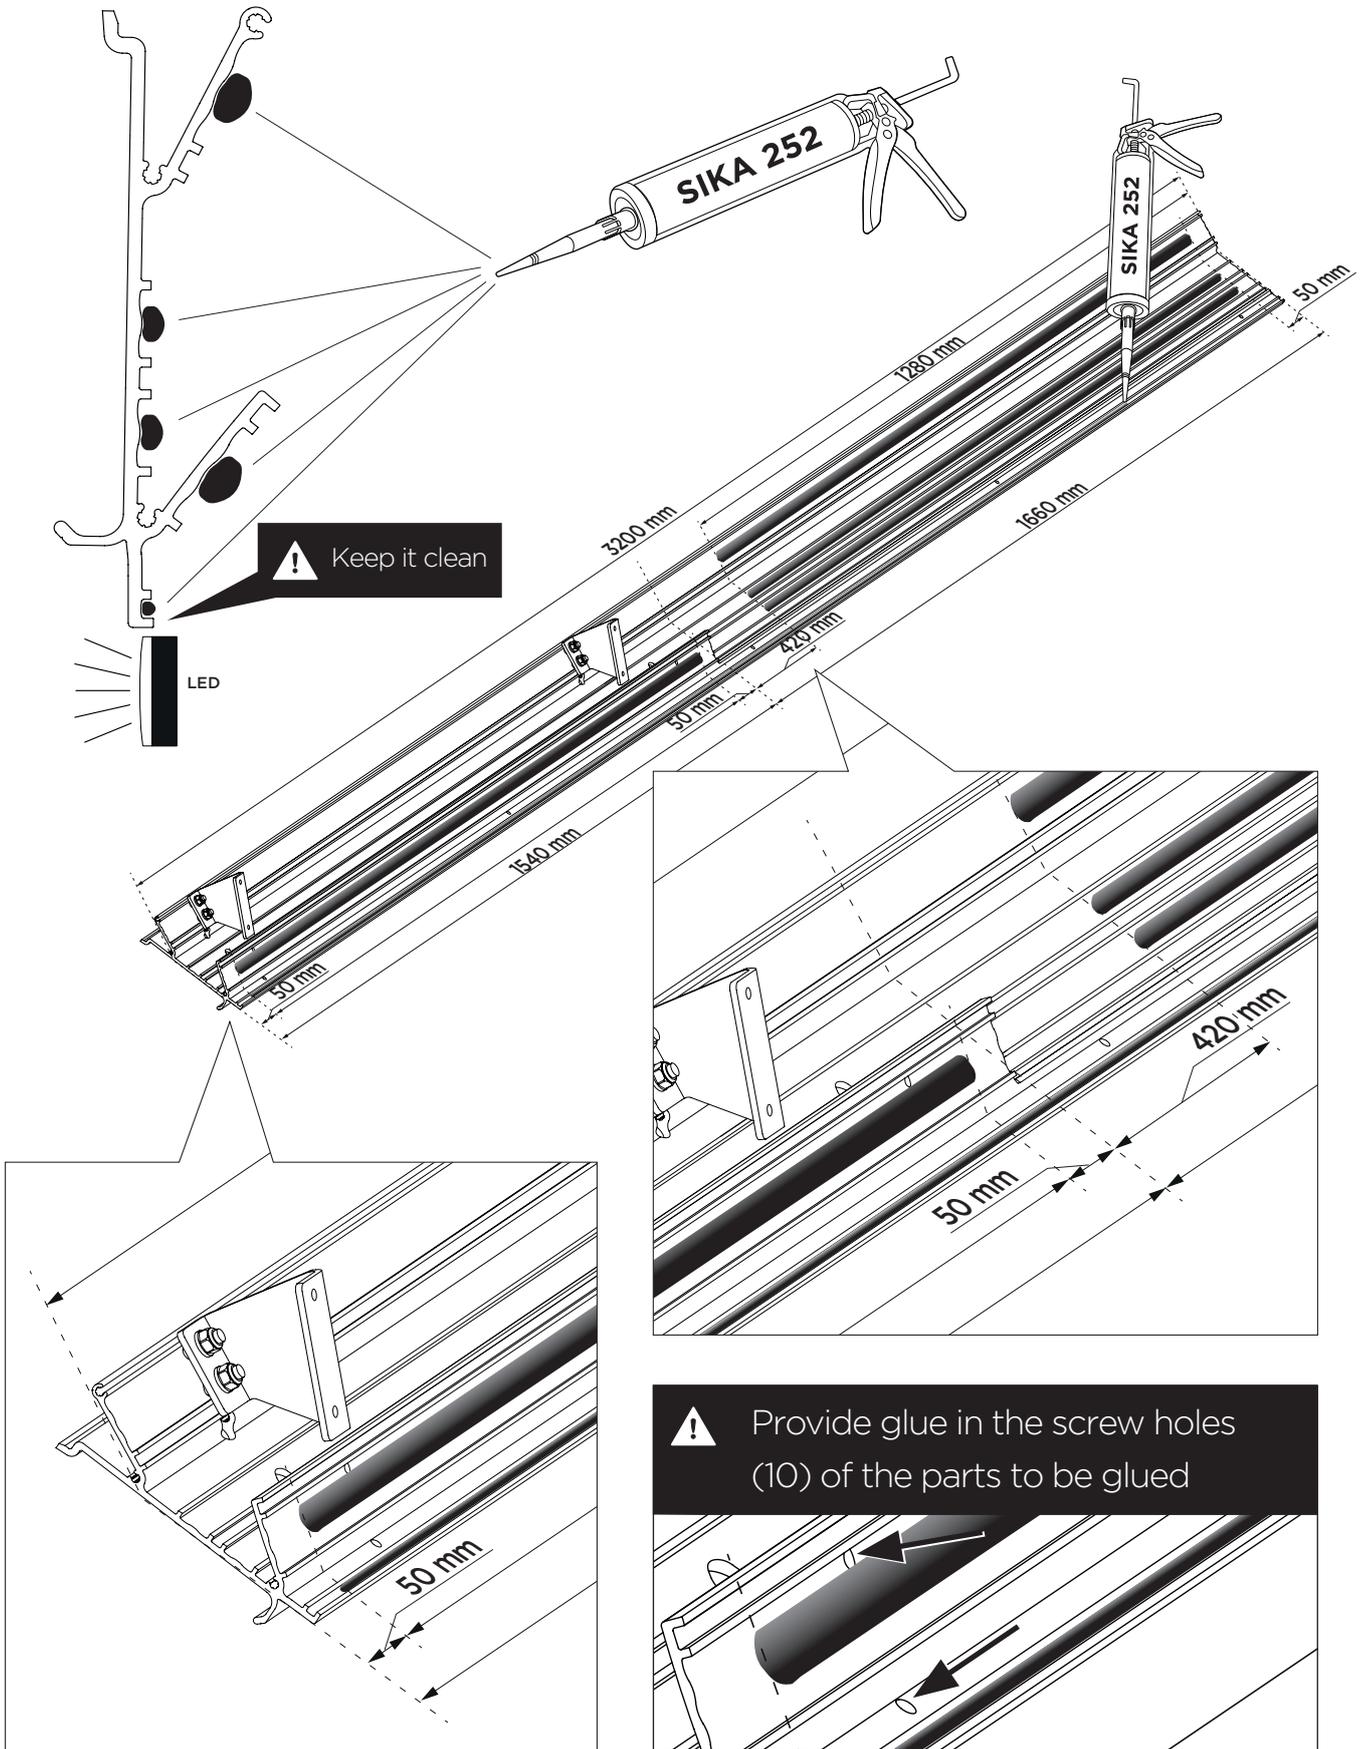

B Gluing the support plates

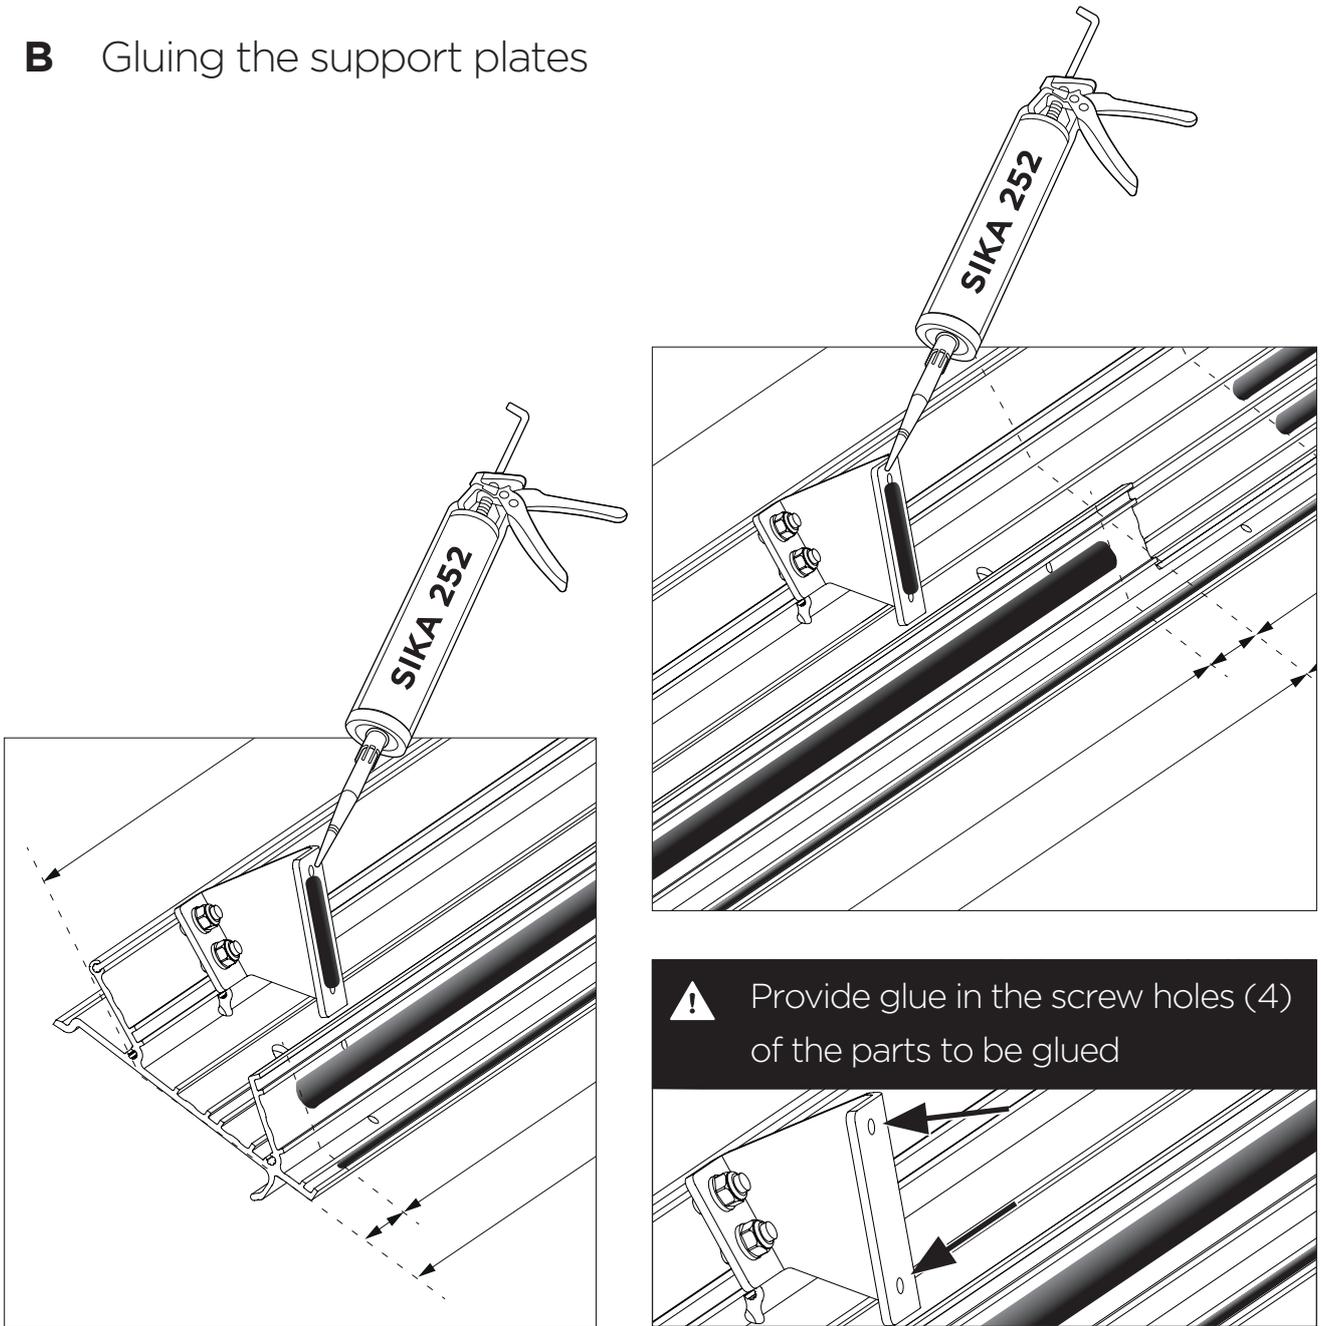


10


Place the adapter and fix with the screws




A

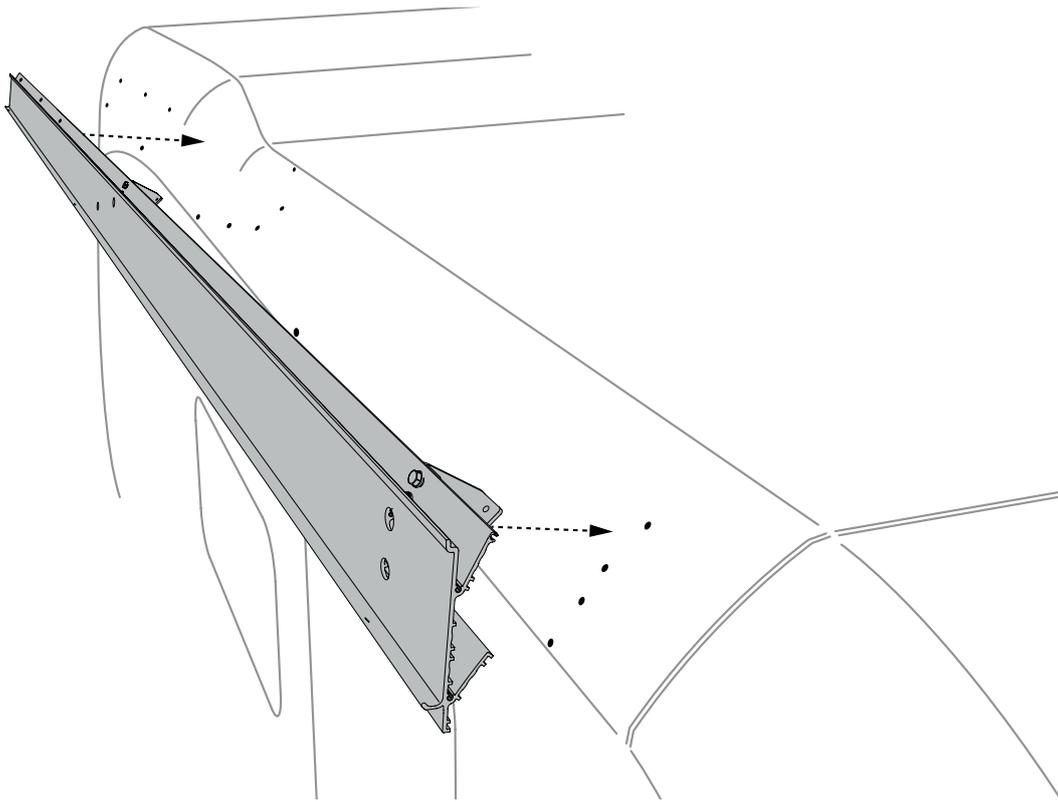

B

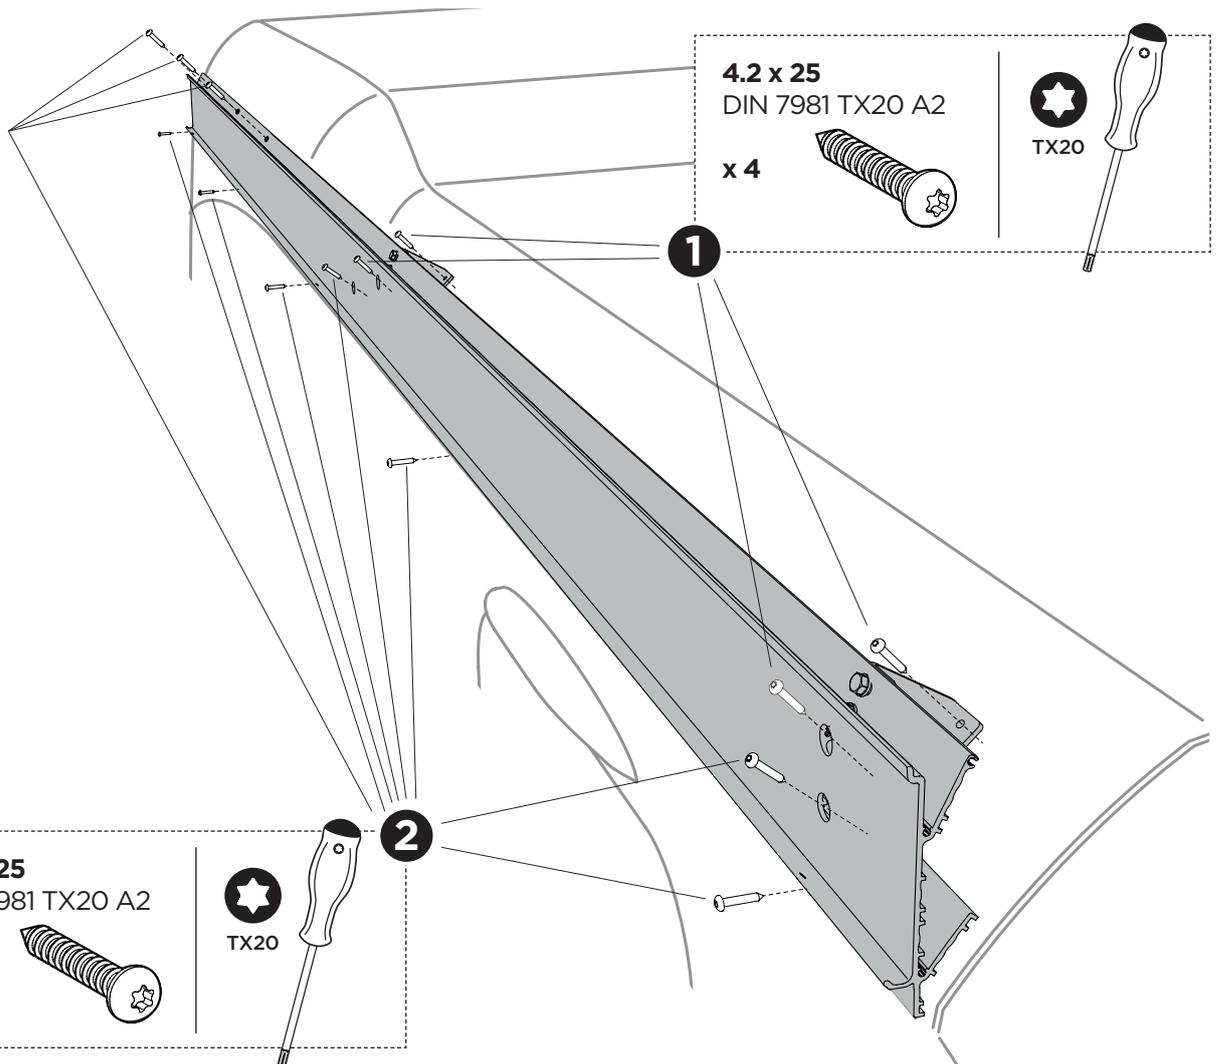


11 Place the awning

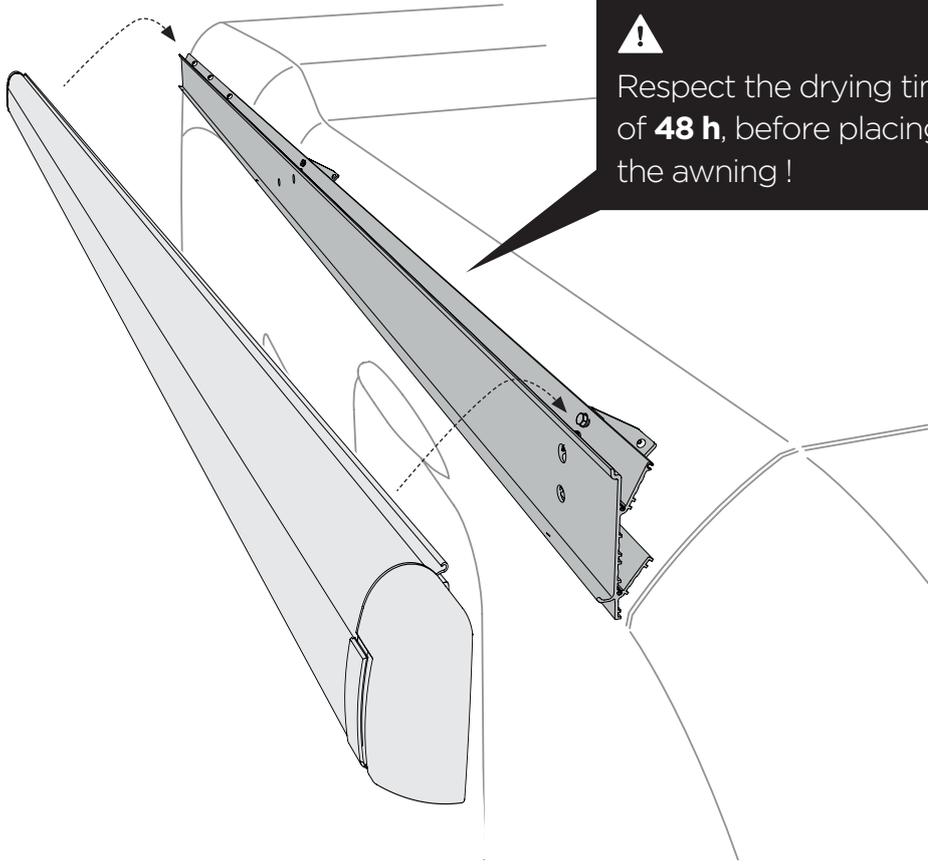


!
Respect the drying time
of **48 h**, before placing
the awning !

12 Place the awning and fix with the screws (5)

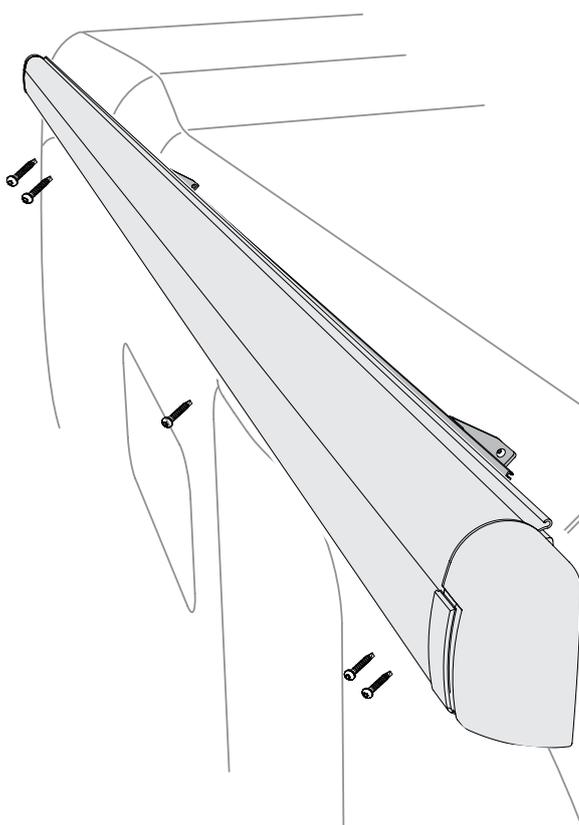

4.2 x 16
DIN 7504 TX20 A2

x 5



TX20

