


USER & INSTALLATION

➤ Instructions

Thule ProBar Fixpoint EVO High / Low - 1.50 m

303120 / 303121



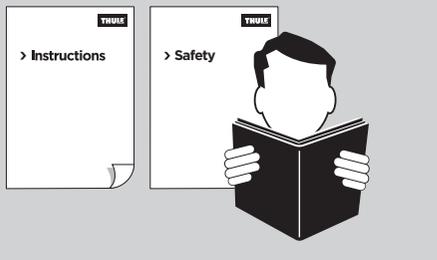

DE	Zubehör - Anleitung
NL	Accessoire - Instructies
FR	Accessoire - Instructions
IT	Accessori - Istruzioni
ES	Accesorio - Instrucciones
SV	Tillbehör - Instruktioner
FI	Lisävarusteet - Ohjeet
DA	Tilbehør - Instruktioner
NO	Tilbehør - Instruksjoner

PL	Aksesorium - Instrukcje
PT	Acessório - Instruções
CS	Príslušenství - Návod
SL	Dodatna oprema - Navodila
TR	Aksesuar - Talimatlar
ZH	配件 - 说明
JA	アクセサリ - 取扱説明書
KO	액세서리 - 지침

1 WARNINGS & INFO

5

Warnungen & Infos / Waarschuwingen & info / Avertissements & informations / Avvertenze & informazioni / Advertencias & información / Varningar & information / Varoituksia & tietoja / Advarsler & info / Advarsler & information / Ostrzeżenia & informacja / Avisos e informações / Varování a informace / Opozorila in informacije / Uyarılar ve Bilgiler / 警告和信息 / 警告と情報 / 경고 및 정보

2 CONTENT

9

Inhalt / Inhoudsopgave / Sommaire / Contenuto / Contenido / Innehåll / Sisällys / Indhold / Innhold / Treść / Índice / Obsah / Kazalo / İçerik / 目录 / 目次 / 목차

3 TOOLS

10

Werkzeuge / Gereedschappen / Outils / Strumenti / Herramientas / Verktøy / Työkalut / Værktøj / Verktøy / Narzędzia / Ferramentas / Nářadí / Orodja / Aletler / 工具 / ツール / 도구

4 FITGUIDE

11

Kaufhilfe / Koopgids / Guide de sélection / Guida alla scelta / Guía de ajuste / Storleksguide / Valintaopas / Tilpasningsguide / Tilpasningsveiledning / Przewodnik Fit Guide / Guia de compatibilidade / Průvodce velikostí / Fitguide / Takma Kilavuzu / 选配指南 / フィッティングガイド / 장착 가이드

5 INSTALLATION KIT

12

Montage des Kit / Installatie van de kit / Installation du Kit / Installazione del Kit / Instalación del Kit / Montering av Kit / Kiinnityssarja asennus / Montering af sættet / Montering av settet / Montaż zestawu / Instalação do kit / Montáž sady / Namestitev kompleta / Kitin montaji / 套件的安装 / キットの取り付け / 키트 설치

6 INSTALLATION ROOF RACK

13

Montage des Dachträger / Installatie van de Dakdrager / Installation des Barres de toit / Installazione del Portatutto / Instalación del Barra de techo / Montering av Takracket / Kattotelineen asennus / Montering af Tagbøjlen / Montering av Takstativet / Montaż bagażnika dachowego / Instalação das barras de tejadilho / Montáž střešních nosičů / Namestitev strešnega prtljažnika / Tavan rafinin montaji / 安装车顶行李架 / ルーフラックの取り付け / 루프랙 장착

7 REMOVE ROOF RACK

19






Entfernen des Dachträger / Verwijderen van de Dakdrager / Retirer des Barres de toit / Rimuovere il Portatutto / Eliminar del Barra de techo / Ta bort Takracket / Kattotelineen poisto / Afmontering af Tagbøjlen / Fjerning av Takstativet / Demontaż bagażnika dachowego / Remover as barras de tejadilho / Demontáž střešních nosičů / Odstranitev strešnega prtljažnika / Tavan rafini çıkarma / 卸下车顶行李架 / ルーフラックの取り外し / 루프랙 제거


8 USE ROOF RACK

21





Gebrauch des Dachträger / Gebruik van de Dakdrager / Utiliser des Barres de toit / Utilizzando un Portatutto / Usar del Barra de techo / Använda Takracket / Kattotelineen käyttöä / Anvendelse af Tagbøjlen / Bruk av Takstativet / Zastosowanie bagażnika dachowego / Utilizar as barras de tejadilho / Používat střešní nosiče / Uporabljajte strešne prtljažnike / Tavan rafları kullan / 使用车顶行李架 / ルーフラックを使用する / 루프랙을 사용하다

1 WARNINGS & INFO

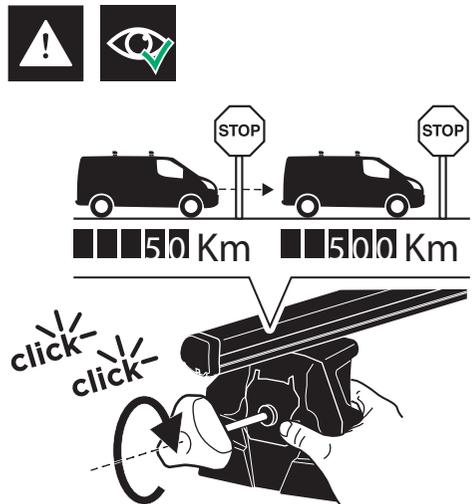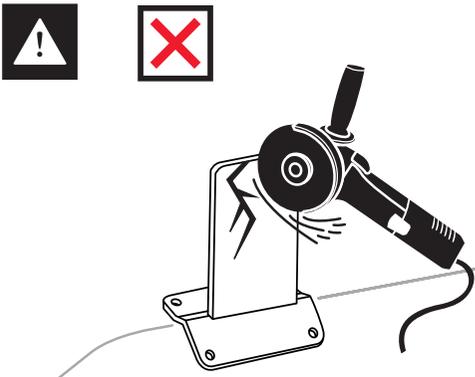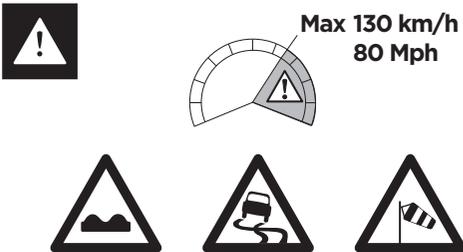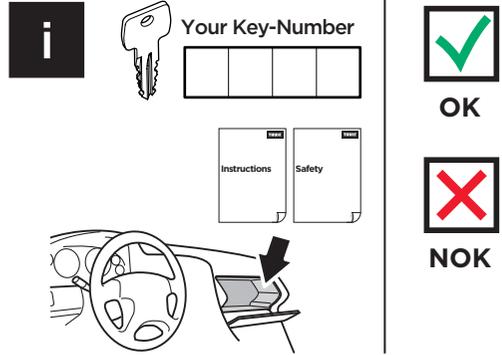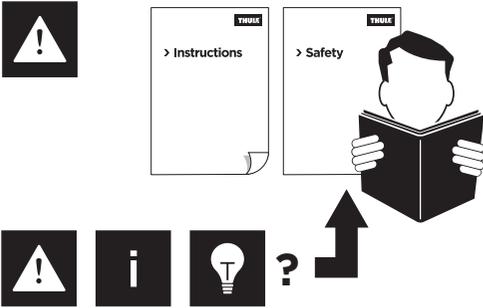


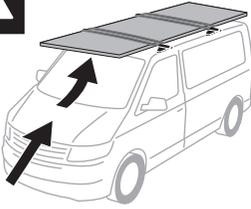


80 km/h
50 Mph

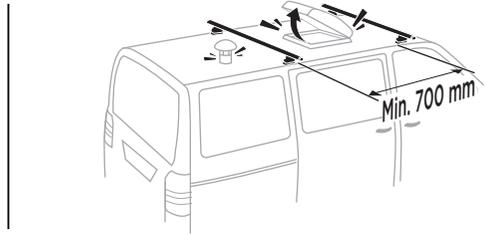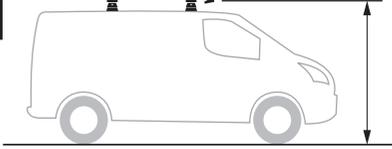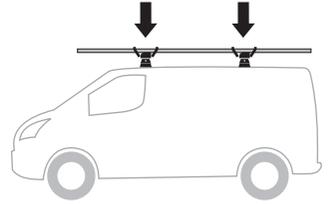
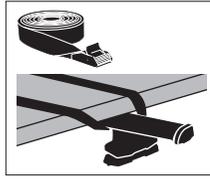


LOW 303121





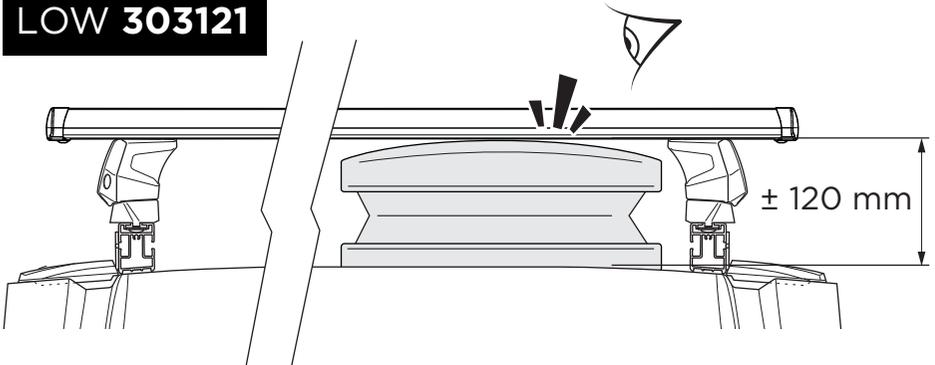


HIGH 303120

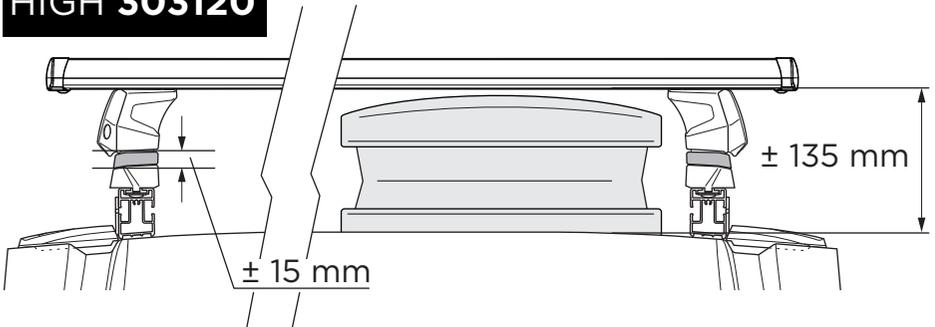

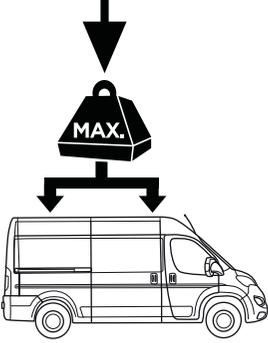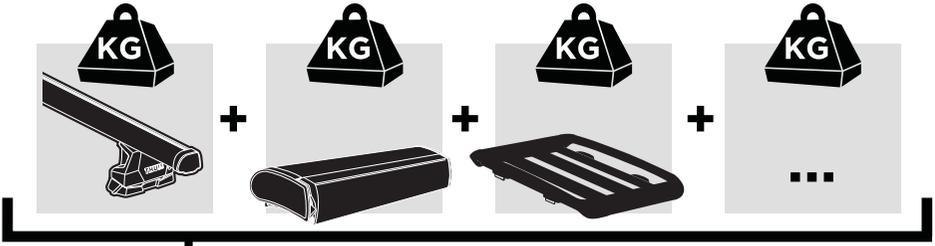


L2H2	MAX. 150KG
L3H2	MAX. 200KG
L4H2	MAX. 200KG

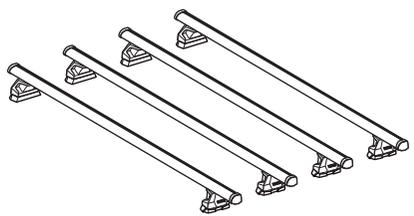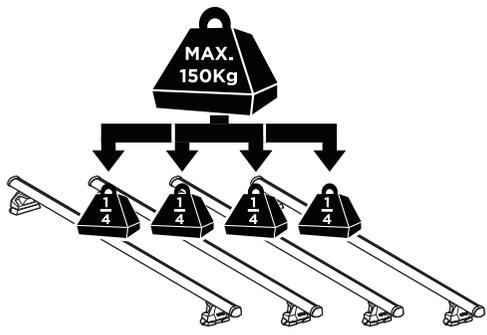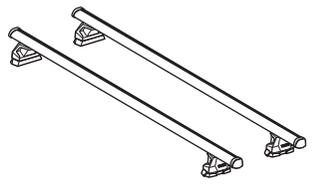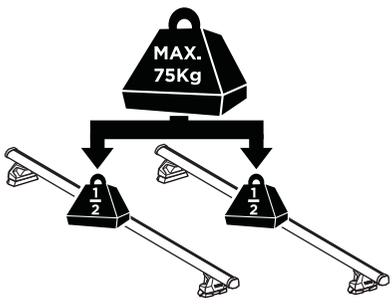






Standard

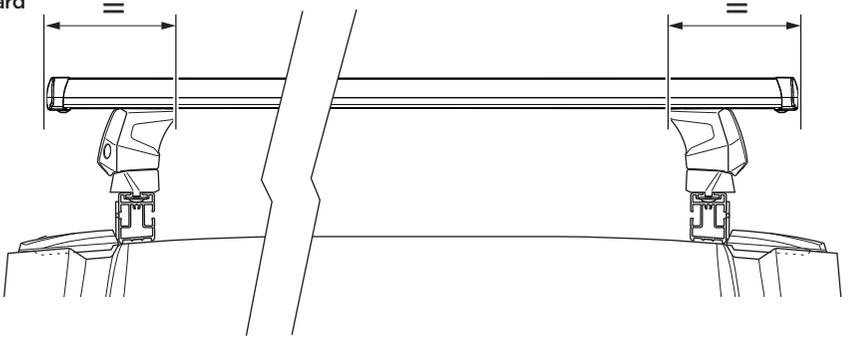



Thule Hullavator Pro

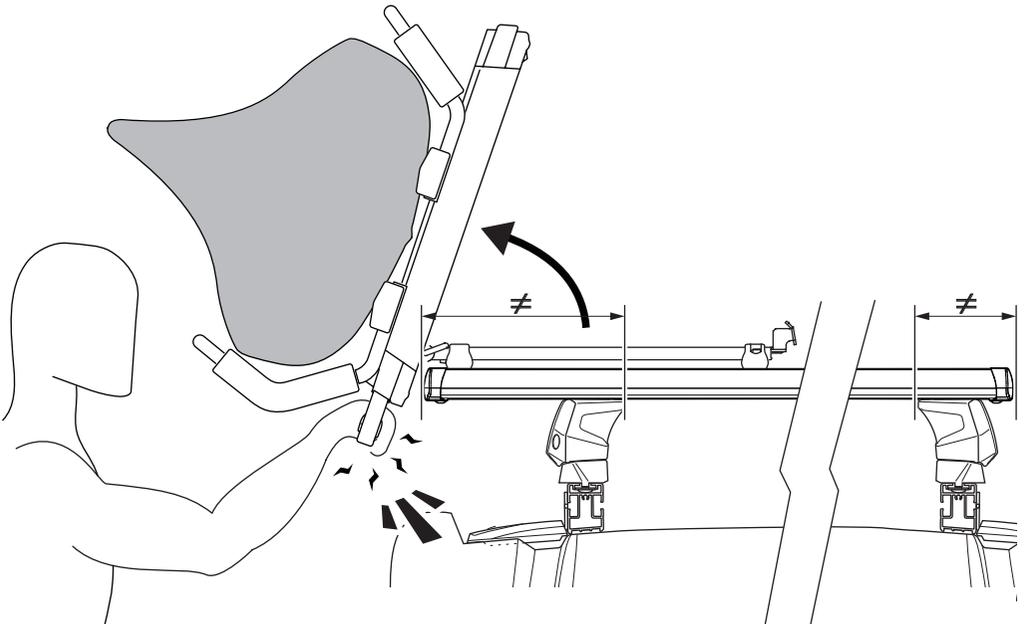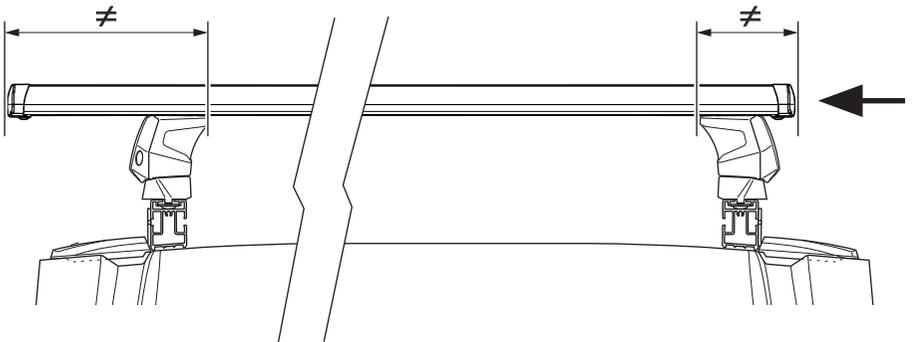


2 CONTENT

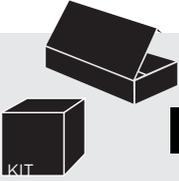




LOW 303121

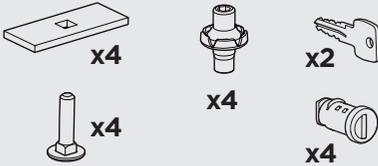

HIGH 303120

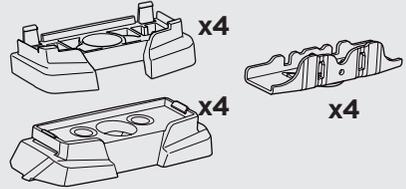

OR

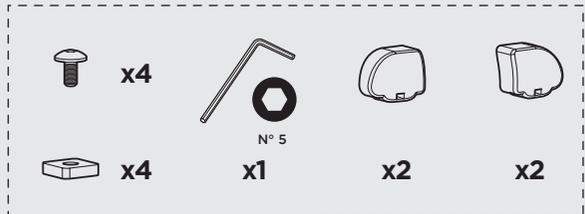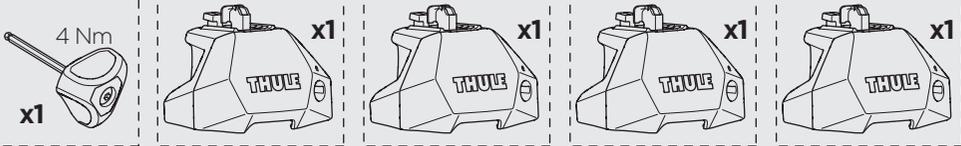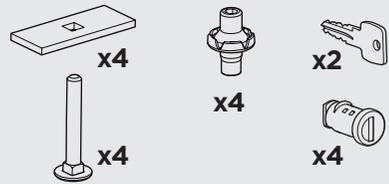


3 TOOLS




4 FITGUIDE

I

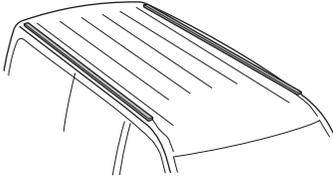

II

OR

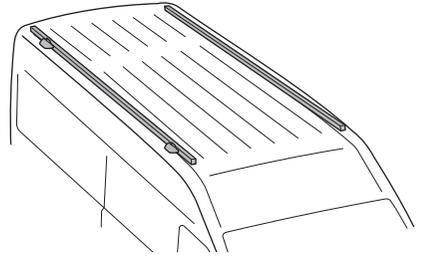





BRAND	MODEL	SIZE	INSTALLATION	ROOF TYPE
Volkswagen	California T5	-	I	Roof rail
Volkswagen	California T6	-	I	Roof rail
Volkswagen	Caravelle T5	-	I	Roof rail
Volkswagen	Caravelle T6	-	I	Roof rail
Volkswagen	Multivan T5	-	I	Roof rail
Volkswagen	Multivan T6	-	I	Roof rail
Volkswagen	Transporter T5	-	I	Roof rail
Volkswagen	Transporter T6	-	I	Roof rail
Volkswagen	Shuttle T5	-	I	Roof rail
Volkswagen	Shuttle T6	-	I	Roof rail
Fiat	Ducato	L2H2	II	Thule Smart Clamp System
Fiat	Ducato	L3H2	II	Thule Smart Clamp System
Fiat	Ducato	L4H2	II	Thule Smart Clamp System
Citroën	Jumper	L2H2	II	Thule Smart Clamp System
Citroën	Jumper	L3H2	II	Thule Smart Clamp System
Citroën	Jumper	L4H2	II	Thule Smart Clamp System
Peugeot	Boxer	L2H2	II	Thule Smart Clamp System
Peugeot	Boxer	L3H2	II	Thule Smart Clamp System
Peugeot	Boxer	L4H2	II	Thule Smart Clamp System
Opel	Movano >2022	L2H2	II	Thule Smart Clamp System
Opel	Movano >2022	L3H2	II	Thule Smart Clamp System
Opel	Movano >2022	L4H2	II	Thule Smart Clamp System

5 INSTALLATION KIT





1



I x4

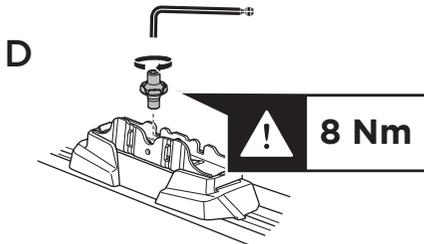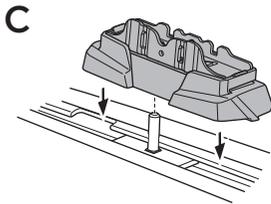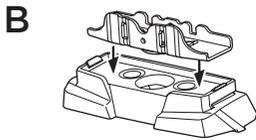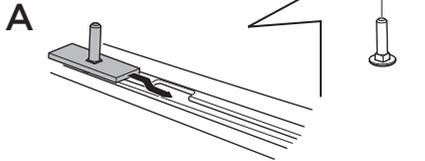


II x4

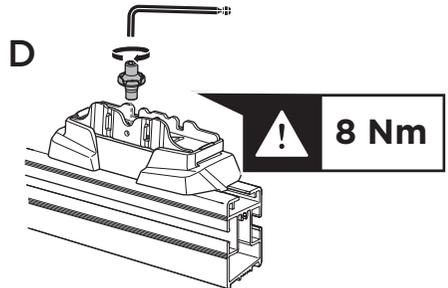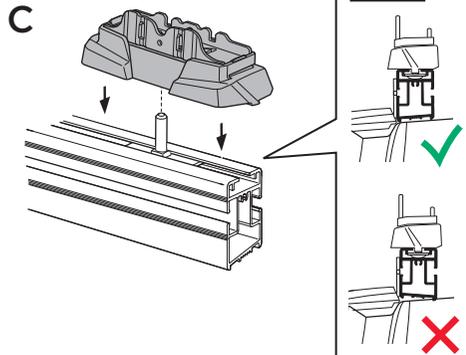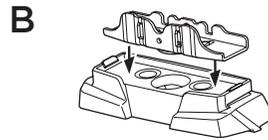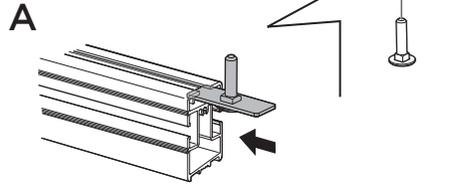


6 INSTALLATION ROOF RACK

1


x4

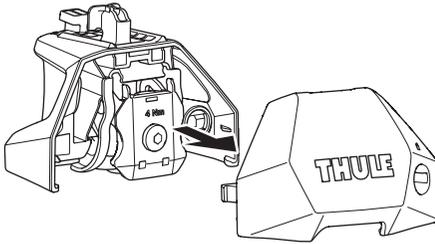




2




x2

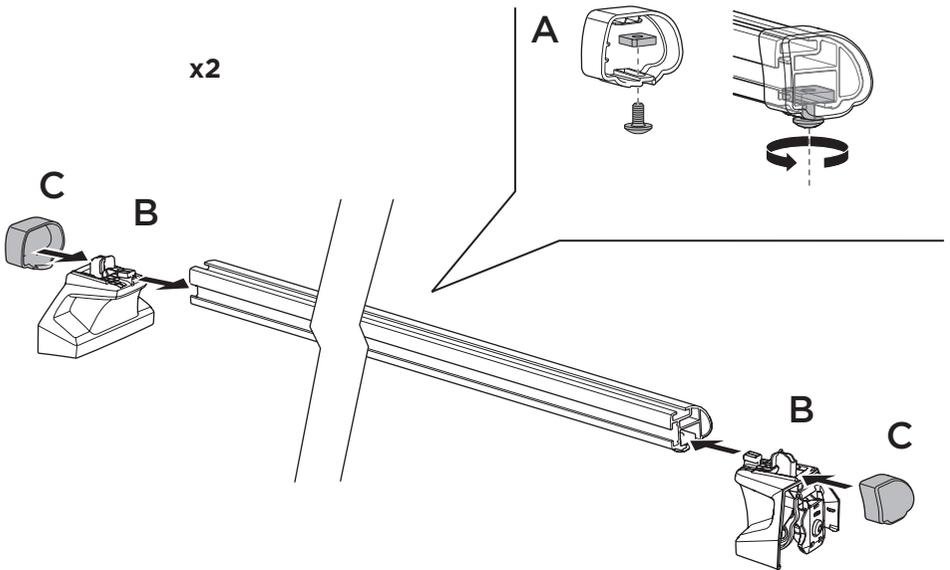

3


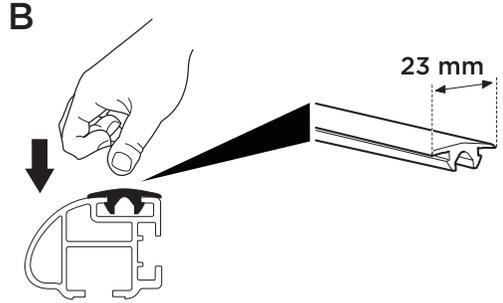
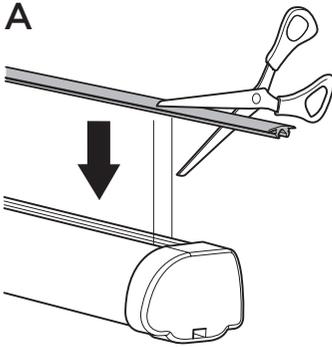



4

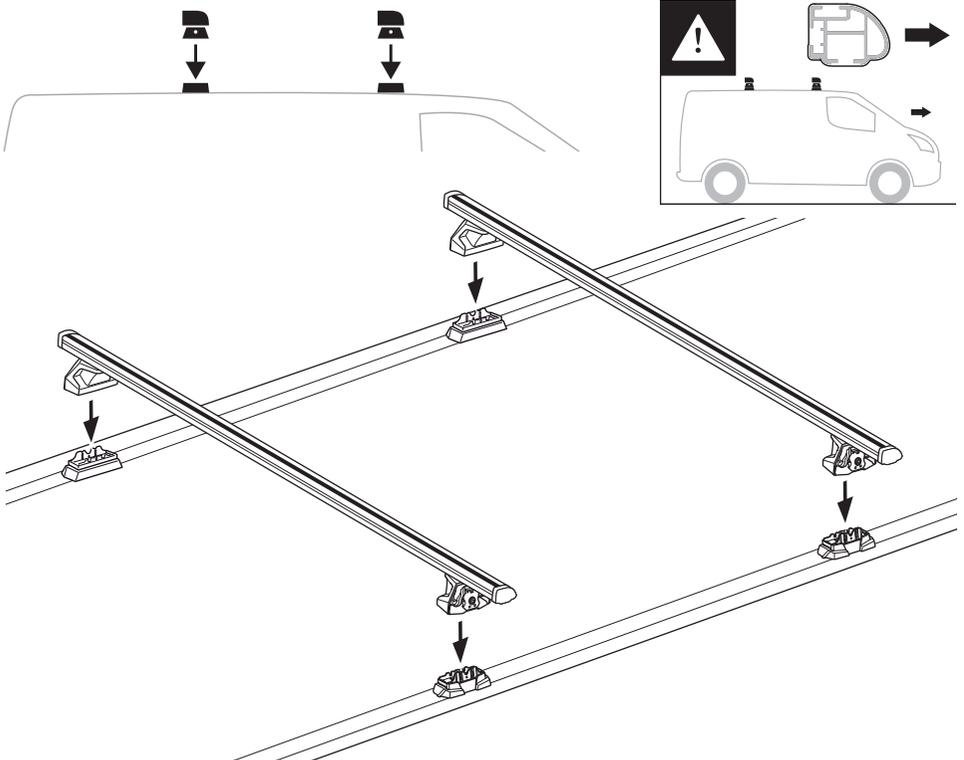


A

x4

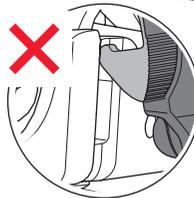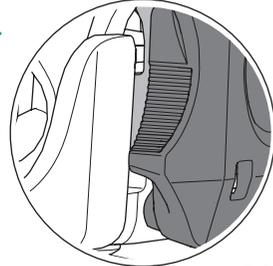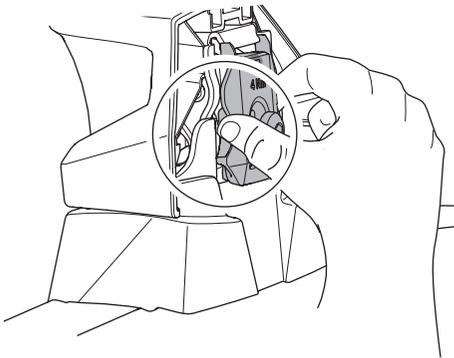
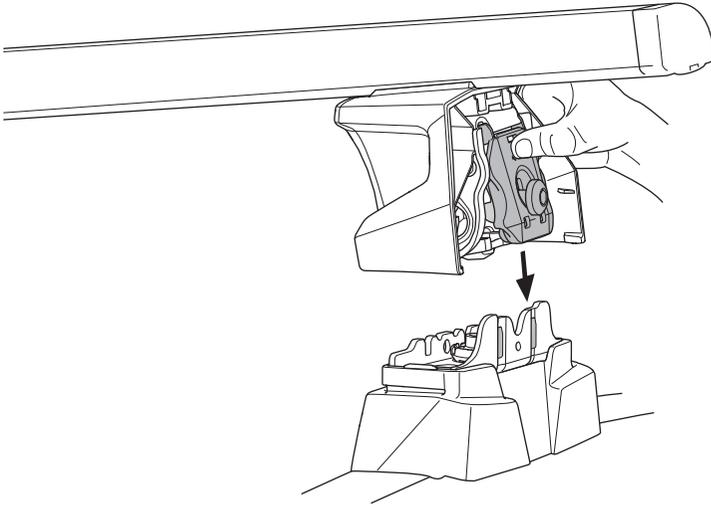


B

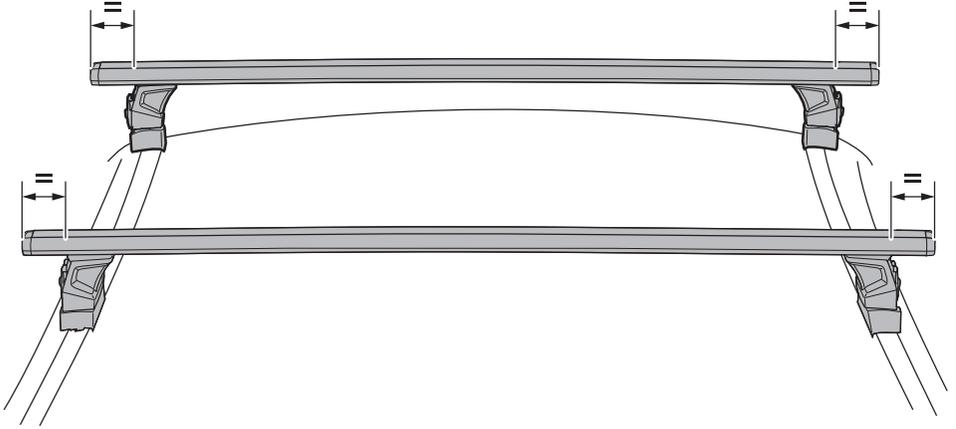


C


x4

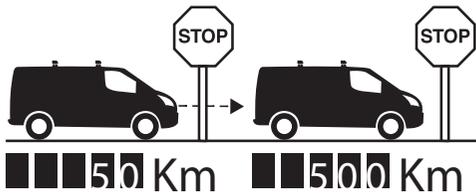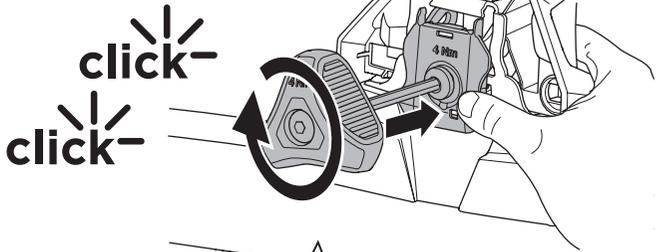


5

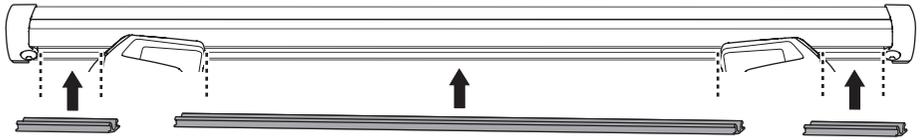

A

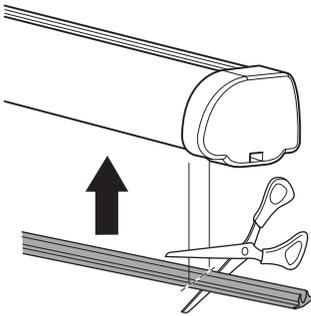


B

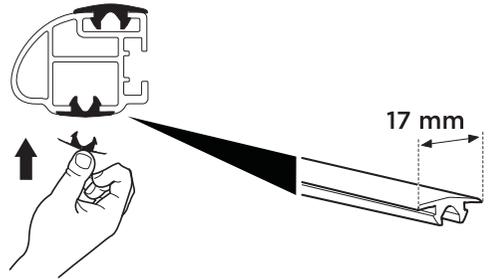


6




A

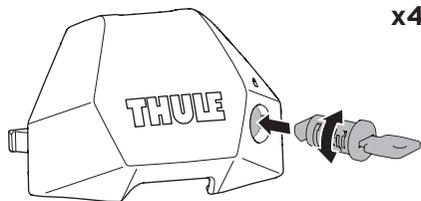


B

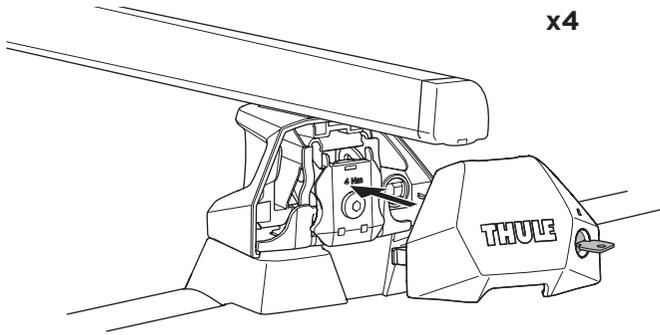

C

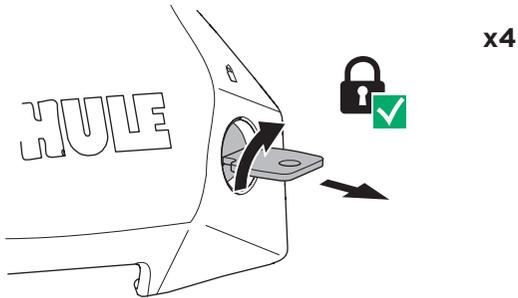



7

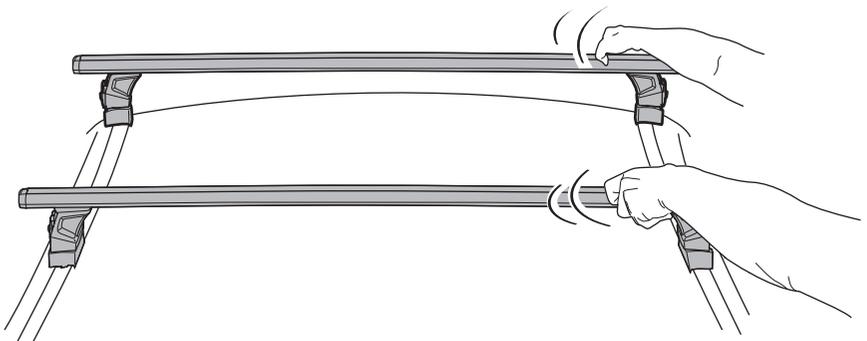





7 REMOVE ROOF RACK

1

4 Nm

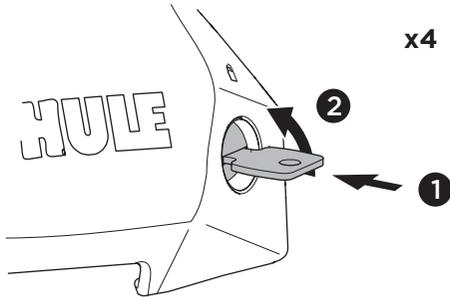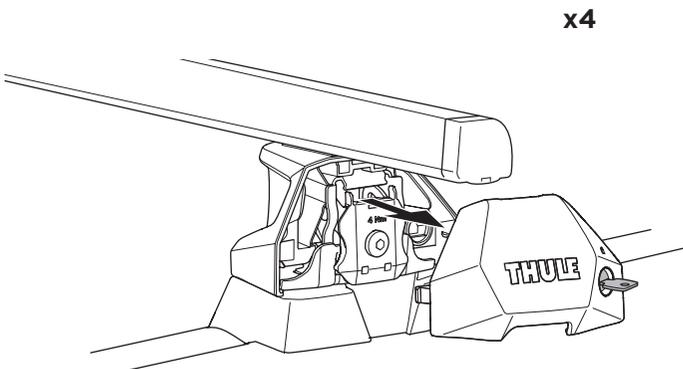**A****B**




C x4

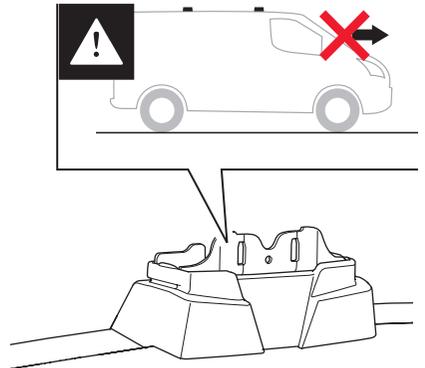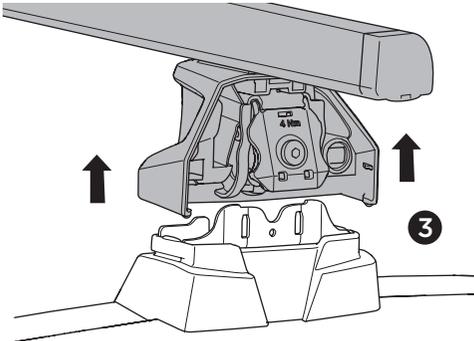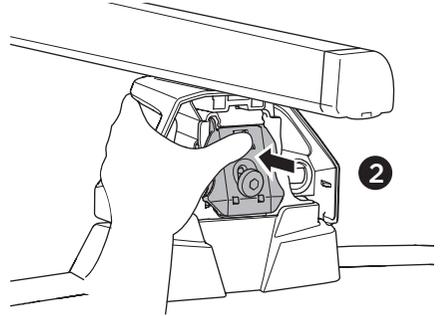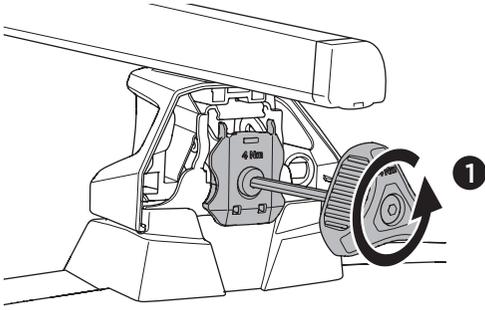

D



Thule Fixpoint Kit Cover - 710750

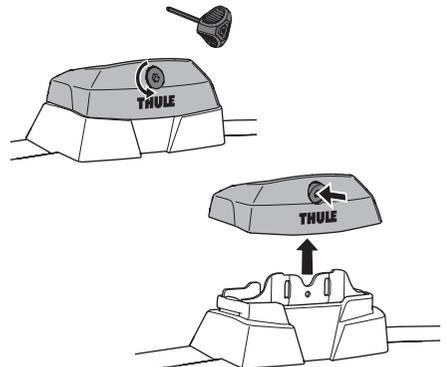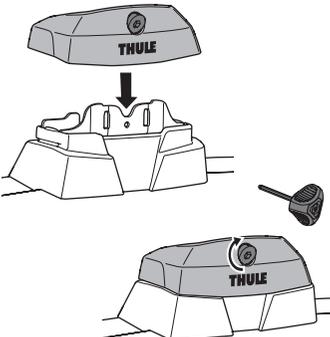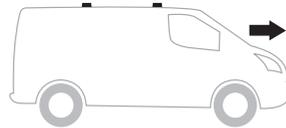

8 USE ROOF RACK

i

