



INSTALLATION

> Instructions

Awning Adapter Ford Transit/Tourneo Custom T 3200

301920/301921

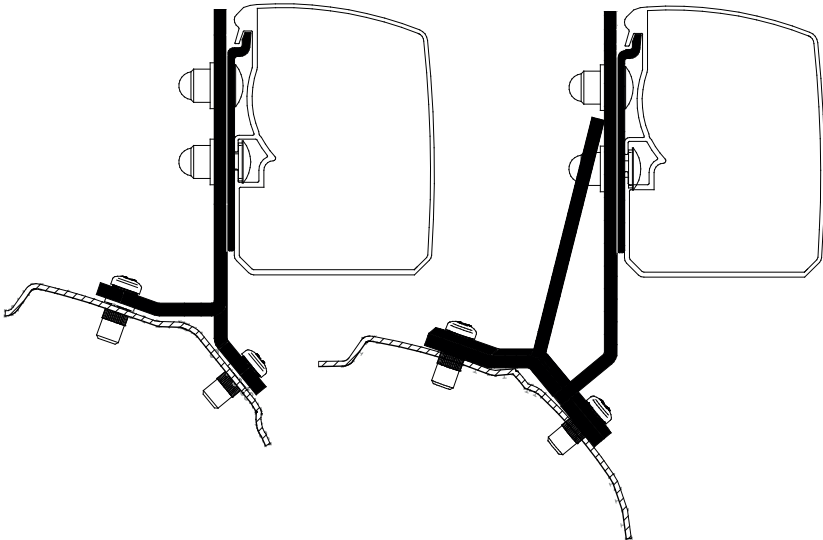

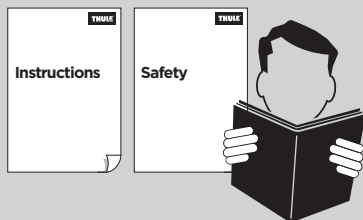

DE	Adapter - Bedienungsanleitung
NL	Adapter - Gebruikershandleiding
FR	Adaptateur - Instructions d'utilisation
IT	Adattatore - manuale utente
ES	Adaptador - manual de usuario
SV	Adapter - användarmanual
FI	Adapteri - käyttöohje
DA	Adapter - brugermanual
NO	Adapter - brukerhåndbok
PL	Adapter - instrukcja obsługi

1. WARNINGS & INFO **P 4**

Warnungen & Info / waarschuwingen & info / avertissements et informations / avvertimenti e informazioni / advertencias e información / varningar & info / varoitukset ja tiedot / advarsler og info / advarsler og info / ostrzeżenia i informacje

2. FIT GUIDE **P 5**

Anwendungstabelle / fitting tabel / table d'application / guida di adattamento / guía de aplicación / applikationstabel / sovellus taulukko / applikationstabel / applikasjonstabel / tabela aplikacji

3. CONTENT **P 6**

Inhalt / inhoud / contenu / contenuto / contenido / innehåll / sisältö / indhold / innhold / zawartość








4. TOOLS **P 6**

Werkzeuge / gereedschappen / outils / strumenti / herramientas / verktøy / työkalut / værktøjer / verktøy / narzędzia

5. INSTALLATION **P 7**

Installation / installatie / installation / installazione / instalación / installation / asennus / installation / installasjon / instalacja / indstillinger / innstillinger / ustawienia

1. WARNINGS & INFO

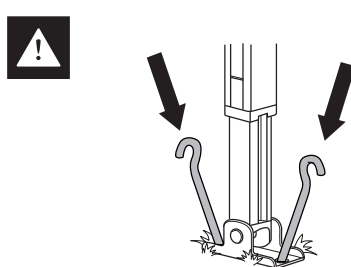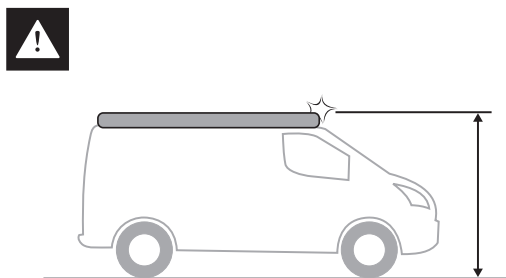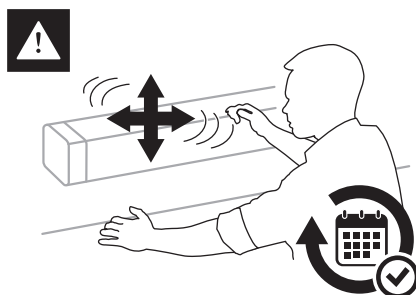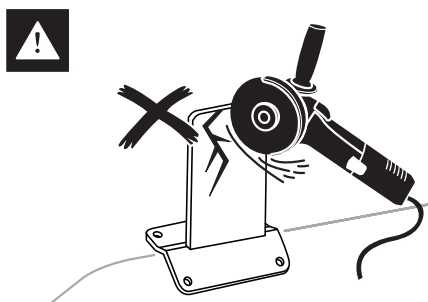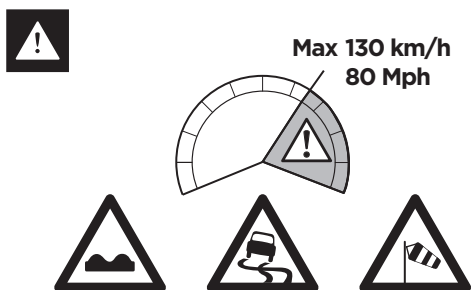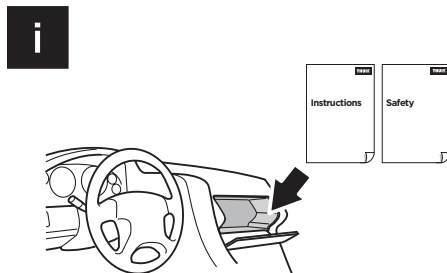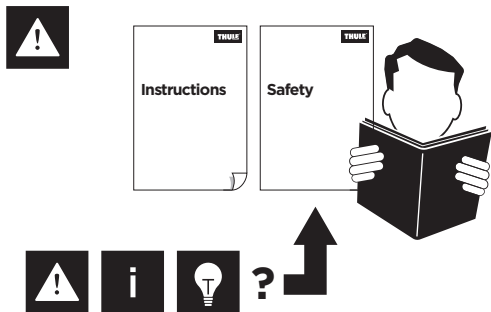

2. FITGUIDE

BRAND	MODEL	YEAR	ADAPTER	AWNING
Ford	Transit Custom L1H1 LHD	2013-	301920	T 3200 - 2.70 m
	Tourneo Custom L1H1 LHD			
	Transit Custom L1H1 RHD		301921	
	Tourneo Custom L1H1 RHD			

i

☒

RHD


☒

LHD

i

X		Y	
L1	4970 mm	H1	2000 mm
L2	5340 mm	H2	2360 mm

3. CONTENT



x4
M6 x18
DIN9021
A2



x4
M6
DIN985
A2



x8
M6 x 9 x 24
Blind rivet nut



x8
M6
SCHNORR
ZN



x4
M6 X 20
DIN603
A2



x2
19.5 x 15 x 2.5mm
Solo bolt plate
A2




x8
M6 x 16 mm
DIN7985 TX30
ZN



x4
M6
Nut cap




x4




x2

LHD

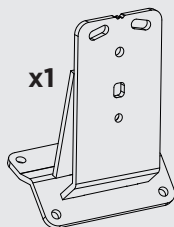


x1

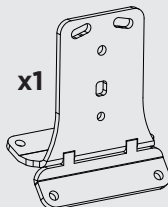


x1

RHD



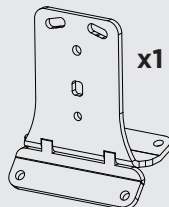


x1

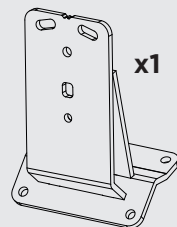


x1

4. TOOLS

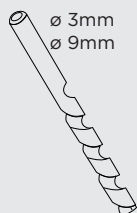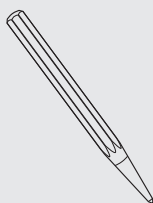


TX30

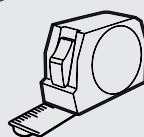


5. INSTALLATION




1

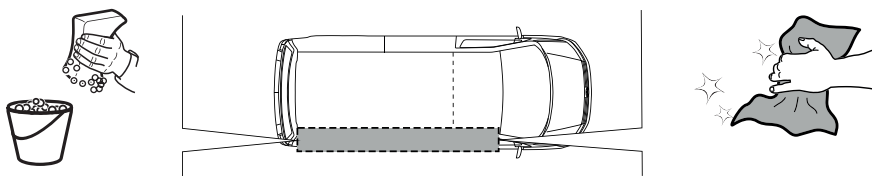


2




L1

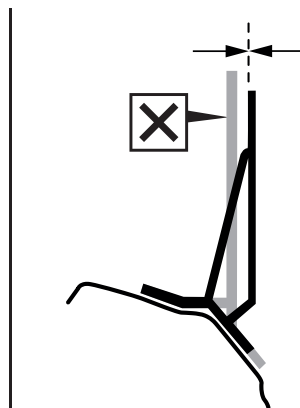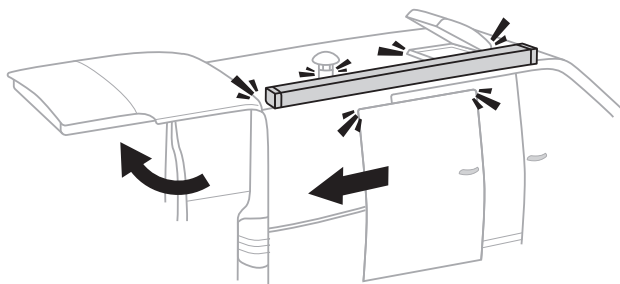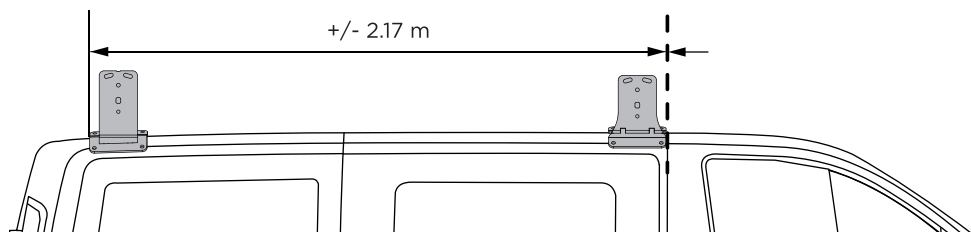


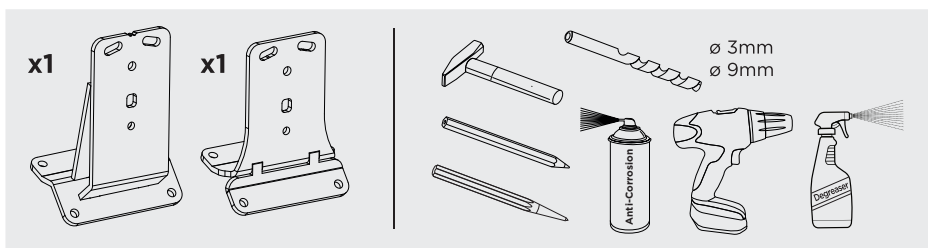


A

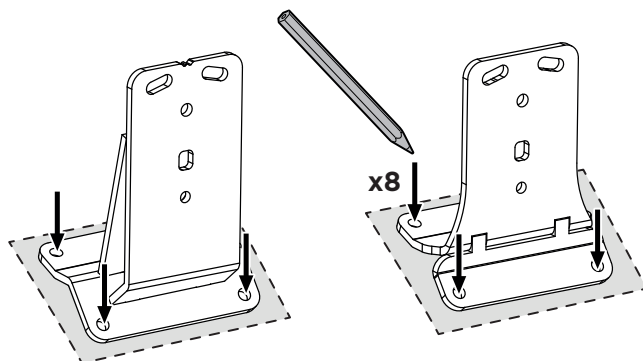


B

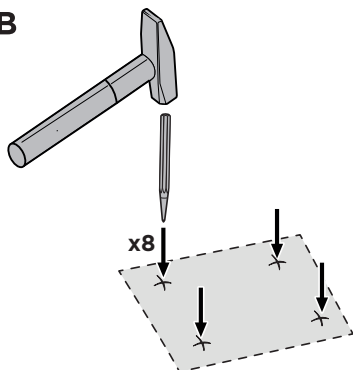


C

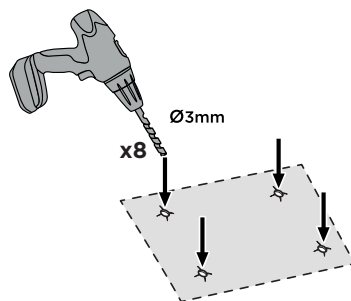

D

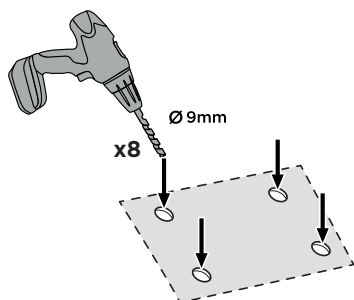



E

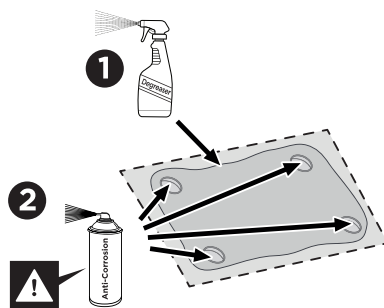


4




x8

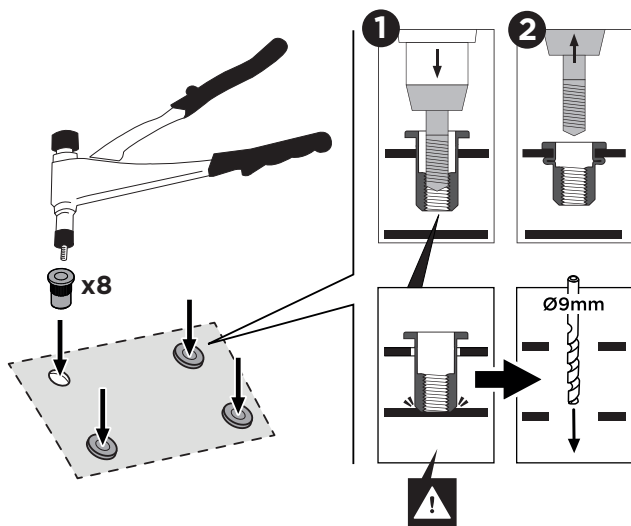

5




x1




x1




A

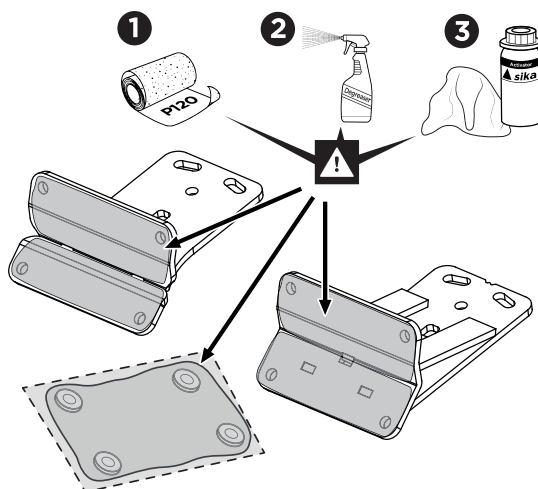


B

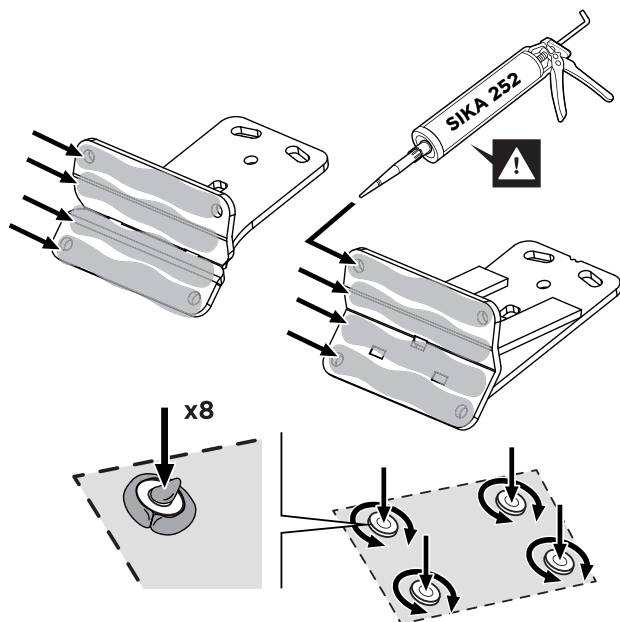


6

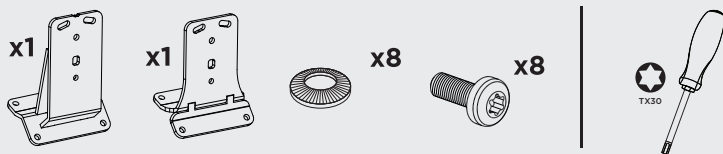


LHD

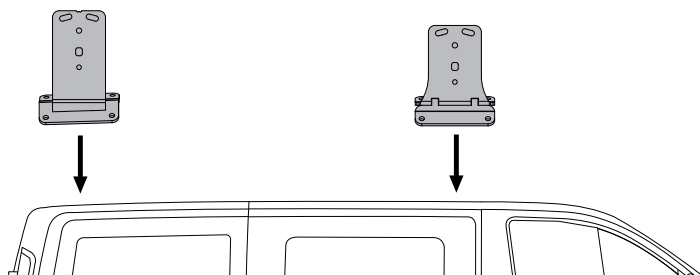


A

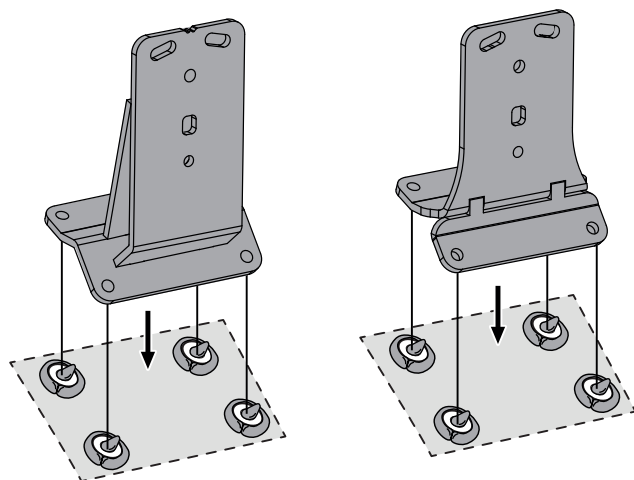




B

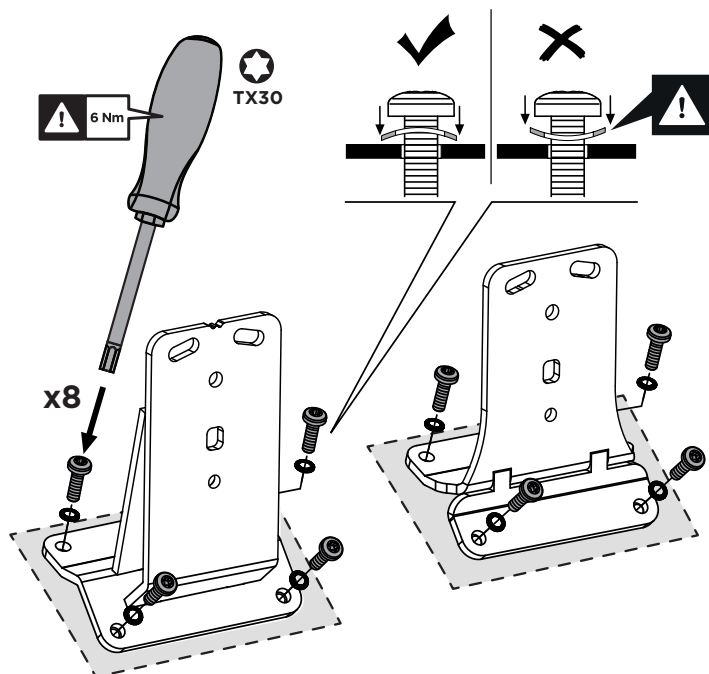


7

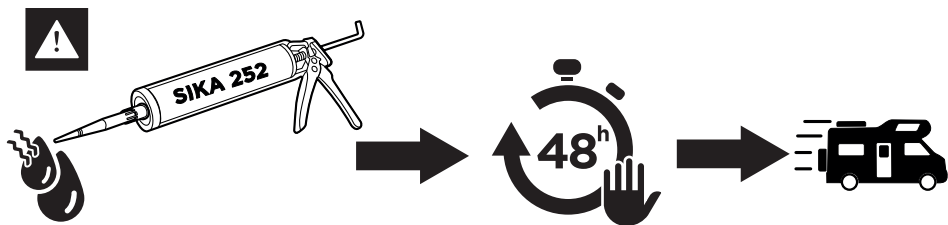

8

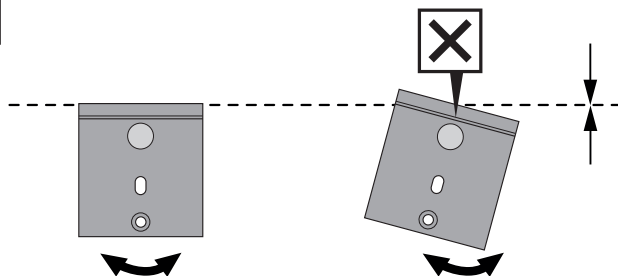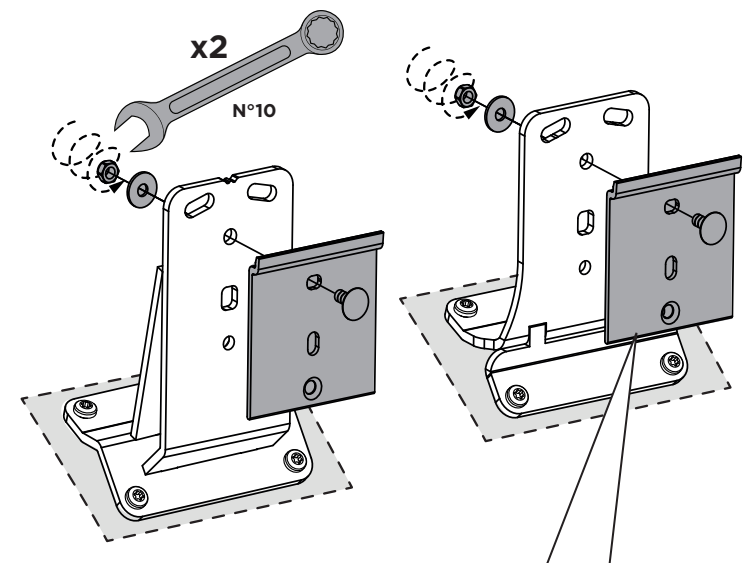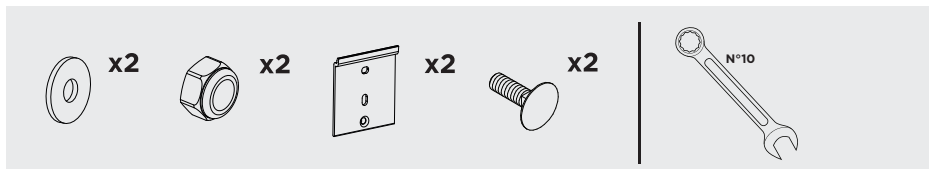


9



T 3200 - 2.70 m



x2

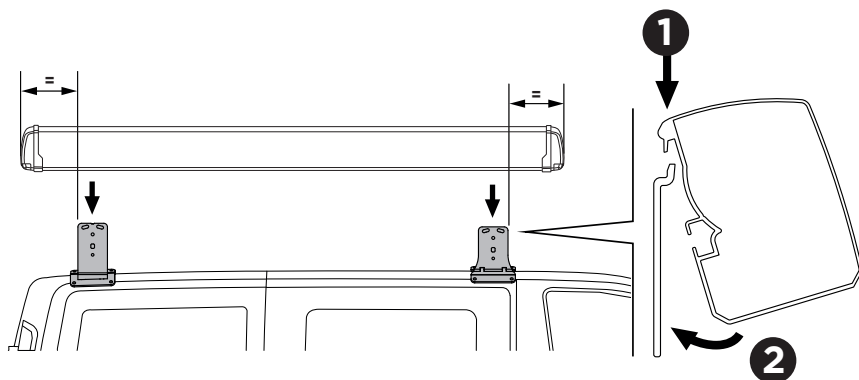


10



x2



x2

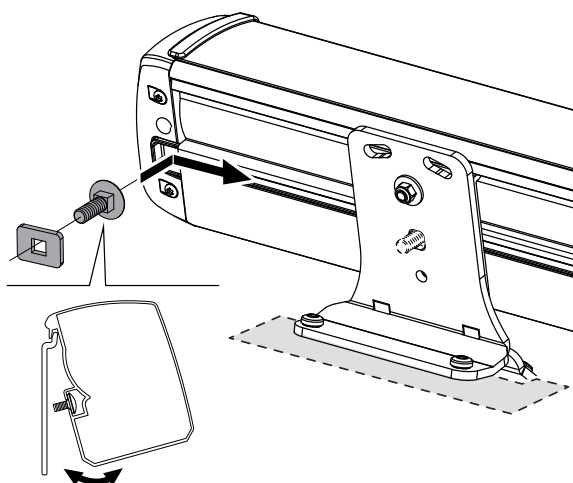

11




x2



x2




N°10

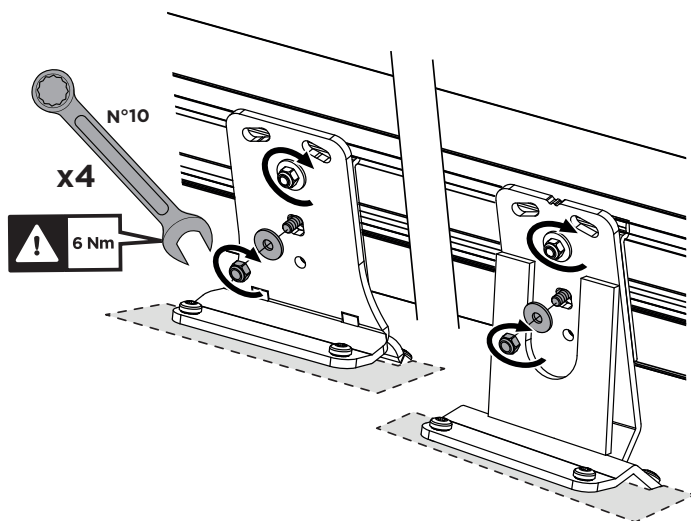

12



x4

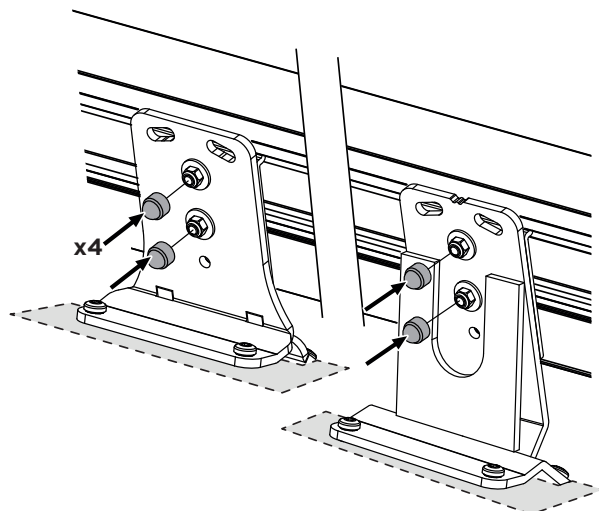

[illegible]



Thule NV, Kortrijkstraat 343 - BE 8930 Menen, BELGIUM

» PART OF THULE GROUP



infoRV@thule.com

© Thule Group 2020. All rights reserved.



www.thule.com

AD986-00